 


ULTRASlimline®

Tower Fan

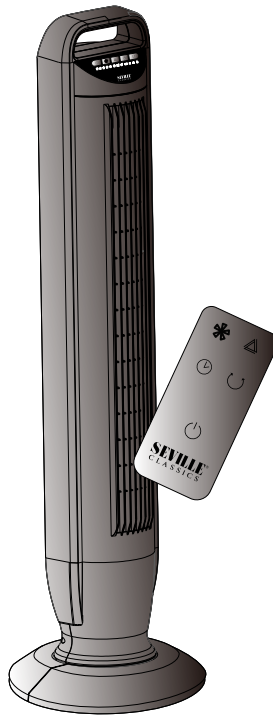

Instruction Manual

Model: EHF10201D/EHF10201W (with remote control)

Voltage: 120 V AC

Frequency: 60 Hz

Current: 0.5A

 
PLEASE READ AND SAVE THESE INSTRUCTIONS

© 2020 Seville Classics Inc.


Toll Free: 1-800-323-5565 or 1-310-533-3800

www.sevilleclassics.com


Parts List



 
A. Fan body

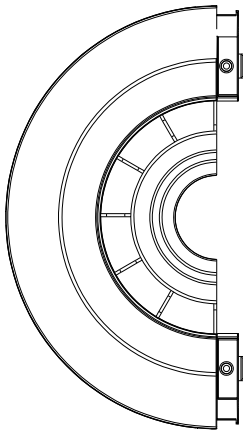

 
B. Base-front

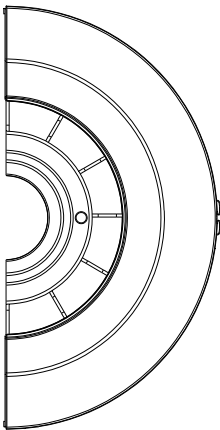

 
C. Base-back

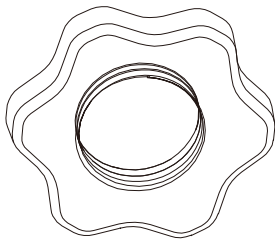

 D. Fan-body screw

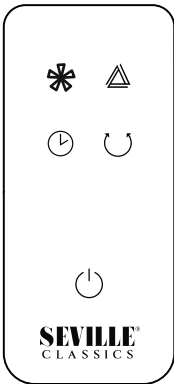

 
E. Remote control

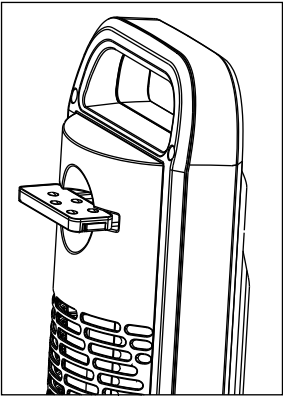

Remote location


Step 1

 Turn the base upside down. Firmly snap the BASE-FRONT (B) onto the BASE-BACK (C) by aligning the two holes onto the two posts.

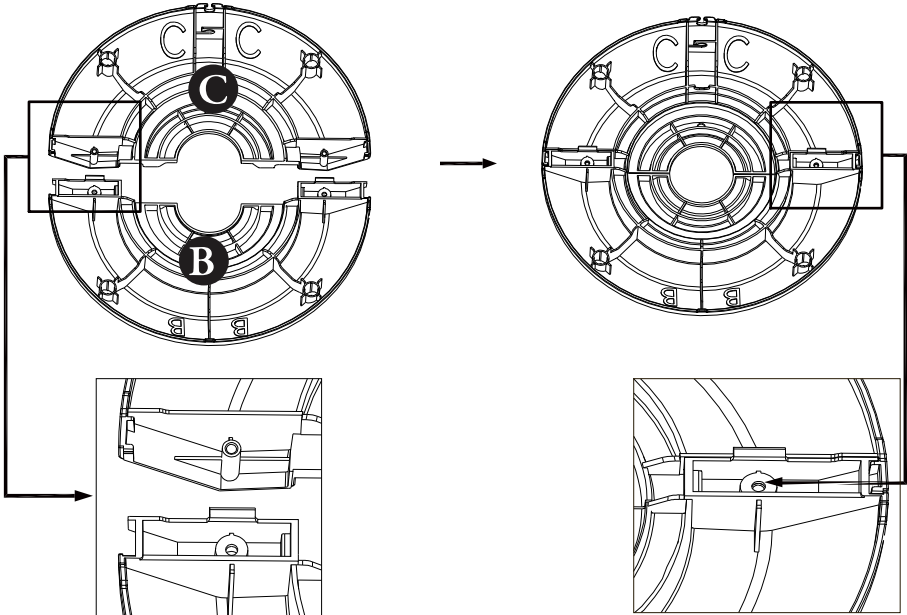

Step 2

 Remove the FAN-BODY SCREW (D) from the center post on the bottom of the FAN BODY (A).

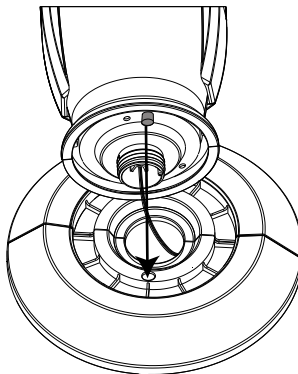


Fan Assembly

Step 3


Pass the power cord through the center hole of the BASE.

 Align the BASE front with the FAN front. Insert the posts on the fan body into the holes on the top of the BASE. It will only go one way. Attach the **FAN-BODY SCREW (D)** through the hole on the bottom of the base and securely tighten.

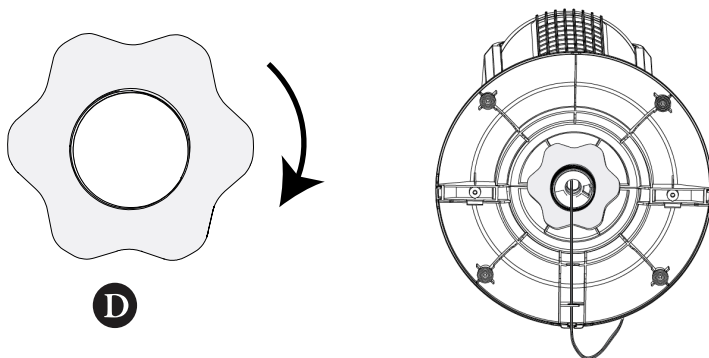

Step 4

 Run the power cord through the guide on the bottom of the BASE-BACK (C) by tucking the cord under the tabs. Set fan upright on the base and it is ready for use.

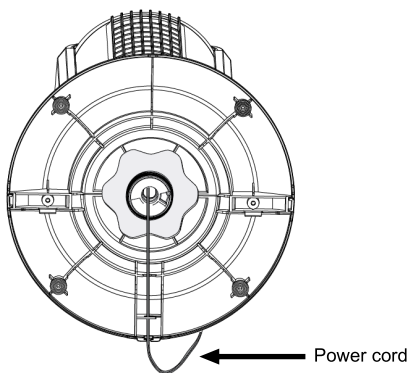

See further instructions on use, care and safety.

 
Control Panel



Push buttons to activate features



ON / OFF: Turns fan ON & OFF



Speed Selection: Allows five different speed settings



Low



Medium Low



Medium



Medium High



High



Timing Selection: There are 15 settings, in 1/2 hour increments. Time increases with each push of the button. 1/2 hour, 1 hour, 1-1/2, 2 hours etc. to a maximum time setting of 7 - 1/2 hours.

The LED Indicators on the control panel are marked 0.5 h, 1 h, 2h, 4h (h for Hour). The total of the lit LEDs is the total time period.



Selection of Wind: Allows for three different wind modes



Normal Wind:
The Normal Wind mode is simply the Low, Medium Low, Medium, Medium High, and High fan speed settings.

Control Panel



Sleeping Wind :
The Sleeping Wind allows you to set a speed and that speed will gradually lower to Low. The air flows as an evening breeze slowing to a light night breeze.

Low Sleeping Wind :
The air flow remains at Low.

Medium Low Sleeping Wind:
The air flow begins at medium low for a half an hour and then drops to Low.

Medium Sleeping Wind :
The air flow begins with medium speed for a half hour then drops to medium low speed for a half an hour and finally drops to Low.

 
Medium High Sleeping Wind:
The air flow begins with medium high speed for a half hour then drops to medium speed for a half an hour, then Medium Low for a half hour and finally drops to Low.

High Sleeping Wind :
The air flow begins with High speed for a half hour then drops to Medium speed for a half hour, then to medium low for a half an hour and finally drops to Low.




Natural Wind:
The Natural Wind mode automatically selects wind speed randomly as you would find outdoors. The speeds are graphically described on the next page.


Low Natural Wind-This wind setting will repeat the following 80 second wind cycle with Low being the most common.

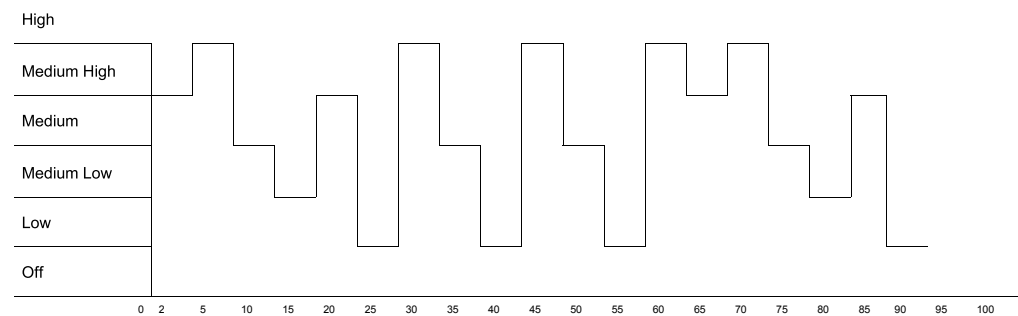

 
Medium Low Natural Wind-This wind setting will repeat the following 80 second wind cycle with Low being the most common.

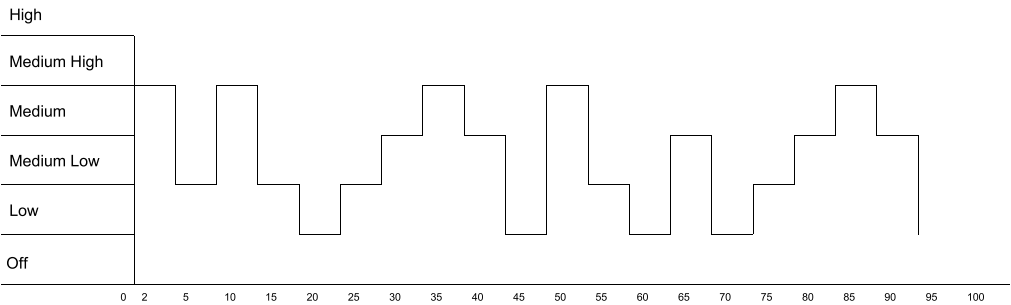

 Medium Natural Wind - The wind setting will repeat the following 80 second wind cycle with Medium being the most common.


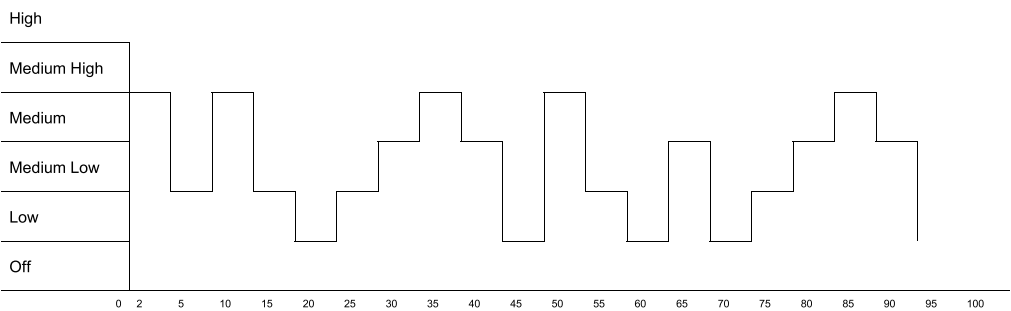


 Low Natural Wind-This wind setting will repeat the following 80 second wind cycle with Low being the most common.

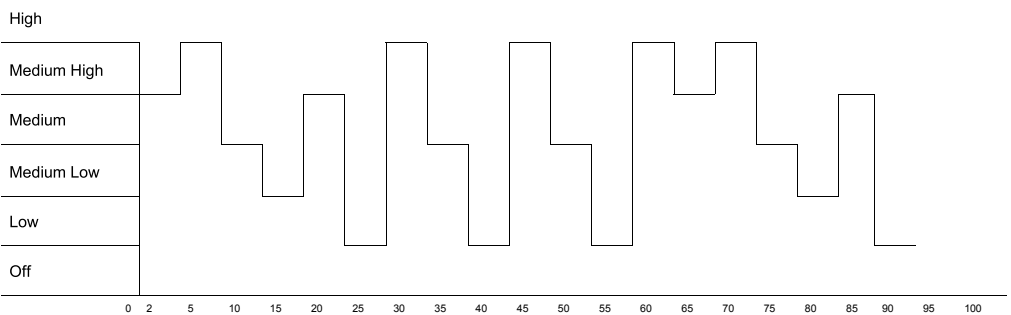

Control Panel

  High Natural Wind - The wind settings will repeat the following 80 second wind cycle with High being the most common.

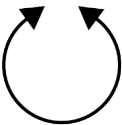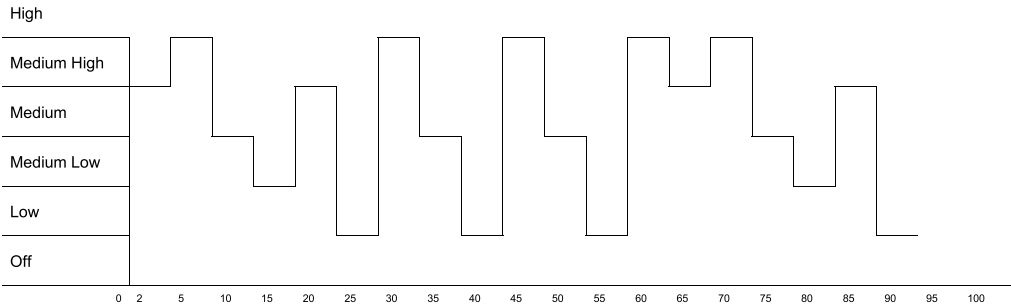

Oscillating Selection:
This function starts and stops the oscillation of the fan.

Remote Control

To use your remote, point the top end directly at the front of the fan aim at the small window just below the control panel on the top of the fan.

Functions :



 
Power Button - Turns fan ON and OFF.



Speed Mode - Changes wind speed from Low to Medium Low to Medium to Medium High to High.



Wind Mode - Changes mode from Normal Wind to Natural Wind to Sleeping Wind.

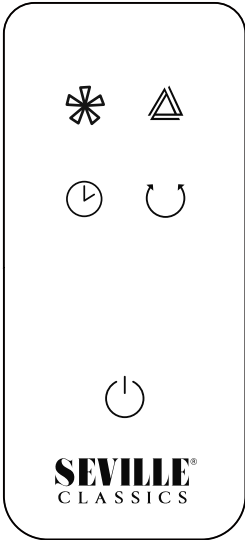

Front of remote

Remote Control

 


Timer - Changes the time the fan is on from .5 hr. up to a maximum of 7.5 hr., in .5 hr. increments.



Oscillation - Turns the fan oscillation ON or OFF.

- The remote control operates on 1 pc cell battery.
- Remove the battery if the remote will not be used for an extended time period.
- Install the 1 pc cell battery shown.

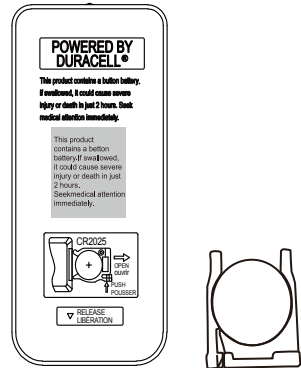

Back of remote

Note

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.



**WARNING: CHEMICAL BURN HAZARD.
KEEP BATTERIES AWAY FROM CHILDREN.
SEE MANUAL.**

1. Warning - Keep Batteries Out of Reach of Children

2. Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
3. If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
4. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw and other mechanical fastener is tightened.
Do not use if compartment is not secure.
5. Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
6. Tell others about the risk associated with button batteries and how to keep their children safe. Clean the battery contacts and also those of the devices prior to battery installation if product is left unused for a long time.

Important Safety Instructions



READ & SAVE THESE INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.

1. The fan is only for intended use as described in this manual. Other use not recommended in manual may cause fire, electrical shock or injury to persons.
2. This fan is intended for personal use **INDOORS**. It is **NOT** designed for commercial, industrial or outdoor use. **DO NOT USE FAN OUTDOORS**.
3. Do **NOT** place fan in or near a window, to avoid contact with the outdoor elements and to avoid exposure to direct sunlight. Rain may create an electrical hazard. Do **NOT** immerse fan, plug or cord in water or liquid.

Do **NOT** spray with water or liquid.

4. Operate fan on a dry, level surface.
5. This appliance has a polarized plug (one blade is wider than the other).

This plug is designed to reduce the risk of shock by only fitting into a polarized outlet one way. If the plug does not fully fit in an outlet, try reversing the plug. If it still does not fit, contact a qualified electrician.

Do not attempt to **OVERRIDE** this safety feature.

Important Safety Instructions

6. A loose plug/outlet connection may cause overheating and distortion of the plug. Contact a qualified electrician to replace a loose or worn outlet.
7. Always turn the fan off and unplug it when transporting it to another location and before cleaning.
8. When disconnecting fan, turn it off, grip the plug firmly and pull it from the wall outlet. Never pull it out by the cord.
9. Do NOT operate the fan if the cord or plug is damaged, the unit is malfunctioning, has been dropped or is damaged in any way.
10. Do NOT operate your fan in the presence of flammable and/or explosive fumes.
11. Do NOT place the fan or any of its parts near an open flame, cooking appliance or heater.
12. Do NOT operate the fan if housing has been removed or damaged.
13. Avoid contact with fan's moving parts.
14. Close supervision is necessary when operating fan near children.
15. Do NOT mount fan on a wall or hang it from the ceiling.
16. Use of attachments of any kind is NOT recommended.
17. Do NOT suitable for use with solid-state speed control.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Storage & Cleaning

Storage & Cleaning

1. To clean your fan, first turn it OFF and UNPLUG it.
2. Use a soft cloth to wipe the housing. DO NOT use water, gasoline, polish, or any chemical solution. DO NOT soak or immerse fan in water or liquid.
3. Use a vacuum cleaner (narrow hose attachment or with the brush attachment) to clean all intake and exhaust vents. This will remove dirt and lint that may accumulate over time. DO NOT ATTEMPT TO TAKE FAN APART.
4. We recommend taking the fan outdoors and spraying with canned compressed air to remove dust.
5. Store in a dry place away from excessive heat and direct sunlight.

For ULTRASlimline™ Tower Fan Parts & Accessories, please visit:
www.sevilleclassics.com

Customer Service Information

Telephone: (604) 946-8929 or (800) 745-5656
Hours: 8:30 AM – 4:30 PM (PST)
Email: support@vancouverclassics.com
Homepage: www.sevilleclassics.com

PLEASE READ AND SAVE THESE INSTRUCTIONS

© 2020 Seville Classics Inc.

Toll Free: 1-800-323-5565 or 1-310-533-3800

www.sevilleclassics.com