

Control Panel



Power Selection: Turns fan ON & OFF



Timer Selection: Set a timer from 1-12 hours in 1 hour increments. Time increases with each tap of the icon: 1 hour, 2 hours, 3 hours 4 hours etc. The LED Indicators on the control panel are marked 1h, 2h, 3h (h for Hour). The total of the lit LEDs is the total time period.



Speed Selection: Allows nine different speed settings.



Oscillation: Tap the icon to start and stop the oscillation of the fan.



Light Function: Tap the icon to cycle through the three brightness levels: 100% / 67% / 33% / OFF.



Breeze Selection: Allows for three different breeze modes and AUTO.



Constant Breeze: The Constant Breeze mode offers an even fan speed.



Eco Sleeping Breeze: The Sleeping Breeze mode allows you to set a speed that will gradually lower to Eco. The airflow will begin at the selected speed and drop to the next lowest speed before lowering to Eco (speed 1).



Natural Breeze Modes: The Natural Breeze mode automatically selects wind speed randomly as you would find outdoors. The speeds are graphically described on the reverse side.



AUTO Mode: The fan speed adjusts automatically based on the ambient temperature; it increases as the temperature rises and decreases as the temperature cools. When AUTO is flashing, press the Constant Breeze/Speed Selection icon (✱) to set the automatic shutdown temperature.

 
Customer Service Information

Seville Classics, Inc.


Telephone: (800) 323-5565, Fax: (310) 533-3899, Hours: 8:30 AM – 4:30 PM (PST)

Email: Support@SevilleClassics.com, Online Store: www.SevilleClassics.com


Natural Wind Breeze Modes



 
1st level natural wind operation pattern diagram



 
2nd level natural wind operation pattern diagram



 
3rd level natural wind operation pattern diagram



 
4th level natural wind operation pattern diagram



 5th level natural wind operation pattern diagram



 
6th level natural wind operation pattern diagram



7th level natural wind operation pattern diagram




 8th level natural wind operation pattern diagram



9th level natural wind operation pattern diagram

 Remote Control for Tower Fan

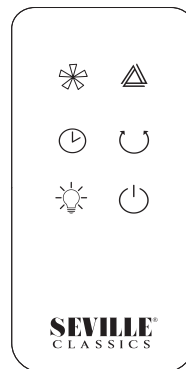

Power Button

Turns fan ON and OFF.



Speed Mode

Changes wind speed from Eco to 2, 3, 4, 5, 6, 7, 8, 9.



Breeze Mode

Changes mode from Constant Breeze to Natural Breeze to Sleep Breeze.



Timer

Changes the time the fan is on from 1 hr. up to a maximum of 12 hr., in 1 hr. increments.



Oscillation

Turns the fan oscillation ON or OFF.



Light Function

Cycle through three brightness levels: 100% / 67% / 33% / OFF.



- The remote control operates on 1 pc cell battery (CR2025, 3V).
- Remove the battery if the remote will not be used for an extended time period.
- Install the 1 pc cell battery shown.

Customer Service Information

Seville Classics, Inc.

Telephone: (800) 323-5565, Fax: (310) 533-3899, Hours: 8:30 AM – 4:30 PM (PST)

Email: Support@SevilleClassics.com, Online Store: www.SevilleClassics.com