



ULTRASlimline®

Tower Fan with Light



Instruction Manual

MODEL #: EHF10143B (with remote control)

Voltage: 120V

Frequency: 60Hz

Power: 36W

Motor: 24V DC

Class B



Customer Service
Support@SevilleClassics.com
PLEASE READ AND SAVE THESE INSTRUCTIONS



Important Safety Instructions



**WARNING: CHEMICAL BURN HAZARD.
KEEP BATTERIES AWAY FROM CHILDREN.
SEE MANUAL.**

- 1. Warning - Keep Batteries Out of Reach of Children
- 2. Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- 3. If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
- 4. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw and other mechanical fastener is tightened.
Do not use if compartment is not secure.
- 5. Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- 6. Tell others about the risk associated with button batteries and how to keep their children safe. Clean the battery contacts and also those of the devices prior to battery installation if product is left unused for a long time.
- 7. This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.



WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.
- If the battery compartment (if applicable) does not close securely, stop using the product and keep it away from children
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention



Important Safety Instructions

"WARNING"

Containing Replaceable Button Cell or Coin Batteries

1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. Button cell battery type: CR2025, 1pc, 3V.
5. The nominal battery voltage 3V,
6. Non-rechargeable batteries are not to be recharged.
7. Do not force discharge, recharge, disassemble, heat above (manufacturer's 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
8. Ensure the batteries are installed correctly according to polarity (+ and -)."
9. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
10. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
11. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
12. All persons have a responsibility to properly dispose of batteries.
13. Be sure to separate batteries from household garbage. Never place batteries in any curbside collection carts because they can overheat, explode, and cause fires.
14. Batteries can be dropped off at designated battery disposal facilities. Please search online for local collection sites that will take rechargeable batteries.
15. Batteries can be dangerous if mishandled. Handle batteries with care. Keep out of reach of children. Keep batteries away from combustible materials. Avoid storing batteries at extreme temperatures. Do not dispose of in fire or heat. Do not puncture, damage, or disassemble. Do not mix fresh batteries and new batteries.
16. Replaceable Button Cell or Coin Batteries must be recycled, not thrown away.
17. This battery contains toxic materials whose injection into ecosystems may cause harm. When added to landfills, the toxic materials may enter the local groundwater system and propagate through the food chain in various ways, causing damage to the environment.

Important Safety Instructions



READ & SAVE THESE INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury.

1. The fan is only for intended use as described in this manual. Other use not recommended in manual may cause fire, electrical shock or injury to persons.
2. This fan is intended for personal use **INDOORS**. It is **NOT** designed for commercial, industrial or outdoor use. **DO NOT USE FAN OUTDOORS**.
3. Do **NOT** place fan in or near a window, to avoid contact with the outdoor elements and to avoid exposure to direct sunlight. Rain may create an electrical hazard. Do **NOT** immerse fan, plug or cord in water or liquid. Do **NOT** spray with water or liquid.
4. Operate fan on a dry, level surface.
5. This appliance has a polarized plug (one blade is wider than the other). This plug is designed to reduce the risk of shock by only fit into a polarized outlet one way. If the plug does not fully fit in an outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. Do not attempt to **OVERRIDE** this safety feature.
6. A loose plug /outlet connection may cause overheating and distortion of the plug. Contact a qualified electrician to replace a loose or worn outlet.
7. Always turn the fan off and unplug it when transporting it to another location and before cleaning.
8. When disconnecting fan, turn it off, grip the plug firmly and pull it from the wall outlet. Never pull it out by the cord.
9. Do **NOT** operate the fan if the cord or plug is damaged, the unit is malfunctioning, has been dropped or is damaged in any way.
10. Do **NOT** operate your fan in the presence of flammable and/or explosive fumes.
11. Do **NOT** place the fan or any of its parts near an open flame, cooking appliance or heater.
12. Do **NOT** operate the fan if housing has been removed or damaged.
13. Avoid contact with fan's moving parts.
14. Close supervision is necessary when operating fan near children.
15. Do **NOT** mount fan on a wall or hang it from the ceiling.
16. Use of attachments of any kind is **NOT** recommended.
17. Do **NOT** suitable for use with solid-state speed control.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

19. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.
20. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
21. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
22. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.
23. The important safety instructions for a fan shall include the signal word "WARNING" and the following or the equivalent: "To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer)."
24. The fan shall not be modified by users, such as by adding supplemental filters to fans not intended to be used for air cleaning purposes.

 
Storage & Cleaning

1. To clean your fan, first turn it OFF and UNPLUG it.
2. Use a soft cloth to wipe the housing. DO NOT use water, gasoline, polish, or any chemical solution. DO NOT soak or immerse fan in water or liquid.
3. Use a vacuum cleaner (narrow hose attachment or with the brush attachment) to clean all intake and exhaust vents. This will remove dirt and lint that may accumulate over time. DO NOT ATTEMPT TO TAKE FAN APART.
4. We recommend taking the fan outdoors and spraying with canned compressed air to remove dust.
5. Store in a dry place away from excessive heat and direct sunlight.


Parts List




A. Fan Body

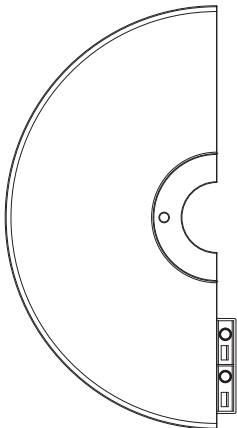

 
B. Front Base

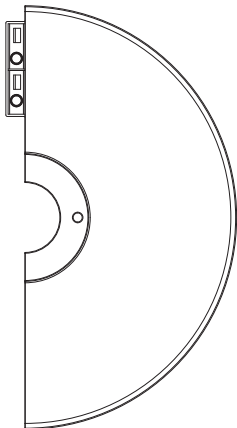

 
C. Back Base

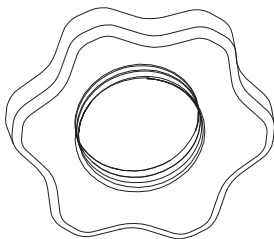

 D. Body Screw

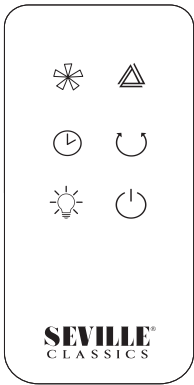

 E. Remote Control

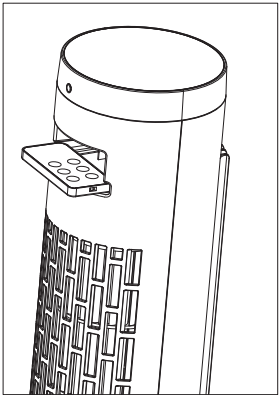


Remote location

Fan Assembly


STEP 1

 Turn the base upside down. Firmly snap the **FRONT BASE (B)** onto the **BACK BASE (C)** by aligning the two holes onto the two posts.

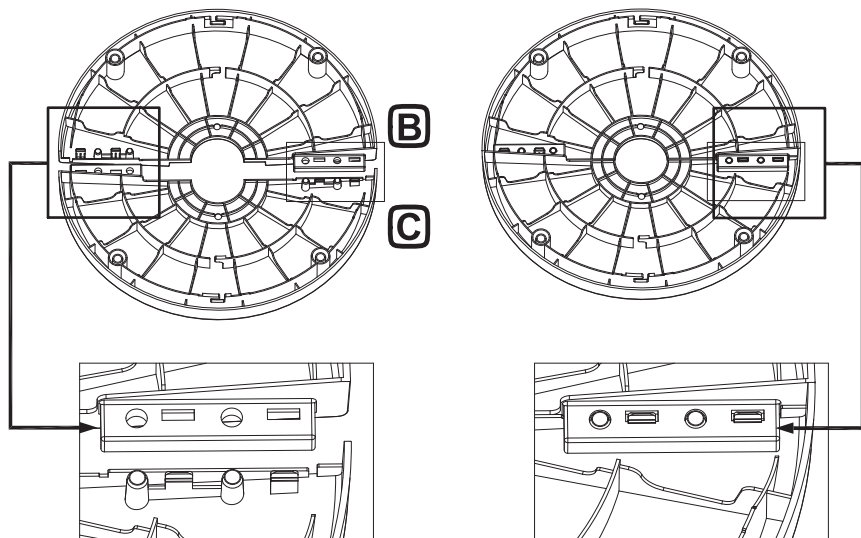

STEP 2

 Remove the **BODY SCREW (D)** from the center post on the bottom of the **FAN BODY (A)**.

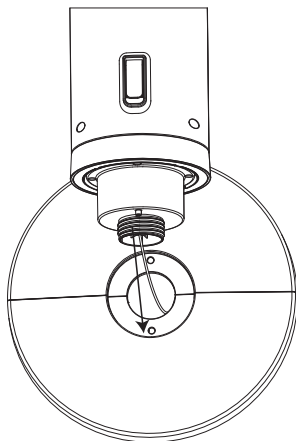


Fan Assembly

STEP 3


Pass the power cord through the center hole of the **BASE**.

 Align the **BASE** front with the **FAN** front. Insert the posts on the fan body into the holes on the top of the **BASE**. It will only go one way. Attach the **BODY SCREW (D)** through the hole on the bottom of the base and securely tighten.

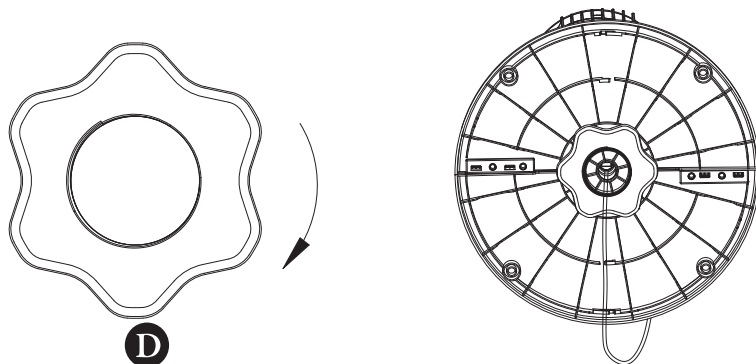

STEP 4

 
Run the power cord through the guide on the bottom of the **BACK BASE (C)** by tucking the cord under the tabs. Set fan upright on the base and it is ready for use.

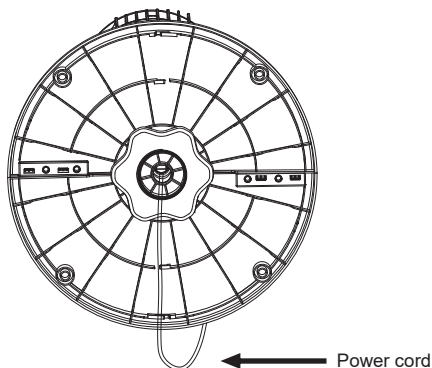


See further instructions on use, care and safety.

Fan Assembly

 STEP 5

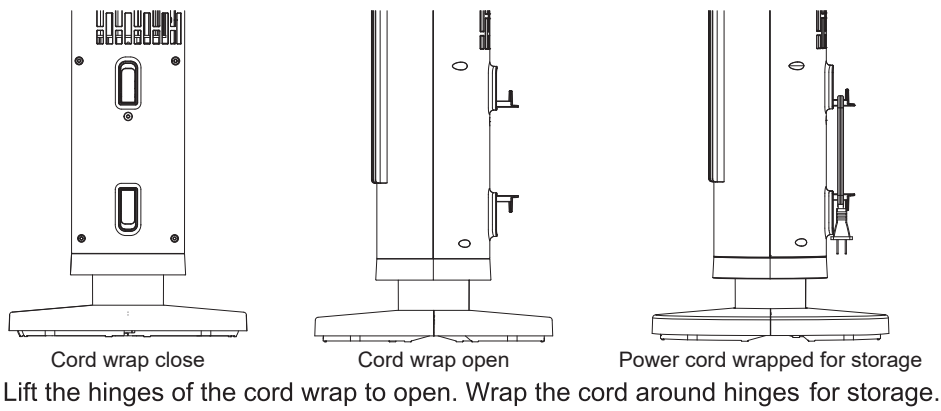


User servicing instruction

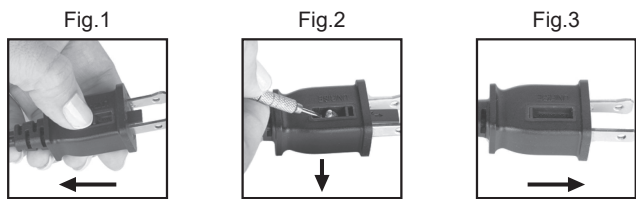 

1. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades
2. Remove fuse carefully. Risk of fire, Replace fuse only with 2.5Amp, 125 Volt fuse (provided with product).
3. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

Note: Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.

 Control Panel

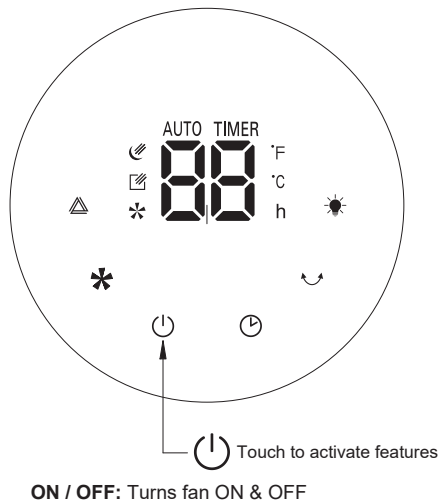

Control Panel



Speed Selection: Cycle through nine different fan speeds:

1 2 3 4 5 6 7 8 9



Timer:

Set an automatic shutoff timer for up to 12 hours. Tap the icon to increase the time in 1 hour increments: 1 hour, 2 hours, 3 hours, etc. to a maximum time setting of 12 hours.



The LED Indicators on the control panel are marked 1h, 2h, 3h (h for Hour). The time indicated on the display is the total time period that has passed.



Breeze Selection:

Tap the icon to select between three different breeze modes and AUTO.



Natural Breeze:

The Natural Breeze mode automatically selects wind speed randomly as you would find outdoors. The speeds are graphically described on pages 11-12.



Eco Sleeping Breeze:

The Sleeping Breeze mode allows you to set a speed that will gradually lower to Eco. The airflow will begin at the selected speed and drop to the next lowest speed before lowering to Eco (speed 1).



Constant Breeze:

The Constant Breeze mode offers an even fan speed. Tap the icon to increase the fan speed.



Night Light:

Three night light brightness levels. Tap the icon to cycle through the brightness levels - 100% / 67% / 33% / Off.



Oscillation:

Tap the icon to start and stop the oscillation of the fan.

Control Panel

AUTO



AUTO Mode:

The fan speed adjusts automatically based on the ambient temperature; it increases as the temperature rises and decreases as the temperature cools. The fan speed corresponds to the ambient temperature as follows:

- Speed 9 (highest speed) runs continuously when the temperature is above 80°F.
- Speed 8 corresponds to temperature 79°F.
- Speed 7 corresponds to temperature 78°F.
- Speed 6 corresponds to temperature 72°F.
- Speed 5 corresponds to temperature 71°F.
- Speed 4 corresponds to temperature 70°F.
- Speed 3 corresponds to temperature 69°F.
- Speed 2 corresponds to temperature 68°F.
- Speed 1 corresponds to temperature 67°F.

Auto Shutdown Temperature:

When entering AUTO mode, the AUTO icon starts flashing, and the display screen switches from the previous speed display to the room temperature display.

When AUTO is flashing, press the Constant Breeze/Speed Selection icon (✱) to set the automatic shutdown temperature (setting a value between 40°F and 95°F). Once you have selected your shutdown temperature, wait 15 seconds for the AUTO icon to stop flashing indicating the temperature has been set. When the room temperature drops below the set temperature, the fan stops and enters standby mode. As the room temperature rises, the fan speed increases according to the corresponding relationship above. As the room temperature drops, the fan speed decreases in turn according to the above correspondence.

 
To change the speed of the fan manually, exit AUTO Mode by pressing the Breeze selection (△). Then, tap the Constant Breeze/Speed Selection icon (✱) to select your fan speed.

Control Panel




Natural Breeze Modes:


Natural Breeze Mode automatically selects wind speed randomly as you would find outdoors. Each cycle has 42 phases, each lasting 2.5 seconds, for a total of 105 seconds per cycle. The speeds are graphically described as follows:

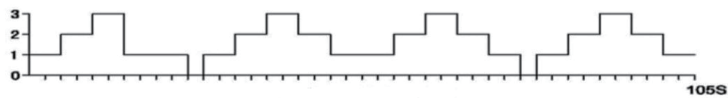

 
1st level natural wind operation pattern diagram

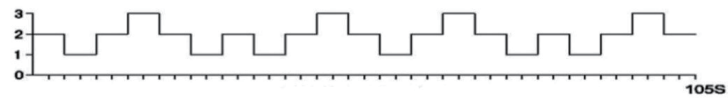

 
2nd level natural wind operation pattern diagram

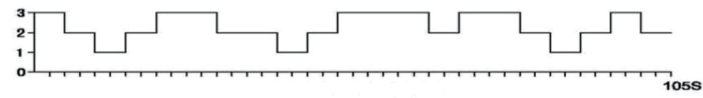

 
3rd level natural wind operation pattern diagram

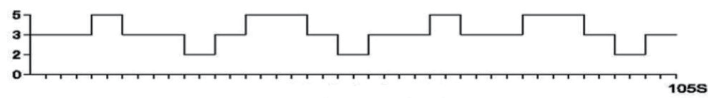

 4th level natural wind operation pattern diagram

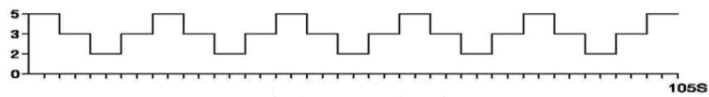


 5th level natural wind operation pattern diagram

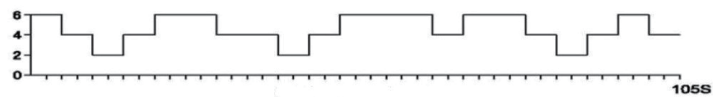


6th level natural wind operation pattern diagram

 
Control Panel

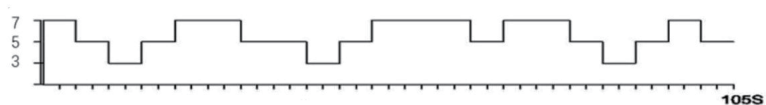

 7th level natural wind operation pattern diagram

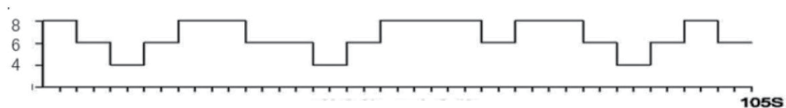

 8th level natural wind operation pattern diagram

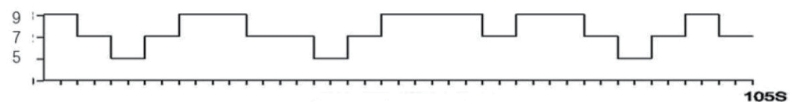

9th level natural wind operation pattern diagram

Remote Control

To use your remote, point the top end directly at the front of the fan.

Functions:



Power Button - Turns fan ON and OFF.



Speed Mode - Change fan speed from 1, 2, 3, 4, 5, 6, 7, 8, and 9.



Breeze Selection - Changes the mode from Constant Breeze to Natural Breeze to Sleep Breeze.



Timer - Changes the time the fan is on from 1 hr. up to a maximum of 12 hr., in 1 hr. increments.

 


Oscillation - Turns the fan oscillation ON or OFF.



Night light - offer three night light brightness levels. Tap icon to cycle through brightness settings - 100%/67%/33%/Off.

- The remote control operates on 1 pc cell battery (CR2025, 3V).
- Remove the battery if the remote will not be used for an extended time period.
- Install the 1 pc cell battery shown.

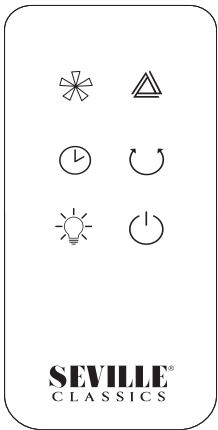

Front of remote



Back of remote



NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced Radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Customer Service Information
Seville Classics, Inc.

Telephone: (800) 323-5565

Fax: (310) 533-3899

Hours: 8:30 AM – 4:30 PM (PST)

Email: Support@SevilleClassics.com

Online Store: www.SevilleClassics.com