

# **Instruction Manual**

## ***GloGlobe® Solar Floatable LED Light***

**Model No.: EHF10261**

**IMPORTANT: RETAIN FOR FUTURE REFERENCE. READ CAREFULLY.**



**Customer Service Torrance, CA**  
**Seville Classics, Inc.**

**Telephone:** (800) 323-5565

**Fax:** (310) 533-3899

**Hours:** 8:30 AM – 4:30 PM (PST)

**Email:** [Support@SevilleClassics.com](mailto:Support@SevilleClassics.com)



Seville Classics, Inc.  
Torrance, CA 90501 USA  
[www.sevilleclassics.com](http://www.sevilleclassics.com)  
©2026 Seville Classics, Inc.

041126

## Parts List


### A. GloGlobe®



### B. Charging Cable (1)



### C. Remote Control (1)

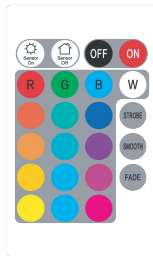

Unpack and remove all parts from the box. If there are missing or broken parts, please contact our **CUSTOMER SERVICE**.

## Specifications

- Up to 80 hours of single-color operation
- 16 LED color options (with dimmer)
- IP66 Waterproof Rating
- 3 Modes (strobe/fade/smooth)
- 23-key remote control
- USB C Charging Cable

## Features

- 4 RGB + 3 warm LEDs
- 1.15 W (5 x 0.23 W) solar panel
- Rechargeable lithium-ion battery 3.7V 2600mAh
- Input: DC 5V, 1A
- USB Charging time: 4 to 5 hours
- Up to 80 hours of operation
- IR remote control range: 13 feet (4 meters)

## Warnings

- This is not a toy, keep out of the reach of children.
- Keep this product away from chemicals, or high heat.
- Regarding the charging cable:
  - Only use the provided charging cable to charge the battery of the GloGlobe® (Part B).
  - The charging cable should not be used outdoors, or exposed to rain, humidity, liquids or heat.
  - Keep the charging cable out reach of children.
  - Disconnect the charging cable from power when not in use.
- Keep the remote control away from water, liquids and heat.
- Do not put the GloGlobe® on the water if damage/crack is found.
- Never throw the GloGlobe® into the pool. Place the product onto the water gently.
- Take the GloGlobe® out of the pool when not in use.
- Never jump, sit, or stand on the product.

**CAUTION:** To avoid the risk of electric shock or a damaged product, wipe the light till dry before charging.

## GloGlobe® Lithium-ion Battery Care

For long lasting care and maintenance of built-in GloGlobe® battery, please charge and operate in the following conditions:

**GloGlobe® Charging Temperature:** 32-113° F (0-45° C)


Charging the GloGlobe® at a very low temperature will lower the capacity and reduce cycle life of the battery.

**GloGlobe® Use/Storage Temperature:** 14-113° F (-10-45° C)

Keeping the battery charged protects circuits when stored for longer than three months.

## Charging Instructions

- Please ensure Glo Globe is fully charged before first use.
- **WARNING: USB CHARGING CABLE (B) IS NOT WATERPROOF AND SHOULD BE USED IN A DRY LOCATION ONLY.**
- To charge: connect **USB CHARGING CABLE (B)** to **CHARGING PORT** located on bottom of Glo Globe. Connect the **USB CHARGING CABLE** to a USB plug adapter (Not included) and plug into wall outlet. Be sure to secure **CAP** when charging is complete.
- **CHARGING INDICATOR LIGHT:** check the base of the Glo Globe for status, red for charging, and green/no light indicates a full charge.

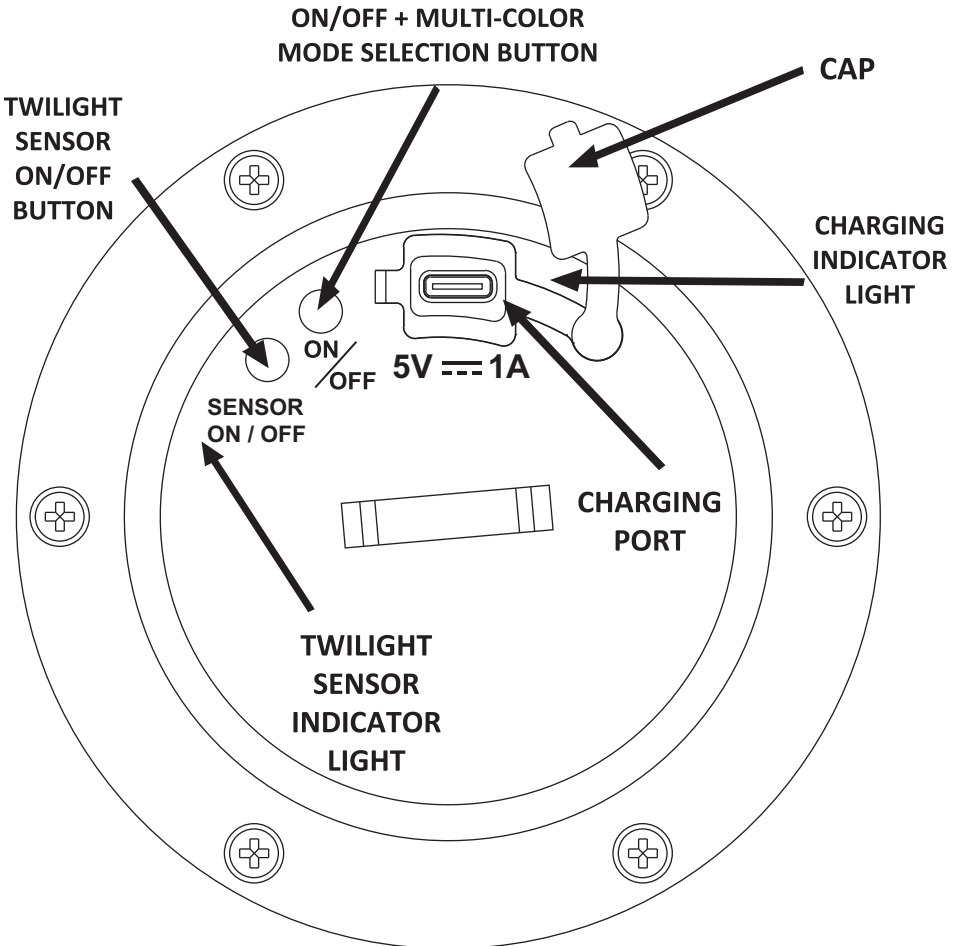

**Note:** Before using the remote control for the first time, remove the plastic sheet from the battery cover and discard.

| Remote Control Instructions                                                         |                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Turn GloGlobe® On/Off                                                                                                                                                                                                                                |
|    | <b>Sensor ON</b><br>Short press: Indicator flashes once, light sensor mode activated.<br>(Light remains off in bright environments, turns on automatically in dim environments.)<br><b>Sensor OFF</b><br>Short press: Light sensor mode deactivated. |
| Single Color Mode                                                                   |                                                                                                                                                                                                                                                      |
|    | Choose from 16 solid colors, including white.                                                                                                                                                                                                        |
| Multi-Color Modes                                                                   |                                                                                                                                                                                                                                                      |
|    | <b>STROBE</b> – 7 colors flash.                                                                                                                                                                                                                      |
|   | <b>SMOOTH</b> – Colors slowly transition through all 16 colors. This mode will have the longest run time.                                                                                                                                            |
|  | <b>FADE</b> – Colors fade from one to the next through red, green, and blue. This mode will have the shortest run time.                                                                                                                              |

## Manual Operation

- To operate GloGlobe® without remote control, press and hold the On/Off/Mode button (Photo on page 3) for 3 seconds to turn on. Press and hold for 3 seconds to turn off.
- When GloGlobe® is first turned on by remote control, it will default to the last setting used. When turned on by On/Off/Mode button, it will default to FADE option. Push On/Off/Mode button to cycle through the 3 modes (strobe/fade/smooth).


## Disable Twilight Sensor Function

- To disable or enable the sensor, click the twilight sensor ON/OFF button once (Photo on page 3).
- Please note if the GloGlobe® is powered off, the twilight sensor will remain in the last setting as it was before powering off.
- When the sensor is on, the twilight sensor indicator light will be GREEN. When the sensor is off, the twilight sensor indicator light will be RED.
- Hold the ON/OFF button for 5 seconds to lock the GloGlobe®, the twilight sensor indicator light will light up RED. The sensor will be switched off and cannot be activated with the remote control. Press the ON/OFF button for 3 seconds to turn the sensor back on.
- Press and hold the ON/OFF button for 3 seconds to set the GloGlobe® to a resting state. Activate again with the remote control, when the GloGlobe® is on the sensor will be activated as well.

## Maintenance and Care

- DO NOT fully submerge into water.
- Always turn off after each use.
- Store indoors when not in use.
- Store out of the reach of children.
- Clean with soap and water.

## Troubleshooting
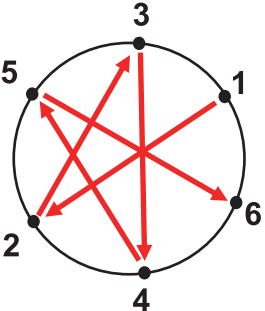
| Problem                            | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote control is not functioning. | <ul style="list-style-type: none"> <li>The small plastic sheet on battery cover remote control was not removed. Remove it to activate the remote.</li> <li>The battery of the remote control is dead. Remove it and replace with a new one. Note the polarity of the battery on the cover and direction when installing the new battery in the remote control.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                   |
| Water is inside of GloGlobe™.      | <ul style="list-style-type: none"> <li>Carefully remove all screws and washers. Set aside in a safe place.</li> <li>Remove LED module from outer housing. DO NOT OPEN LED module.</li> <li>Drain all water from outer housing. Wipe inside of GloGlobe® and outside of LED module dry with cloth.</li> <li>When reinstalling LED module, tighten the screw opposite the last one tightened in a criss-cross pattern.</li> </ul> <div style="text-align: center;">  </div> <ul style="list-style-type: none"> <li>Do not fully tighten screws until all are partially installed.</li> <li>Screws should be tightened with a maximum torque of 2.65 lbs./1.2 kgs.</li> </ul> |
| GloGlobe™ turns off too quickly.   | <ul style="list-style-type: none"> <li>Reduce brightness. Operation time depends on the setting being used. Full brightness will cause operation time to decrease.</li> <li>Fully charge GloGlobe® before using. Indicator light will turn green when GloGlobe® is fully charged.</li> <li>Operation time slowly degrades with each use which is standard for lithium-ion batteries.</li> </ul>                                                                                                                                                                                                                                                                                                                                                             |

## Remote Control Battery Replacement

If the remote control doesn't activate the light, replace battery (CR2025).

- Press the tab on the side of battery cover and slide it out of the remote control.
- Exchange the battery.  
Pay attention to the polarity shown on the battery cover to ensure proper operation.
- Remote control requires a single CR2025 button battery for operation (included).
- It is recommended that the batteries be removed should the remote not be in use for an extended time.
- Install the 1-piece button battery shown.

### Back of Remote



## Remote Control Battery Warning

- This product contains a button battery.  
If swallowed, it could cause severe injury or death in just 2 hours.  
Seek medical attention immediately.
- Clean battery contacts and those of the devices prior to battery installation if product is left unused for a long time.
- Dispose of used button batteries immediately and safely.
- Button batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe.
- Make sure that the battery is inserted correctly to avoid a short-circuit.

## KEEP BATTERIES OUT OF REACH OF CHILDREN

- This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.
- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of use button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe. Clean the battery contacts and also those of the devices prior to battery installation if product is left unused for a long time.



**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different.
- Consult the dealer or an experienced Radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

## DISPOSAL OF USED BATTERIES

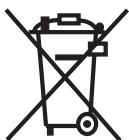

Battery may contain hazardous substances which could be endangering to environment and human health.

This symbol marked on the battery and/or packaging indicates that used battery shall not be treated as municipal waste. Instead it shall be left at the appropriate collection point for recycling.

By ensuring the used batteries are disposed of correctly, you will help prevent potential negative consequences for the environment and human health. The recycling of materials will help to conserve natural resources.

For more information about collection and recycling of used batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased this product.

- A) All persons have a responsibility to properly dispose of batteries.
- B) Be sure to separate batteries from household garbage. Never place batteries in any curbside collection carts because they can overheat, explode, and cause fires.
- C) Batteries can be dropped off at designated battery disposal facilities. Please search online for local collection sites that will take rechargeable batteries.
- D) Batteries can be dangerous if mishandled. Handle batteries with care. Keep out of reach of children. Keep batteries away from combustible materials. Avoid storing batteries at extreme temperatures. Do not dispose of in fire or heat. Do not puncture, damage, or disassemble. Do not mix fresh batteries and new batteries.
- E) 1 pc 18650, rechargeable li-ion battery 2600mAh 3.7v, and CR2025 button cell battery 3V. The recycle symbols on the battery designate that they must be recycled, not thrown away.
- F) This battery contains toxic materials whose injection into ecosystems may cause harm. When added to landfills, the toxic materials may enter the local groundwater system and propagate through the food chain in various ways, causing damage to the environment.

### Important Safety Instructions



**WARNING: CHEMICAL BURN HAZARD.**  
**KEEP BATTERIES AWAY FROM CHILDREN.**  
**SEE MANUAL.**

1. WARNING- KEEP BATTERIES OUT OF REACH OF CHILDREN
2. Swallowing may lead to serious injury in as little as 2 hours or death due to chemical burns and potential perforation of the esophagus.
3. If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
4. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
5. Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
6. Tell others about the risk associated with button batteries and how to keep their children safe.
7. This product contains a button battery. If swallowed, it could cause severe injury or death in just 2 hours. Seek medical attention immediately.

# **BATTERY WARNING**

**INGESTION HAZARD:** This product contains a button cell or coin battery.

**DEATH** or serious injury can occur if ingested.

A swallowed button cell or coin battery can cause **Internal Chemical**

**Burns** in as little as **2 hours**.

**KEEP** new and used batteries **OUT OF REACH of CHILDREN**.

**Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



"WARNING",

Containing Replaceable Button Cell or Coin Batteries

- (a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- (b) Even used batteries may cause severe injury or death.
- (c) Call a local poison control center for treatment information.
- (d) Button cell battery type: CR2025, 1pc, 3V.
- (e) The nominal battery voltage 3V.
- (f) Non-rechargeable batteries are not to be recharged.
- (g) Do not force discharge, recharge, disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- (h) Ensure the batteries are installed correctly according to polarity (+ and -)."
- (i) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries."
- (j) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- (k) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.