



Valve Cover Bolt Replacement Instructions (Single Bolt Only)

1. Identify Which Bolt You Want to Replace

- The valve cover uses three bolts — replace ANY one.
- Choose the bolt with the best access depending on wiring, frame, and routing.

2. Remove the Selected Bolt

- Remove the bolt carefully.
- Ensure the valve cover gasket stays properly seated.

3. Install the New Bolt

- Start threading by hand to avoid cross-threading.
- Torque bolt properly.

■■ **WARNING – DO NOT OVERTIGHTEN**
TORQUE TO: 8 Nm (71 in-lb) ONLY

