

**Welcome! This guide explains some hidden features for your 360 Zoom Camera using the Preset Positions Menu**

## Contents:

- 2** Getting to the Menu
- 3-4** iPhone and Android Menu
- 5** Clear all Preset Position Settings
- 6-7** Camera Tracking
- 8** Save Camera Positions
- 9** Change Pan and Tilt Speed
- 10** Infrared Settings

 
 
## GETTING TO THE MENU

Preset positions allow you to program smart commands into your 360 Zoom camera.

### Getting to the Preset Position Menu

To enter your settings, you will need to type numbers in the preset positions menu.

**A.** Select your 360 camera on the app. Click on the three lines with dots or swipe across until you find the preset position menu button.

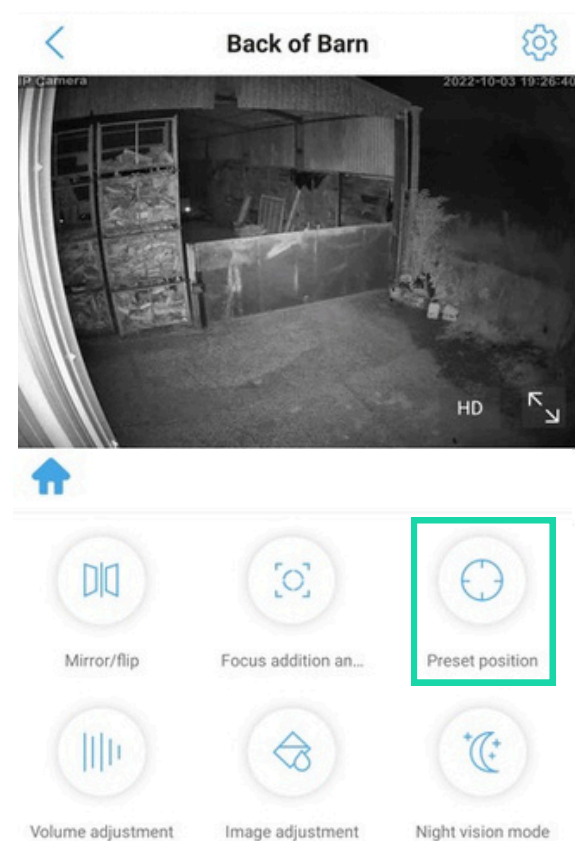
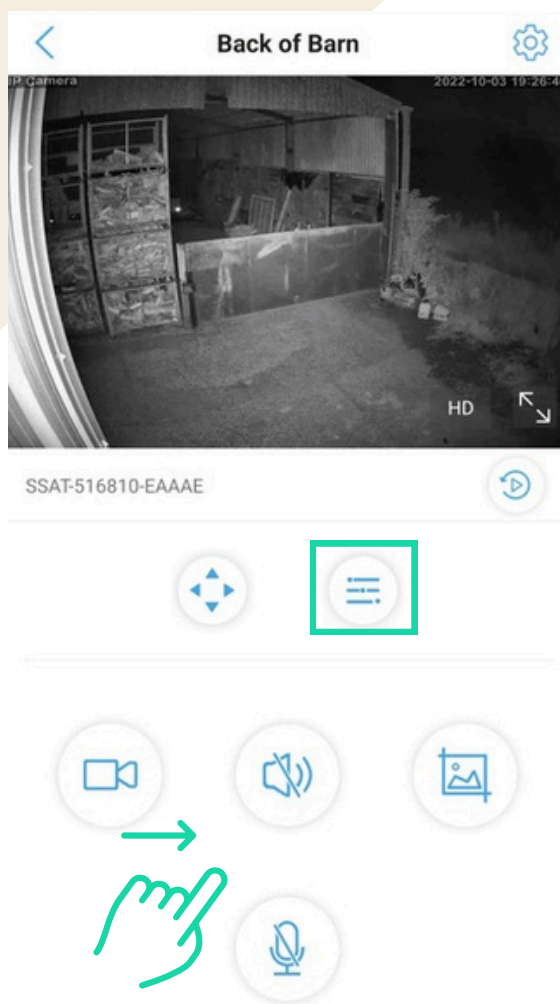


Sometimes when entering a command, there will be no feedback the the command has been successfully entered. This is normal.

## IPHONE AND ANDROID MENU

When in the preset position menu, it displays differently depending on your device.

### iPhone

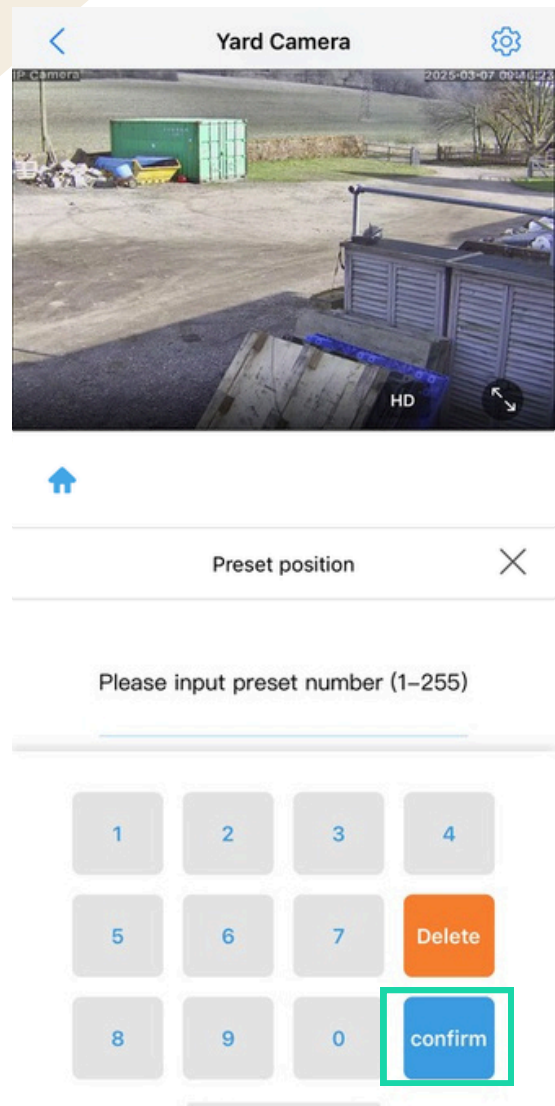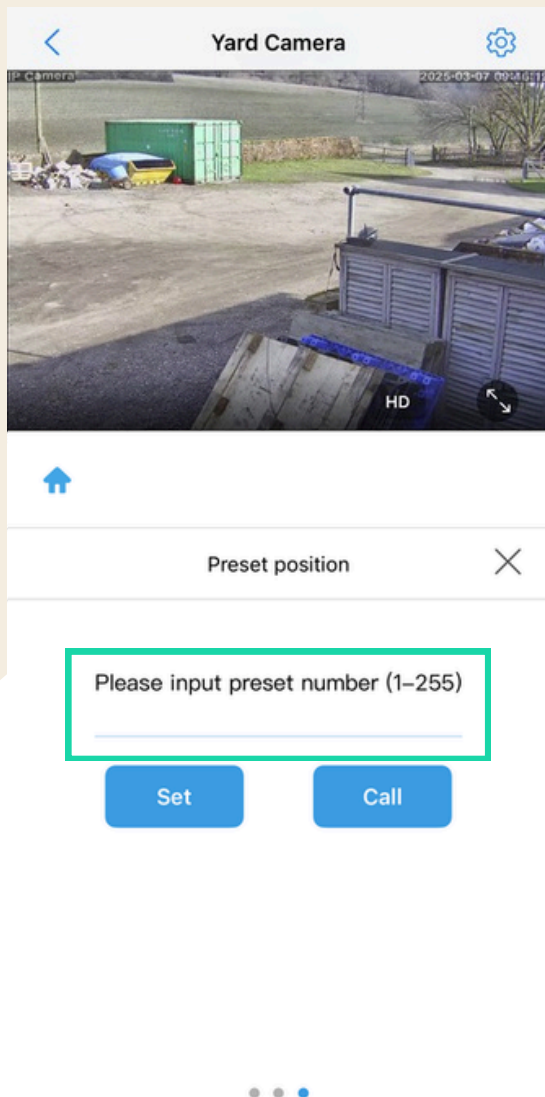


- A.** Click on the number input to bring up keypad
- B.** Enter number using keypad then click confirm



Sometimes when entering a command, there will be no feedback the the command has been successfully entered. This is normal.

## IPHONE AND ANDROID MENU

## Android

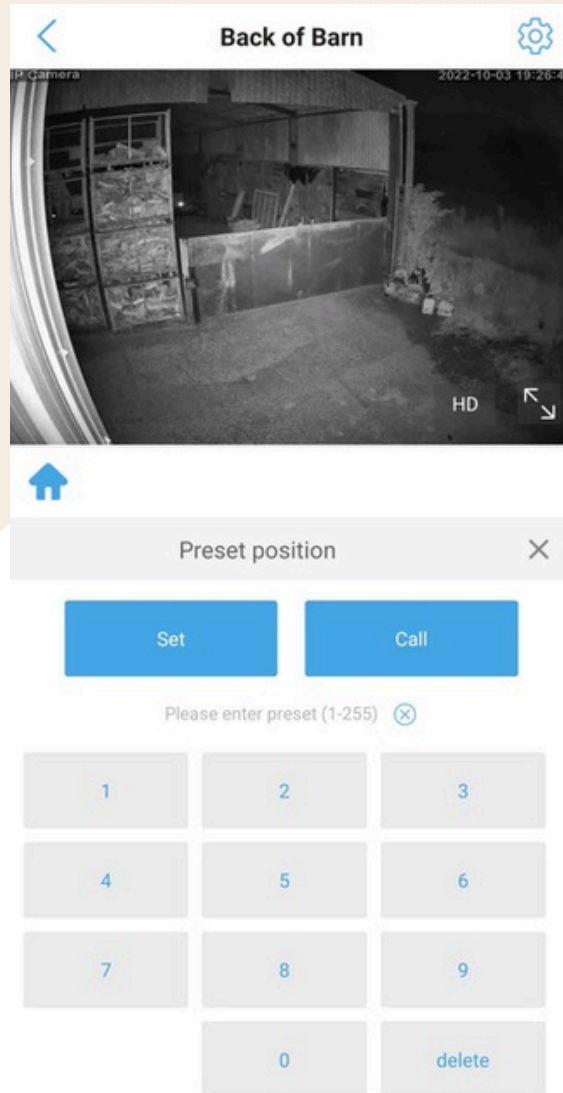

Keypad appears automatically.




Sometimes when entering a command, there will be no feedback the the command has been successfully entered. This is normal.

## CLEAR CALL PRESET SETTINGS

This setting will clear all preset settings you have saved on to your camera.

We recommend using this setting if you accidentally set a setting, or a setting isn't working as you expected.

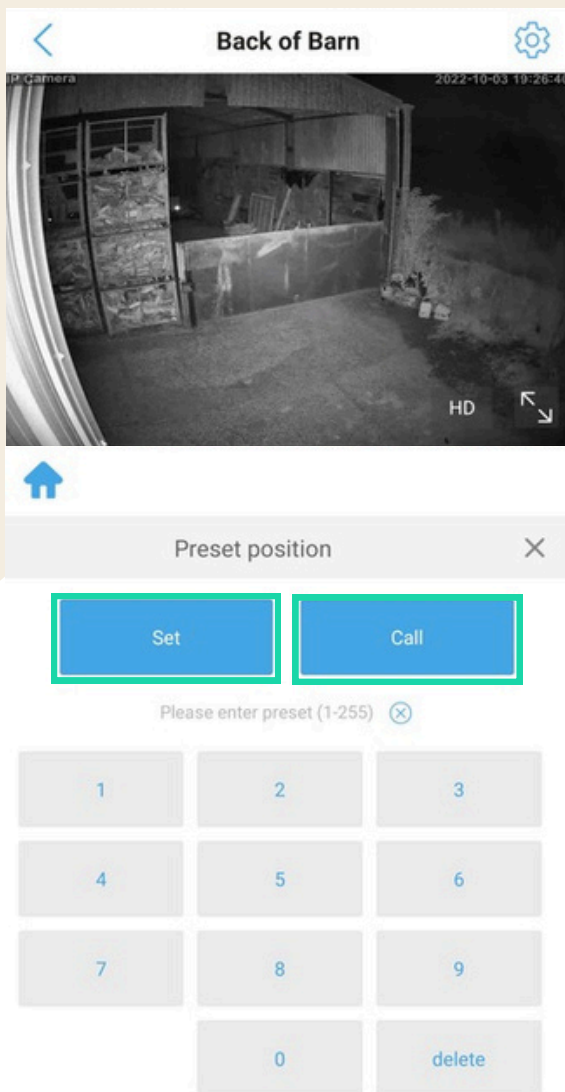

**A.** Type 115 press Call

**B.** Type 40 press Set



Sometimes when entering a command, there will be no feedback the the command has been successfully entered. This is normal.


## CAMERA TRACKING

You will need to set a home point when turning on human tracking. This will allow the camera to return to this position when tracking is completed.

By default, the camera will track for 60 seconds before returning to home point.

### Turning on Camera Tracking

**A.** Move camera to point in the direction of your home point.

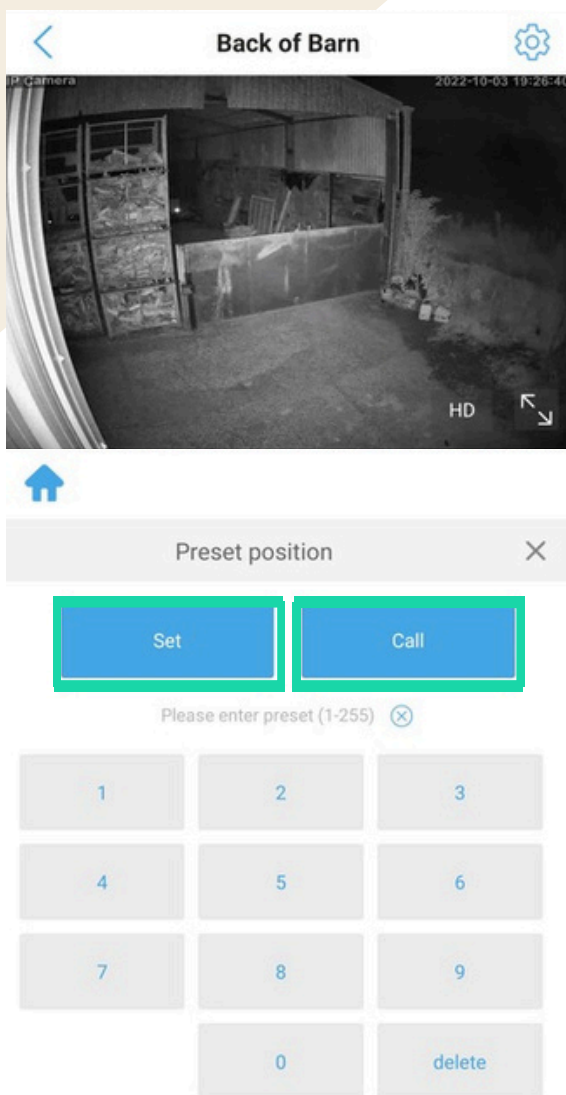

**B.** To set the home point type 92 press Set. You can use the command at any point to update your home point.

**C.** To turn on human tracking type 92 press Call



Sometimes when entering a command, there will be no feedback the the command has been successfully entered. This is normal.

## CAMERA TRACKING

### **Set the amount of time the camera tracks for**

- A.** Type 93 press Set to access this setting.
- B.** Type a number between 20 - 254 press Set. This number relates to the number of seconds the camera will track for.

### **Turn off camera tracking**

- A.** Type 94 press Call.




Sometimes when entering a command, there there will be no feedback the the command has been successfully entered. This is normal.

## SAVE CAMERA POSITIONS

You can save multiple set positions on your camera if you certain points of interest that you want to be able to quickly move to.

**A.** Move you camera to the point you want to cover. You can use the zoom too.

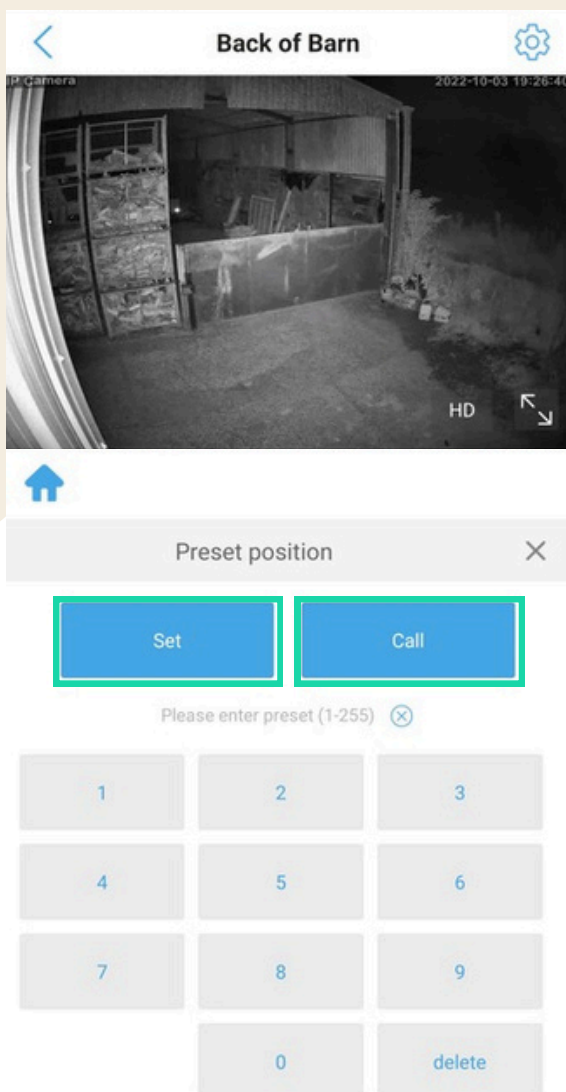

**B.** When in position 1, press Set. You can set up to 10 positions using number 1-10.


**C.** To move to your set position, type your saved preset number 1-10 press Call.



Sometimes when entering a command, there there will be no feedback the the command has been successfully entered. This is normal.

## CHANGE PAN AND TILT SPEED

If you find your camera is too sensitive, or not sensitive enough, you can change the speed of your pan and tilt.

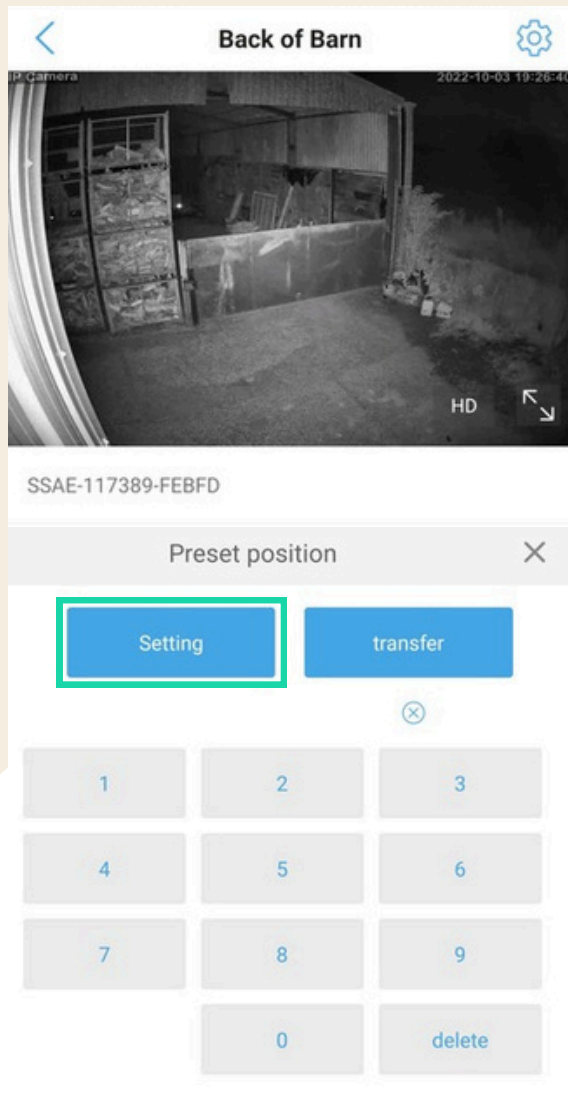

**A.** Type 113 press Set to access the setting.

**B.** Type a number between 1-64 to set the speed, press Set. The higher the number, the faster the camera will move.



Sometimes when entering a command, there will be no feedback the the command has been successfully entered. This is normal.

## INFRARED SETTINGS

You can turn your IR (infrared light) off, always on, or adjust the sensitivity to save battery (if required).

### **Turn IR Always Off**

Type 83 press Call

### **Turn IR Always On**

Type 82 press Call

### **Turn IR To Auto (Default)**

Type 81 press Call

### **IR Light Sensitivity Low**

Type 81 press Set

### **IR Light Sensitivity Medium (Default)**

Type 82 press Set

### **IR Light Sensitivity High**

Type 83 press Set



Sometimes when entering a command, there will be no feedback the the command has been successfully entered. This is normal.