


Dimensions: 54 in. W x 28 in. D x 28 in. H (137.16 cm W x 71.12 cm D x 71.12 cm H)

Customer Service Information Seville Classics, Inc.

Telephone: (800) 323-5565
Fax: (310) 533-3899
Hours: 8:30 AM – 4:30 PM (PST)
Email: Support@SevilleClassics.com
Online Store: www.SevilleClassics.com

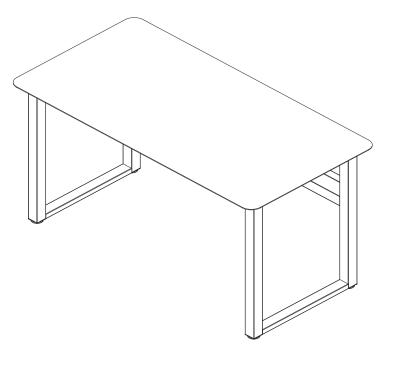

airLIFT® Desk

Model No.
OFFK66042 (Black/Black), OFFK66043 (Black/White),
OFFK66044 (Black/Walnut), OFFK66045 (Black/Ash Wood)


*Tabletop and frame will arrive in separate boxes

Thank you for choosing Seville Classics!

We hope you enjoy your new desk.

Please read through these assembly instructions and frequently asked questions to ensure proper assembly.

The contact information for our live customer support team based in California is on the last page.

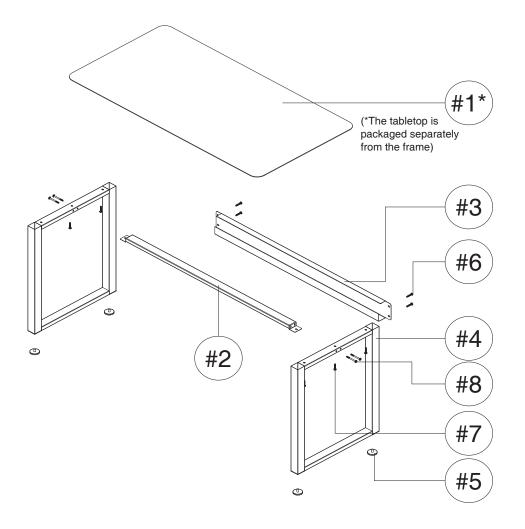

CONTACT INFORMATION

If you are missing any parts, have any questions, or need additional assistance in assembly, please contact our bilingual (English and Spanish) customer service department at:



Seville Classics, Inc.

19401 Harborgate Way Torrance, CA 90501 USA Telephone: (800) 323-5565 within USA

Fax: (310) 533-3899

Hours: 9:00am - 4:30pm (Pacific Standard Time)

E-mail: support@sevilleclassics.com

Website & Online Store: www.sevilleclassics.com





Note:

Please be considerate of the environment and recycle the brown box the item was delivered in along with all applicable packaging materials. Thank you.

7



*NOTE: We recommend using TWO people to assemble the desk.

2




STEP 5.

Attach Leveling Feet (#5).

Install the LEVELING FEET (#5) to the bottom of the SIDE FRAMES (#4).

Turn the desk upright once you finish this step.

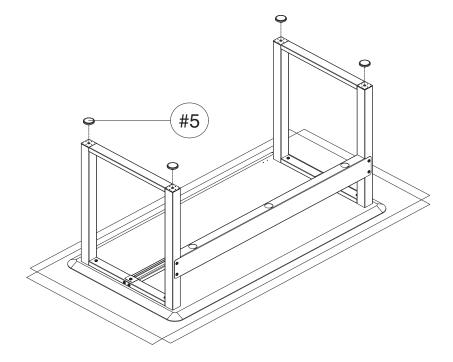


Please review the below parts list to ensure you received all the necessary parts.

If you are missing any parts or have trouble with assembly,
please contact our live customer support team at **(800) 323-5565** or

Support@sevilleclassics.com, which can assist you in both English and Spanish.

Parts List

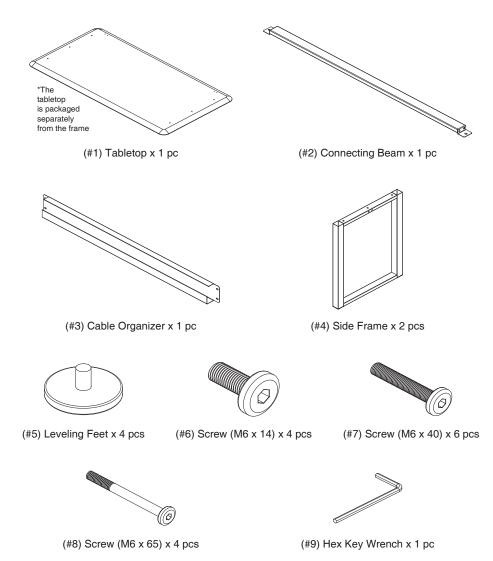


Attention:

Do not fully tighten all the screws until all of them are in the right positions.

STEP 1

Open the package of the **TABLETOP** (#1)*.

Place the **TABLETOP** (#1) on the cardboard to reduce the chance of scratching the top.(*The tabletop is packaged separately from the frame)

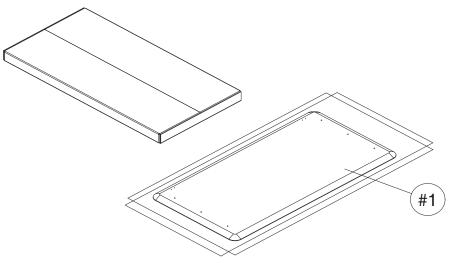


STEP 2.

Install Side Frames (#4).

Place the SIDE FRAMES (#4) as the image shows. Align screw holes on SIDE FRAME (#4) with TABLETOP (#1). Attach with 4 pcs of SCREW M6 X 40 (#7). Use the HEX KEY WRENCH (#9) to fasten.

Note: Do not fully tighten the screws in this step.

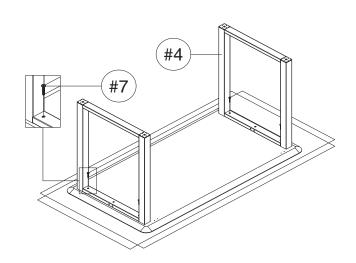


STEP 3.

Install Connecting Beam (#2).

Place the **CONNECTING BEAM (#2)** as the image shows. Align the screw holes on **CONNECTING BEAM (#2)** with **SIDE FRAMES (#4)**. Attach with 2 pcs of **SCREW M6 X 40 (#7)** and 4 pcs of **SCREW M6 X 65 (#8)**. Use the **HEX KEY WRENCH (#9)** to fasten.

Note: After securing the screws, tighten all the screws from this step and the previous step completely.

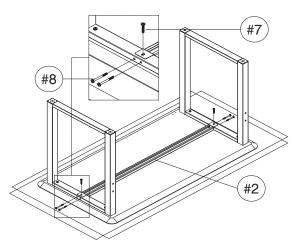

STEP 4.

Install Cable Organizer (#3).

Place the CABLE ORGANIZER (#3) as the image shows. Align the screw holes on CABLE ORGANIZER (#3) with SIDE FRAMES (#4). Attach with 4 pcs of SCREW M6 X 14 (#6). Use the HEX KEY WRENCH (#9) to securely fasten.

