



ASSEMBLY INSTRUCTIONS


UltraHD® Mega Storage Cabinet (Model No.UHD16270)


48in. W X 24in. D X 72in. H
(1.21 m x 60.9 cm x 1.83 m)

ULTRAGUARD®


FINGERPRINT RESISTANT SURFACES
AND INCREASED DURABILITY

Reference page 16 for special care
and maintenance of stainless steel

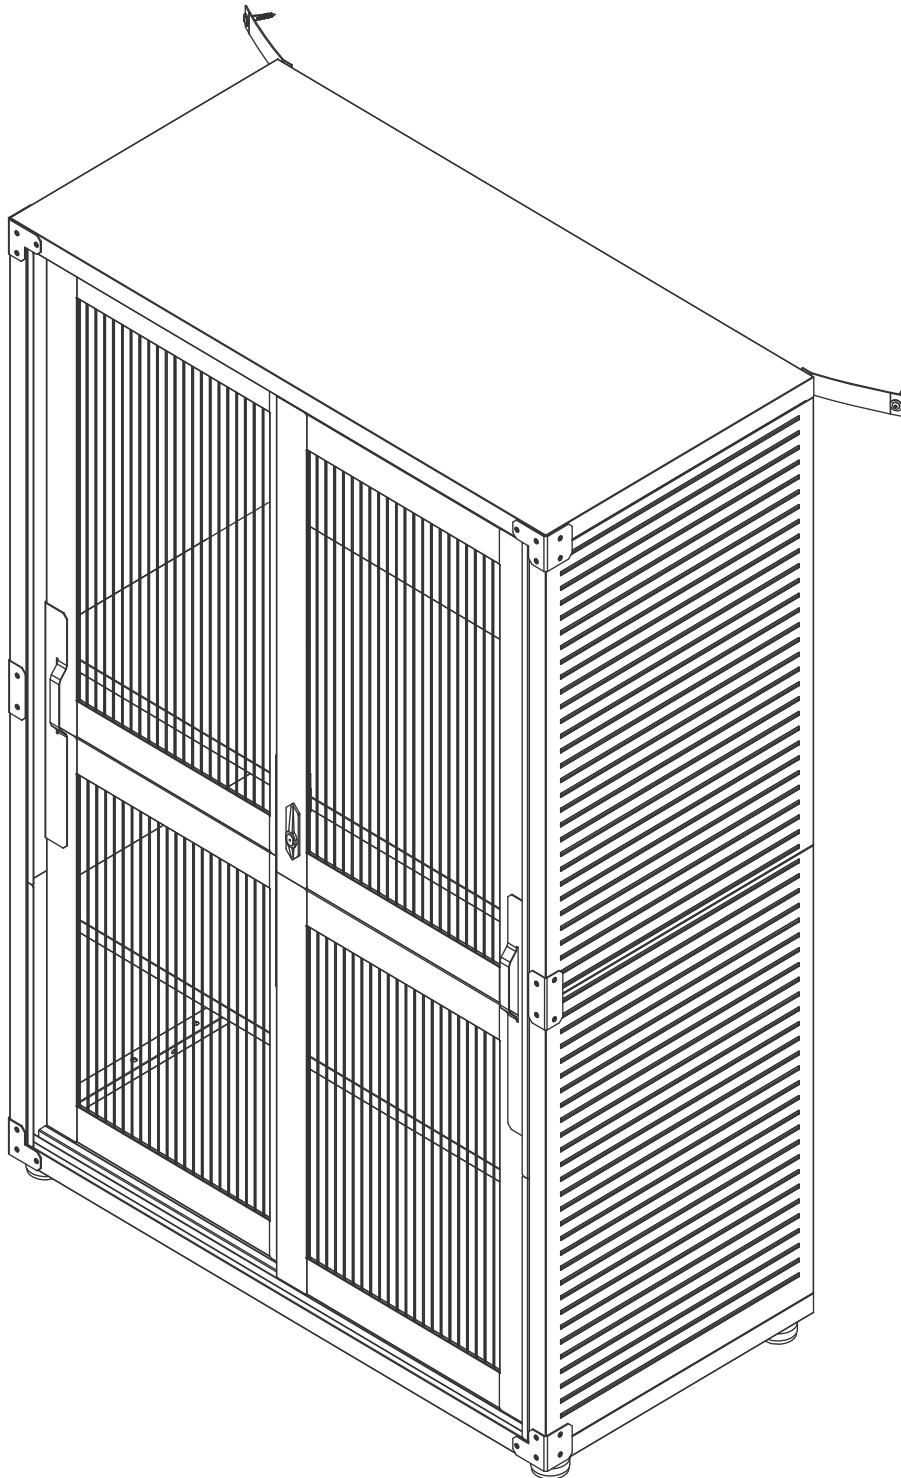


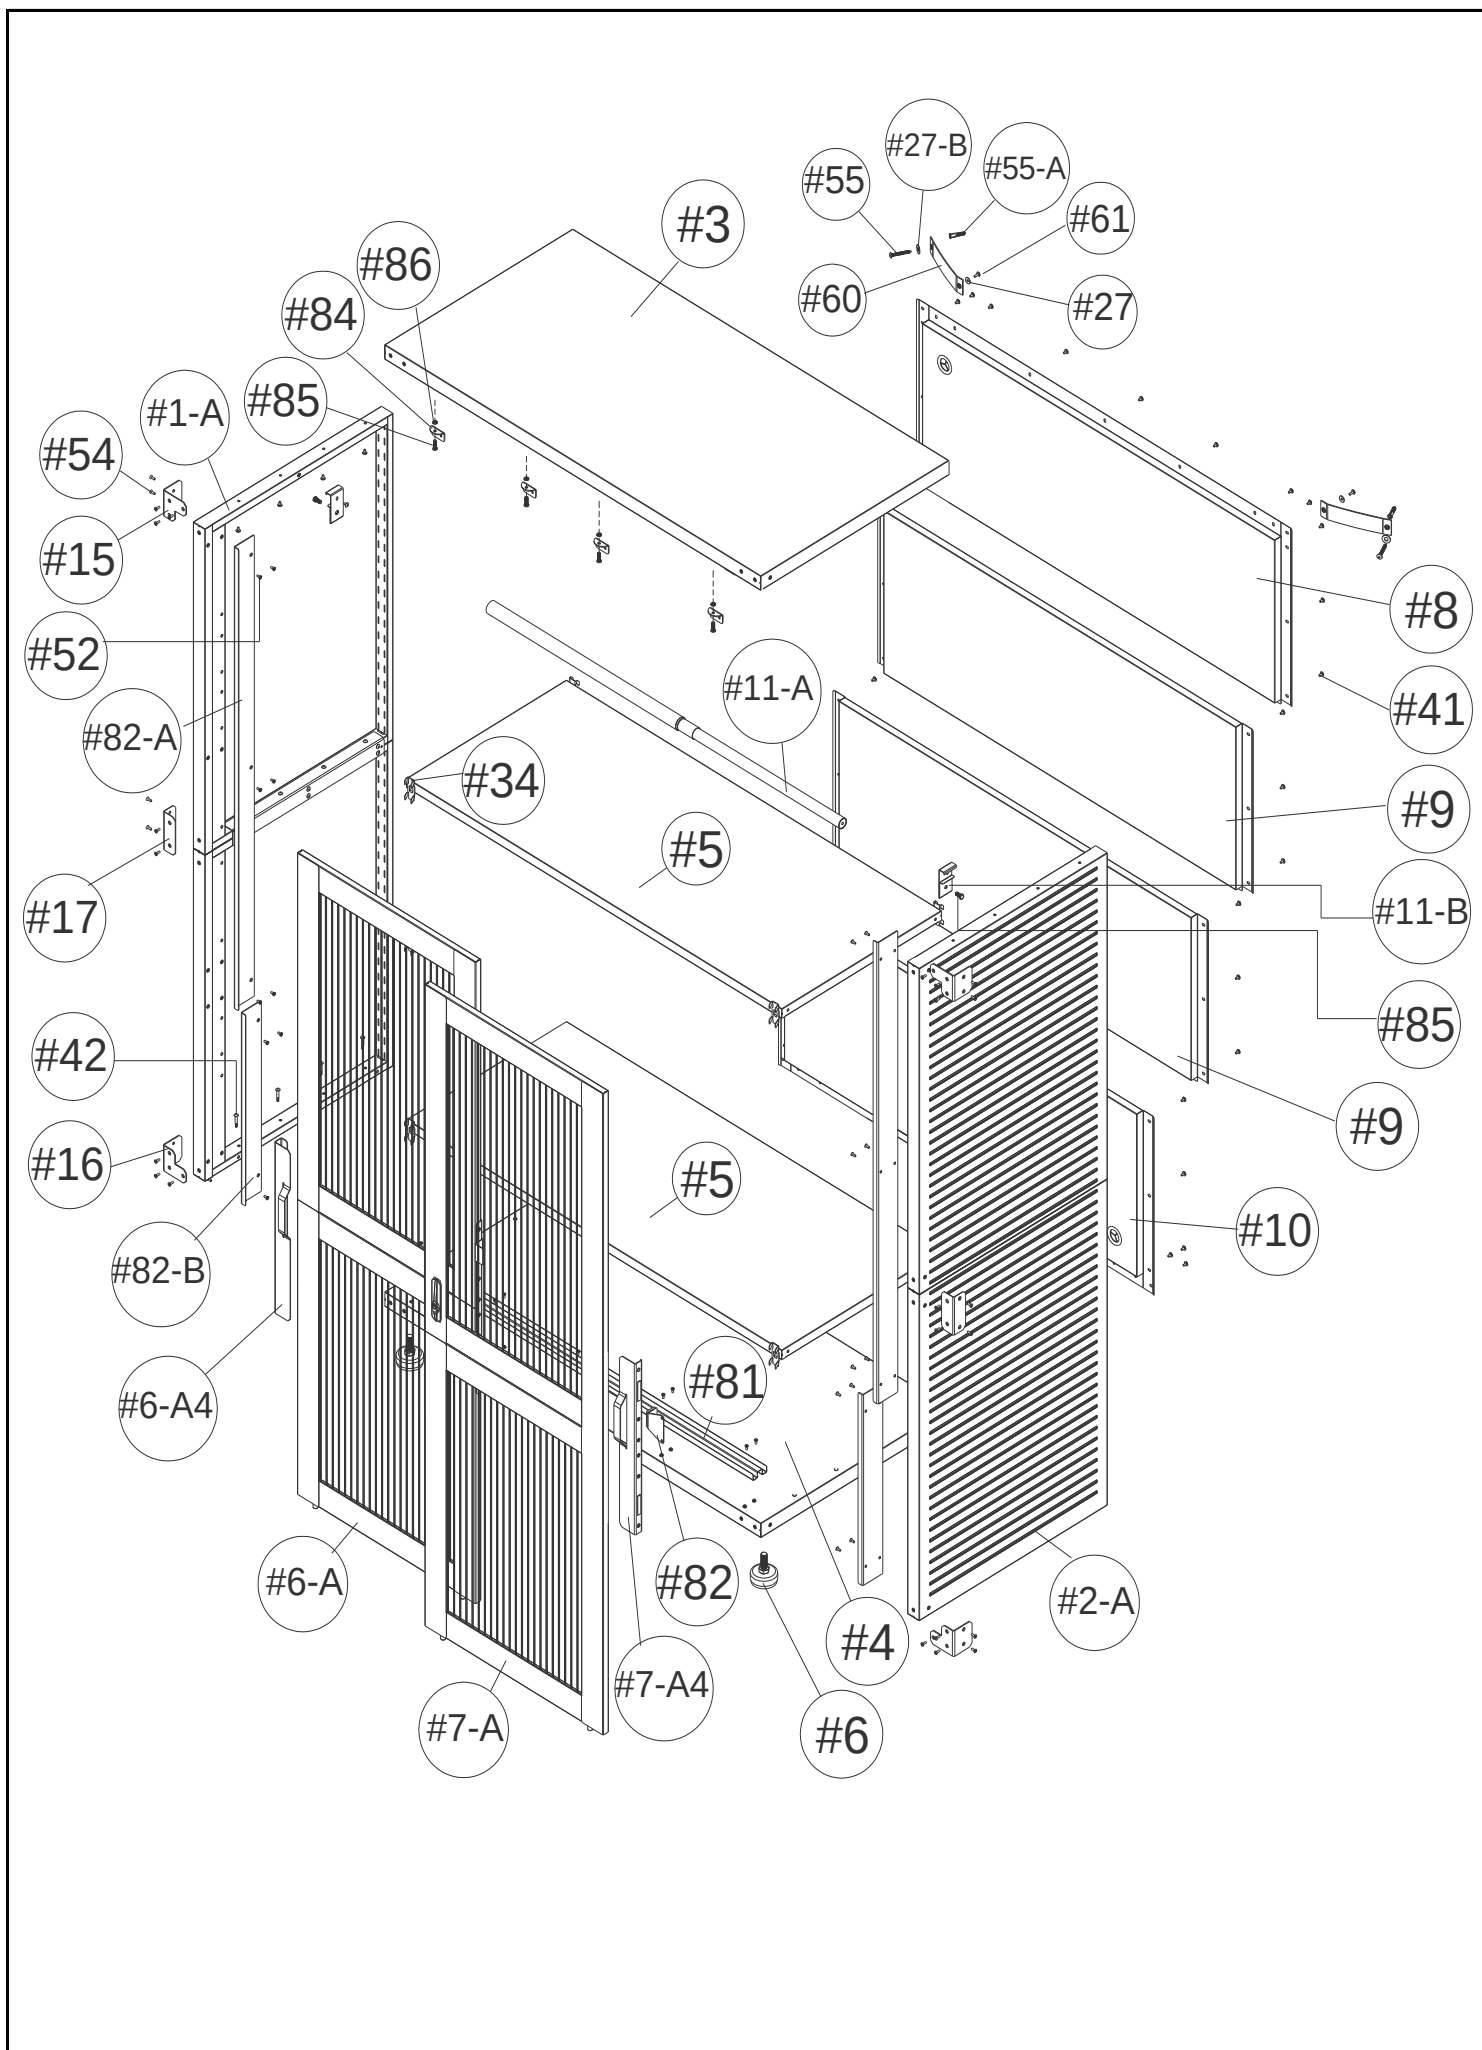


(#1-A) Left Side Panel

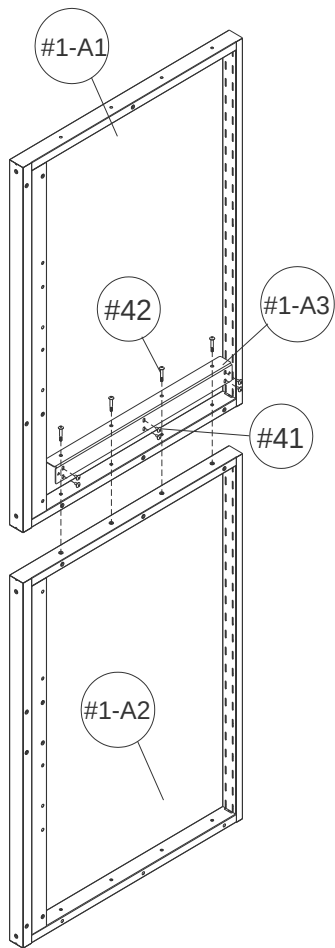


(#2-A) Right Side Panel

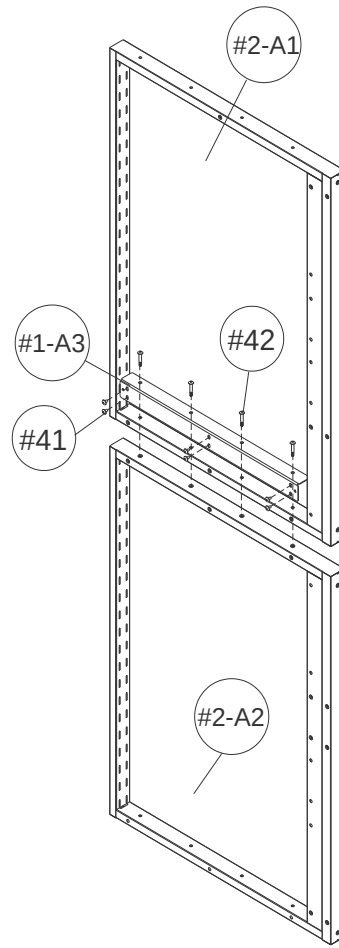

(#6-A) Left Door


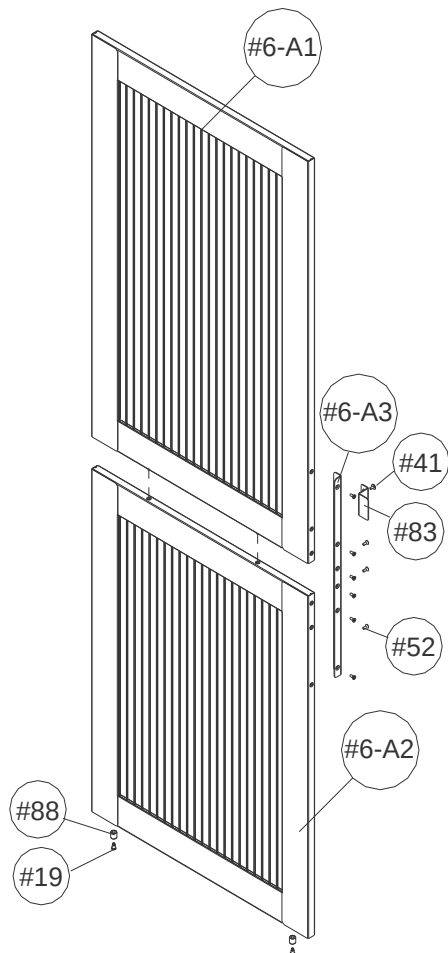




(#7-A) Right Door


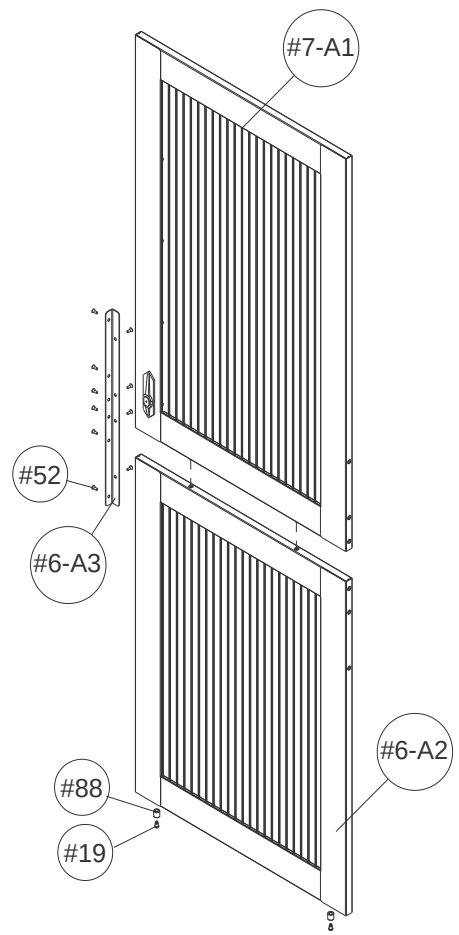




PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

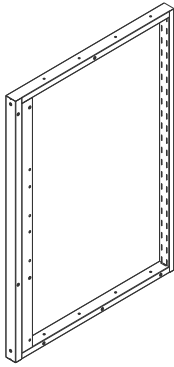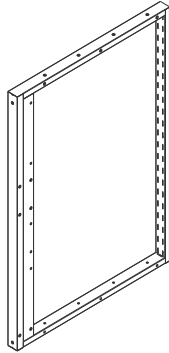	
(#1-A1) Left Side - Upper Panel x 1 PC	(#1-A2) Left Side - Bottom Panel x 1 PC







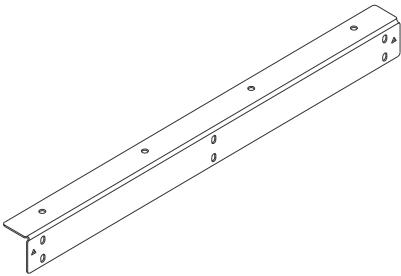
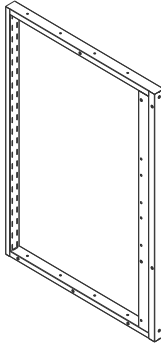
	
(#1-A3) Side Panel Connection Part x 2 PCS	(#2-A1) Right Side - Upper Panel x 1 PC

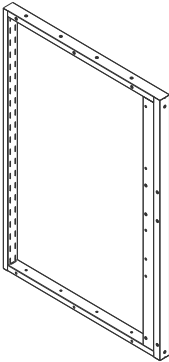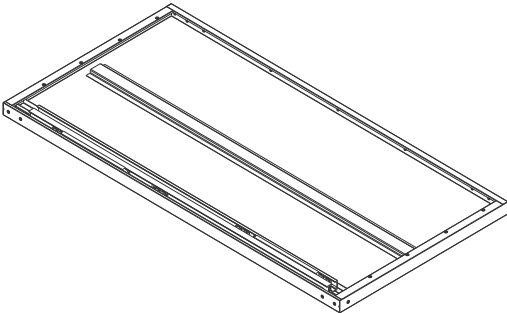	
(#2-A2) Right Side - Bottom Panel x 1 PC	(#3) Top Panel x 1 PC

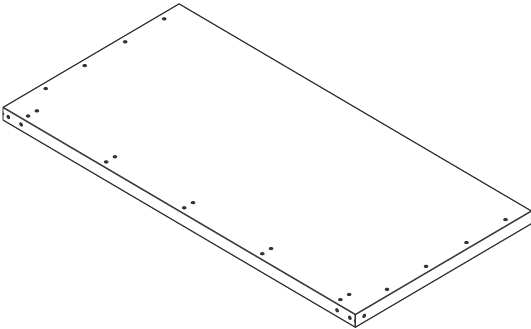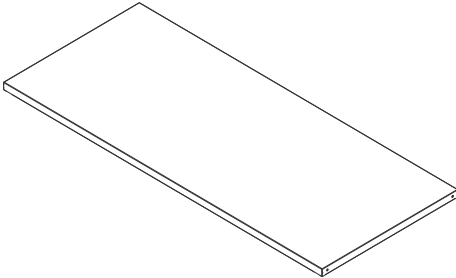	
(#4) Bottom Panel x 1 PC	(#5) Middle Shelf x 2 PCS









PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

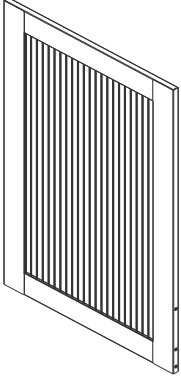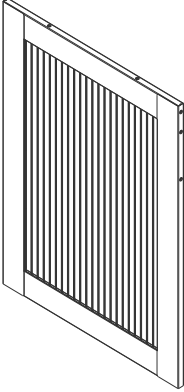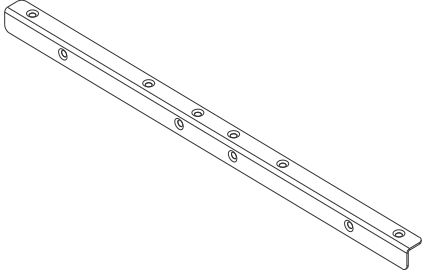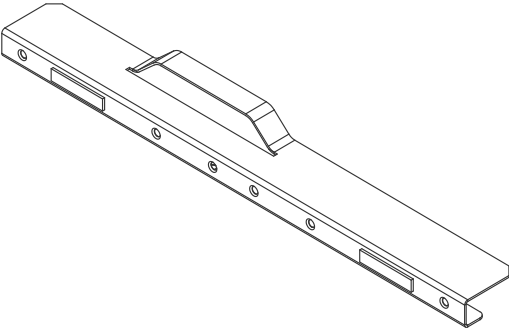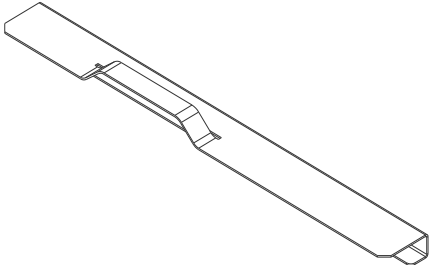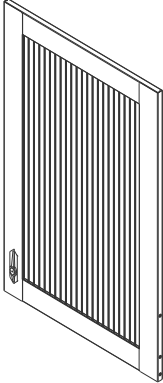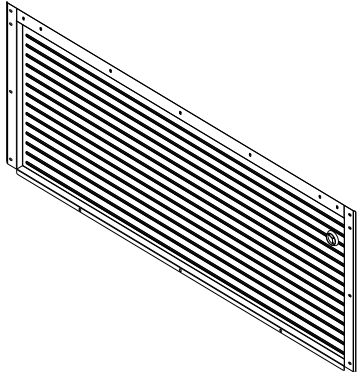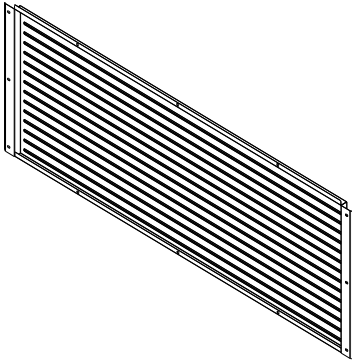	
(#6-A1) Left Door - Upper Panel x 1 PC	(#6-A2) Door - Bottom Panel x 2 PCS
	
(#6-A3) Door Panel Connection Part x 2 PCS	(#6-A4) Handle - Left Door x 1 PC
	
(#7-A4) Handle - Right Door x 1 PC	(#7-A1) Right Door - Upper Panel x 1 PC
	
(#8) Upper Back Panel x 1 PC	(#9) Middle Back Panel x 2 PCS


PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

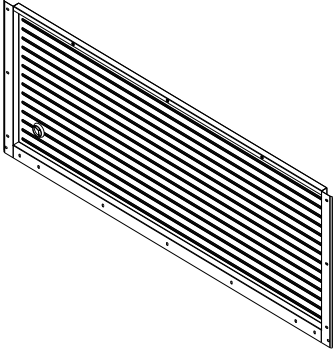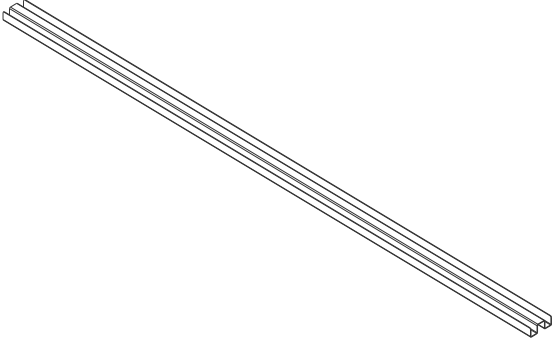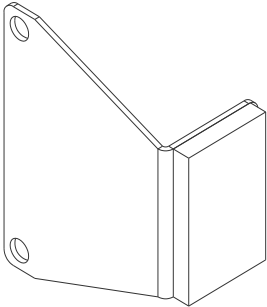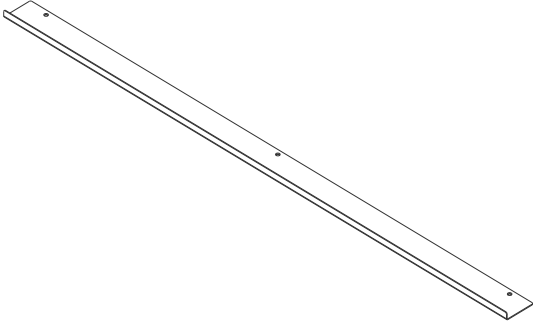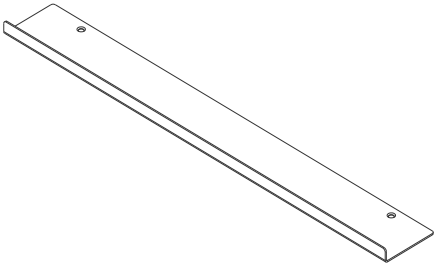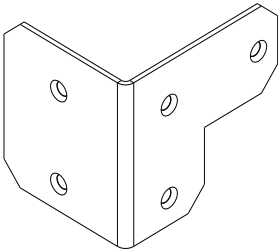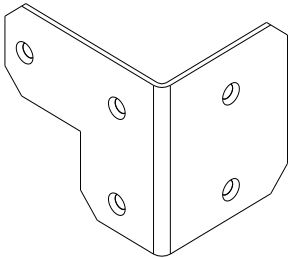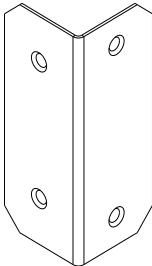
	
(#10) Bottom Back Panel x 1 PC	(#81) Track- Bottom x 1 PC
	
(#82) Door Anticollision Part x 1 PC	(#82-A) Door Anticollision Part- Long x 2 PCS
	
(#82-B) Door Anticollision Part - Short x 2 PCS	(#15) Corner Protection - A x 2 PCS
	
(#16) Corner Protection - B x 2 PCS	(#17) Middle Corner Protection x 2 PCS

PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

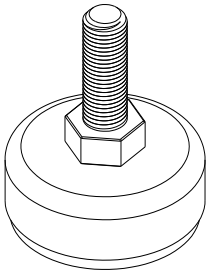


(#6) Leveling Feet x 4 PCS

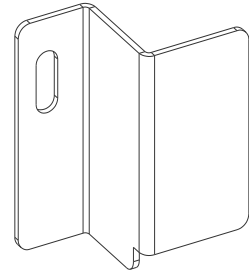


(#83) Door Lock Piece x 1 PC

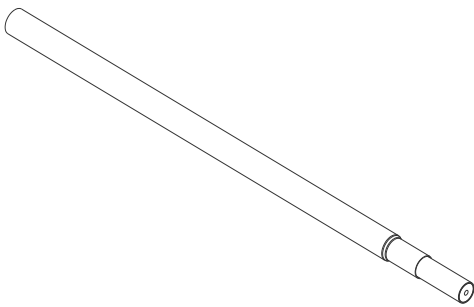


(#11-A) Stretch Hanging Rod x 1 PC

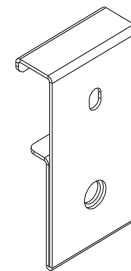


(#11-B) Hanging Rod Fixed Part x 2 PCS

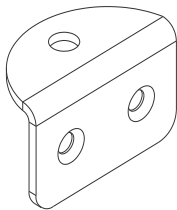


(#84) Hanging Door Part x 4 PCS

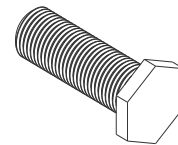

(#85) Screw (M6*20L) x 6 PCS




(#86) Nut (M6) x 4 PCS

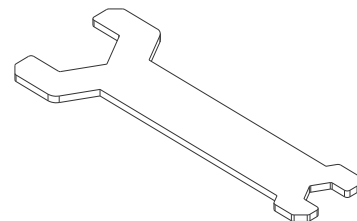


(#25-C) Wrench x 2 PCS

PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

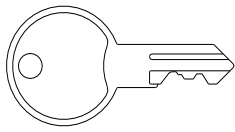


(#22) Key x 2 PCS




(#34) Hook x 8 PCS

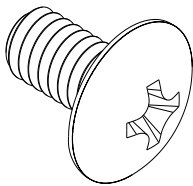


(#41) Screw F (M4 x 8L) x 78 PCS

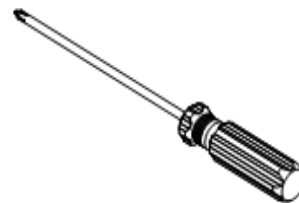


(#21) Screw Driver x 1 PC

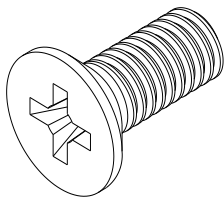

(#52) Screw K (M4 x 10L) x 77 PCS

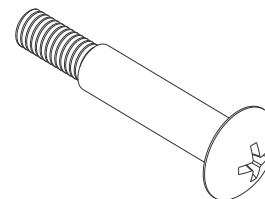

(#42) Screw G (M4 x 30L) x 16 PCS

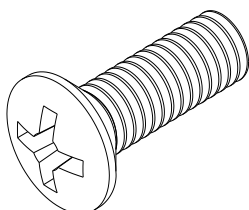








(#54) Screw N (M4 x 10L) x 28 PCS



(#88) Leading Axis x 4 PCS

PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

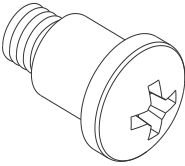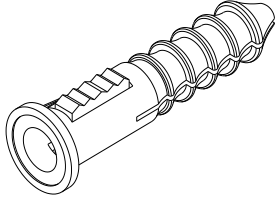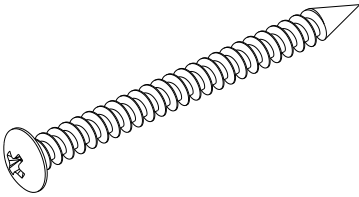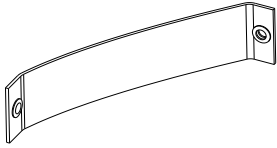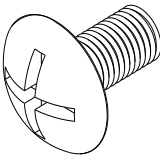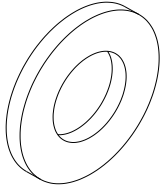	
(#19) Screw L (M5*10L) x 4 PCS	(#55-A) Wall Anchor x 2 PCS
	
(#55) Screw M (M6 x 50L) x 2 PCS	(#60) Mounting Strap x 2 PCS
	
(#61) Screw O (M4 x 12L) x 2 PCS	(#27-B) WASHER (M8)x 2 PCS
	
(#27) WASHER (M4) x 2 PCS	

UltraHD® Mega Storage Cabinet (Model No. UHD16270)




*NOTE: We recommend using TWO people to assemble the cabinet.

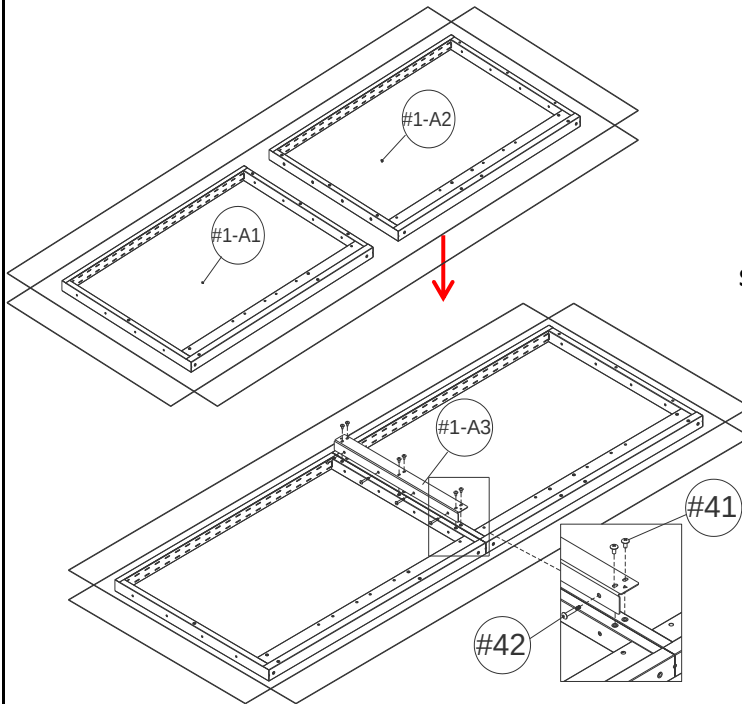

Step 1: Install (#1-A) Left Side Panel.


Place the (#1-A1) Left Side - Upper Panel and (#1-A2) Left Side - Bottom Panel together, place the (#1-A3) Side Panel Connection Part on the side panel as right picture, line up screw holes, use 4 pcs of (#42) Screw G to tighten from the side, then use 6 pcs of (#41) Screw F to tighten from the top side.

Note: Make sure the (#1-A1) Left Side Upper Panel is flush with (#1-A2) Left Side Bottom Panel.

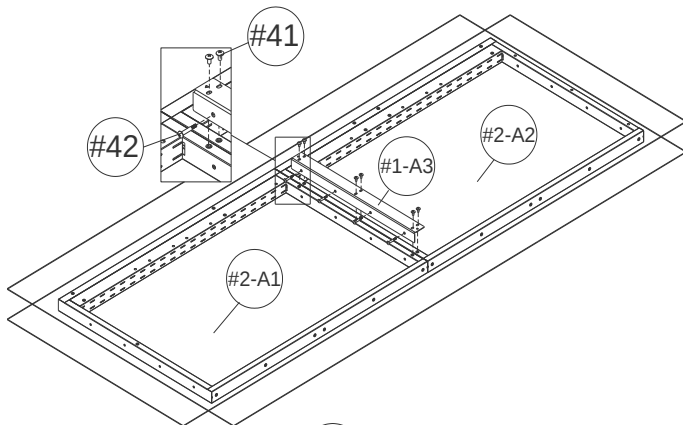

Step 2: Install (#2-A) Right Side Panel.


Repeat Step 1, use (#2-A1) Right Side Upper Panel, (#2-A2) Right Side Bottom Panel, (#1-A3) Side Panel Connection Part, 4 pcs of (#42) Screw G and 6 pcs of (#41) Screw F to install (#2-A) Right Side Panel.

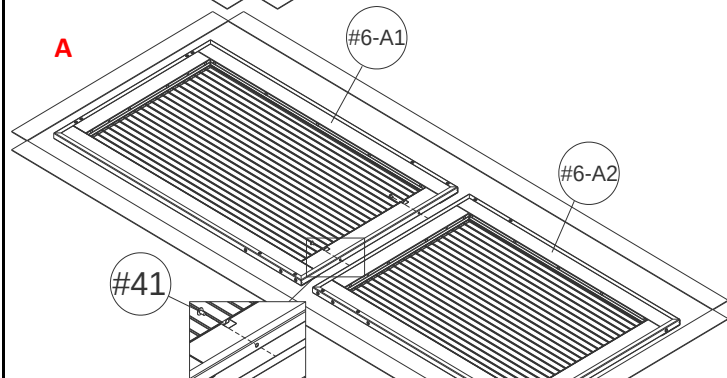

Step 3: Install (#6-A) Left Door.

1). Place (#6-A1) Left Door - Upper Panel and (#6-A2) Door - Bottom Panel together, line up screw holes, use 2 pcs of (#41) Screw F to tighten from the side.

2). Place the (#6-A3) Door Panel Connection Part on the right of the door as the picture, line up the screw holes, use 9 pcs of (#52) Screw K to tighten.

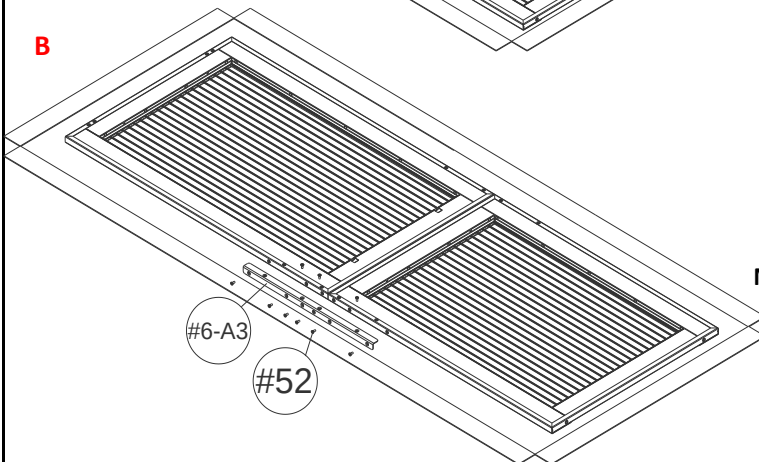


Note: Make sure the (#6-A1) Left Door - Upper Panel is flushed with (#6-A2) Left Door - Bottom Panel.

UltraHD® Mega Storage Cabinet (Model No. UHD16270)




*NOTE: We recommend using TWO people to assemble the cabinet.

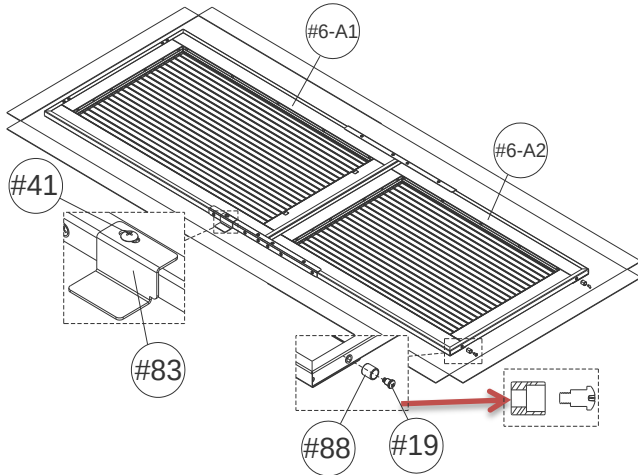


Step 4: Install (#83) Door Lock Piece and (#88) Leading Axis

Attach (#83) Door Lock Piece to Left Door, adjust the center position with OB hole, line up the screw holes, use 1 pc of (#41) Screw F to tighten, use 2 pcs of (#19) Screw L and (#88) Leading Axis to tighten on (#6-A2) Left Door - Bottom Panel.

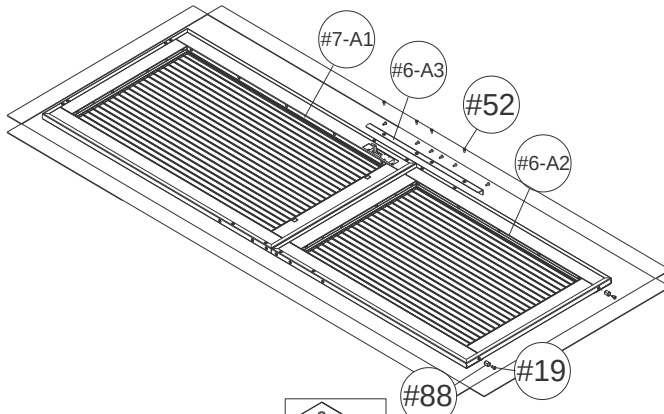

Step 5: Install (#7-A) Right Door.

Attach (#7-A1) Right Door - Upper Panel to (#6-A2) Door - Bottom Panel, use 2 pcs of (#41) Screw F to tighten, place (#6-A3) Door Panel Connection Part on left side of the door, line up the screw holes, use 10 pcs of (#52) Screw K to tighten.

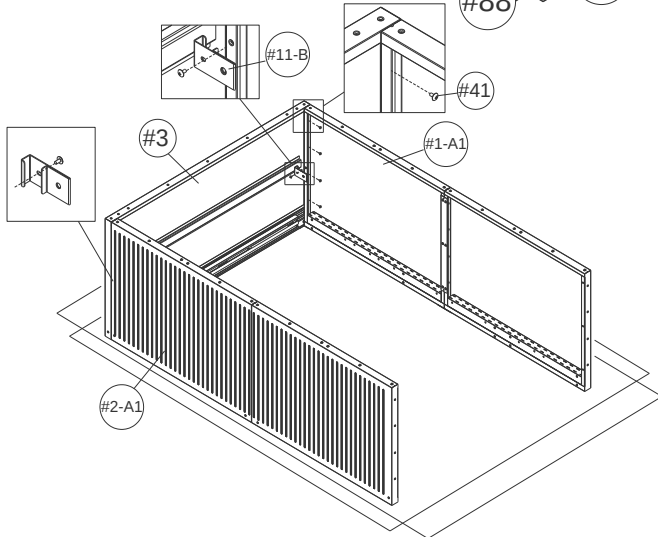


Step 6: Install (#3) Top Panel to (#1-A1) Left Side Upper Panel and (#2-A1) Right Side Upper Panel.

Attach (#3) Top Panel to (#1-A1) Left Side Upper Panel and (#2-A1) Right Side Upper Panel. Make sure the front of the panel faces downward. Line up screw holes, use 8 pcs of (#41) Screw F to tighten.

Take out 2 pcs of (#11-B) Hanging Rod Fixed Part, Line up screw holes, use 2 pcs of (#41) Screw F to tighten between the left and right side panels and Top Panel.

Note: Before tightening screws, make sure the bottom corners of (#1-A1, #2-A1) Left Side Upper Panel and Right Side Upper Panels are completely flush with the back and front corners of (#3) Top Panel.

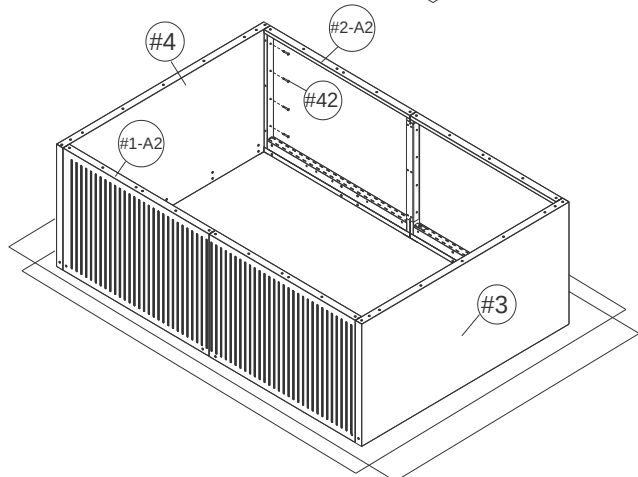

Step 7: Install (#4) Bottom Panel


Attach (#4) Bottom Panel to (#1-A2) Left Side Bottom Panel and (#2-A2) Right Side Bottom Panel, line up screw holes, use 8 pcs of (#42) Screw G to tighten.

Note: Before tightening screws, make sure the bottom corners of (#1-A2, #2-A2) Left Side Bottom Panel and Right Side Bottom Panels are completely flush with the back and front corners of (#4) Bottom Panel.

UltraHD® Mega Storage Cabinet (Model No. UHD16270)




*NOTE: We recommend using TWO people to assemble the cabinet.

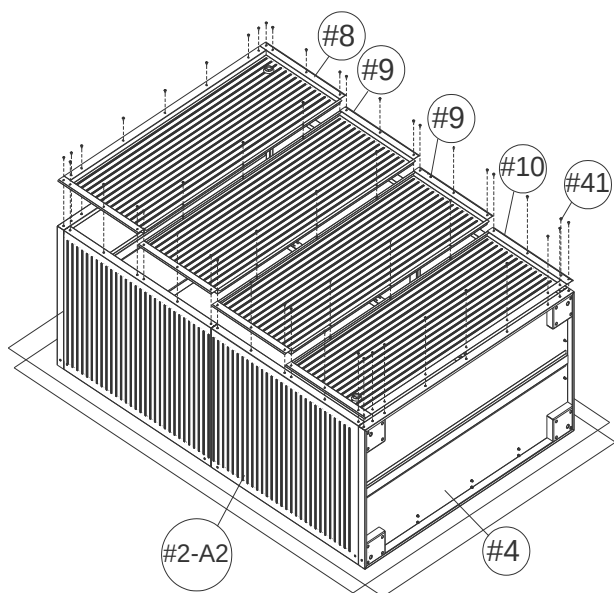


Step 8: Install (#8, #9 and #10) Back Panels.

- 1). Attach (#10) Bottom Back Panel onto both Bottom of Left and Right Side Panels (#1-A2 and #2-A2) and Bottom Panel (#4), line up screw holes, use 15 pcs of (#41) Screw F to tighten.
- 2). Attach 2 pcs of (#9) Middle Back Panel above (#10) Bottom Back Panel the same way. Place the groove of the (#9) Middle Back Panel onto the top edge of the (#10) Bottom Back Panel, use 12 pcs of (#41) Screw F to tighten. Don't tighten screws fully.
- 3). Use 15 pcs of (#41) Screw F to install (#8) Upper Back Panel the same way. Then use 6 pcs of (#41) Screw F to tighten the upper, middle and bottom back panel connection, then lock all screws of step 1, step 2, step 3 together.

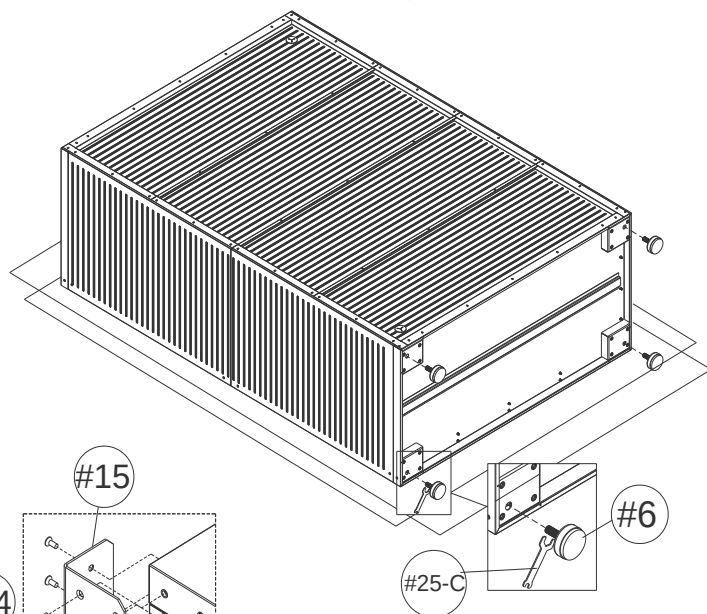

Step 9: Install (#6) Leveling Feet.

Attach (#6) Leveling Feet to the four corners of (#4) Bottom Panel, use (#25-C) Wrench to tighten.

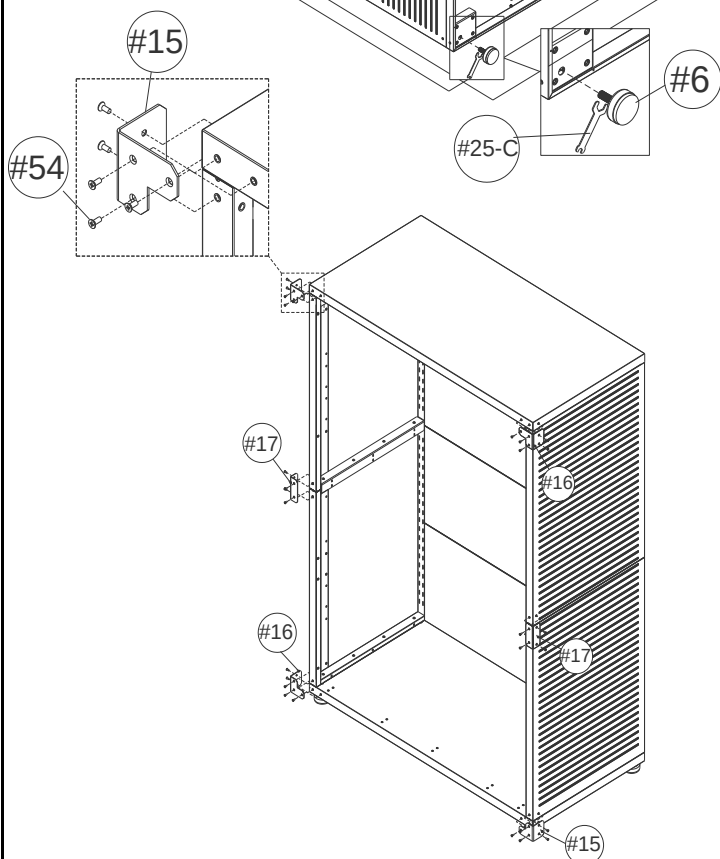

Step 10: Install (#15, #16 and #17) Corner Protections.

- 1). Attach (#15, #16) Corner Protection A, B onto Top and Bottom of the cabinet, use 20 pcs of (#54) Screw N to tighten.
- 2). Attach (#17) Middle Corner Protection to the middle of (#1-A) Left Side Panel and (#2-A) Right Side Panel, use 8 pcs of (#54) Screw N to tighten.

UltraHD® Mega Storage Cabinet (Model No. UHD16270)



*NOTE: We recommend using TWO people to assemble the cabinet.



Step 11: Install (#82-A) Door Anticollision Part- Long and (#82-B) Door Anticollision Part - Short

Attach 2 pcs of (#82-A) Door Anticollision Part- Long to Left and Right side Upper Panel, line up screw holes, use 12 pcs of (#52) screws to tighten.

Attach 2 pcs of (#82-B) Door Anticollision Part - Short to Left and Right side Bottom Panel, line up screw holes, use 12 pcs of (#52) screws to tighten.。

Note: The edgefold of Door Anticollision Part is outward.

Step 12: Install (#81) Track- Bottom

Attach (#81) Track- Bottom to the front of bottom panel, line up screw holes, use 10 pcs of (#52) screws to tighten.

Step 13: Install (#5) Middle Shelves.

1). Decide the height for the each Middle Shelf (#5). Place 1 pc of (#34) Hook into the hook slot where each corner of shelf should be placed. Make sure the hooks supporting each shelf are at same height.

Note: All (#5) Middle Shelves need a hook at each corner to support it.

2). Place each (#5) Middle Shelf into cabinet and push down onto (#34) Hooks.

UltraHD® Mega Storage Cabinet (Model No. UHD16270)





*NOTE: We recommend using TWO people to assemble the cabinet.



Step 14: Install (#11-A) Stretch Hanging Rod

Attach (#11-A) Stretch Hanging Rod to (#11-B) Hanging Rod Fixed Part on the left and right side panels, line up screw holes, use 2 pcs of (#85) screws with wrench (#25-C) to tighten.

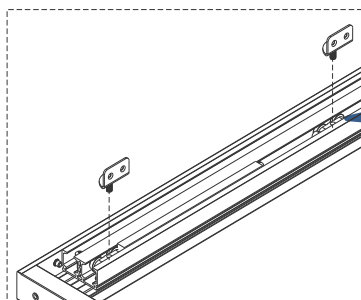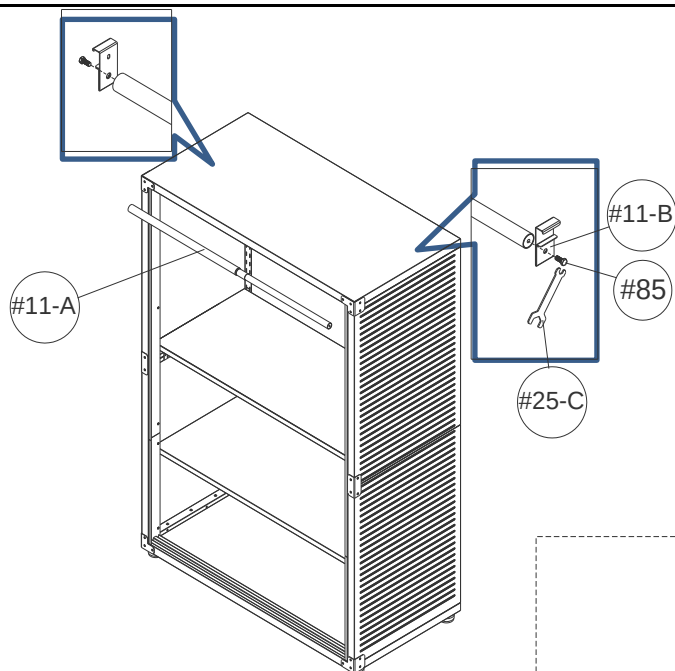


Screws for Hanging Door Part face to hole of Buffer

Step 15: Install (#84) Hanging Door Part

Attach 4 pcs of (#85) screw, 4 pcs of (#84) Hanging Door Part, and 4 pcs of (#86) Nut to the buffer and tighten, each track has 2pcs.

Note: When assembling the buffer, leave about 3mm distance between (#84) Hanging Door Part and Top panel, The plane of 4 pcs of Hanging Door Part face outward and the holes face inward, this may easier to assemble door panels later.

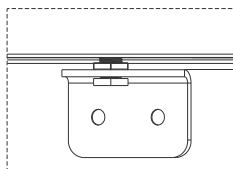


About 3MM

Step 16: Install (#6-A) Left Doors.

Insert (#6-A) left door panel into inside track of (#81) Track-Bottom, attach the door to inside 2 pcs of (#84) Hanging Door Part, line up screw holes, use 4 pcs of (#52) screws to tighten.

Note: We recommend using TWO people to assemble Door Panel.

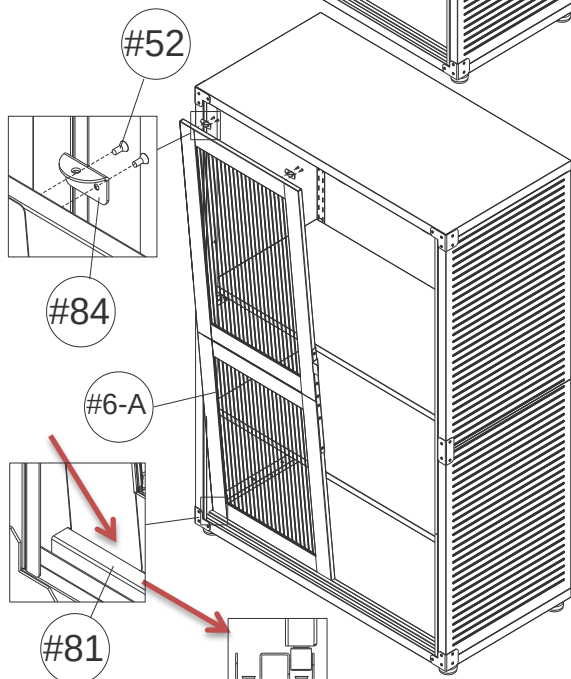

UltraHD® Mega Storage Cabinet (Model No. UHD16270)



*NOTE: We recommend using TWO people to assemble the cabinet.




Step 17: Adjust the top and bottom gap of the left door panel

Firstly, use a level to adjust the body of cabinet, and use (#25-C) wrench to turn and adjust Leveling Feet. Then use (#25-C) wrench to turn (#85) screw to adjust the top and bottom gap of the left door panel.

Note: The space between the door panel and the edge of the top cover is about 7mm, and pay attention to adjust Hanging Door Part on both sides at the same time.

When adjusted to the appropriate distance, use 2 pcs of (#25-C) wrench, one for (#86) screw and another for (#85) screw, turn them in opposite direction at the same time to tighten them to the Hanging Door Part.

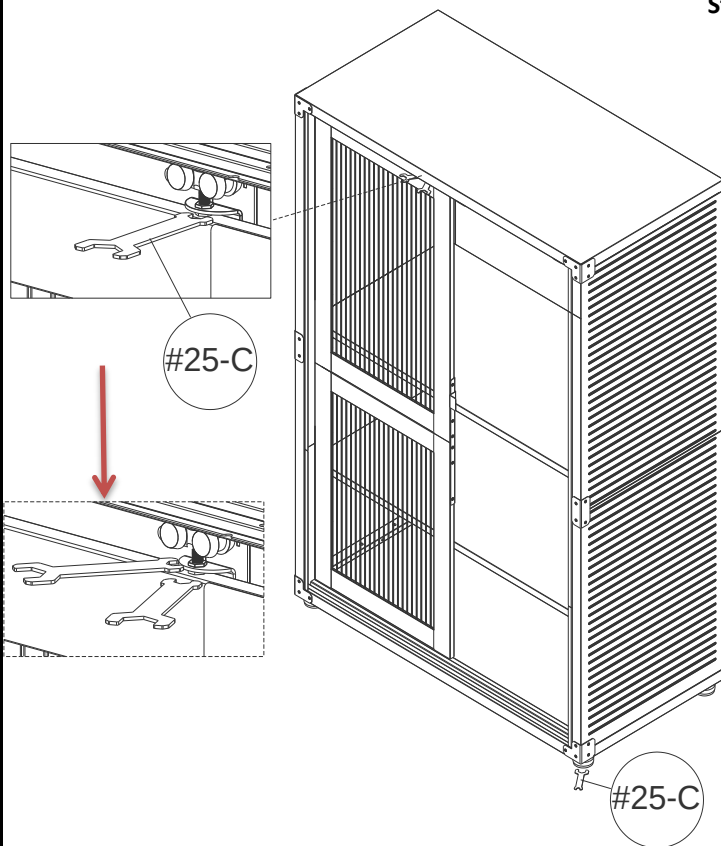


Step 18: Install (#7-A) Right Doors.

Insert (#7-A) Right door panel into outside of track (#81) track - Bottom, attach the door to outside (#84) Hanging Door Part, line up screw holes, use 2 pcs of (#52) screws to tighten.

Pull the left door panel (#6-A) to the right to avoid the overlapping position of the hanging door accessory (#84) on the left, line up screw holes, use 2 pcs of (#52) screws to tighten.

Repeat Step 17, adjust the top and bottom gap of the left door panel.

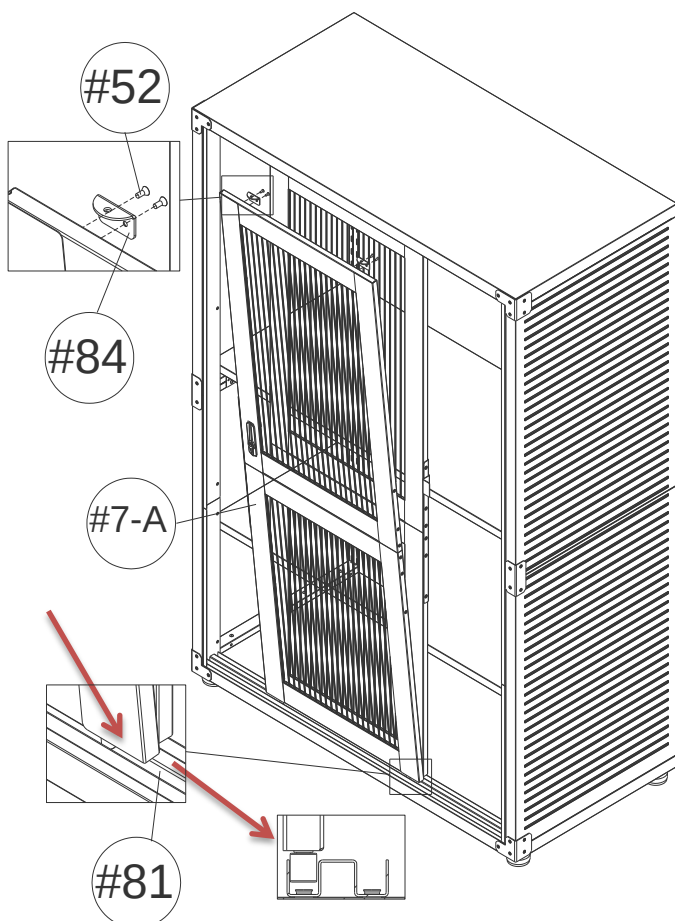

UltraHD® Mega Storage Cabinet (Model No. UHD16270)




*NOTE: We recommend using TWO people to assemble the cabinet.




Step 19: Install (#6-A4 & #7-A4) Handle - Left Door & Right Door

- Attach (#6-A4) Handle - Left Door to Left Door, line up screw holes, use 10 pcs of (#52) to tighten.
- Attach (#7-A4) Handle - Right Door to Right Door, line up screw holes, use 10 pcs of (#52) to tighten.
- Attach the (#82) Door Anti-collision Part on Right handle, line up screw holes, use 2 pcs of (#52) to tighten.

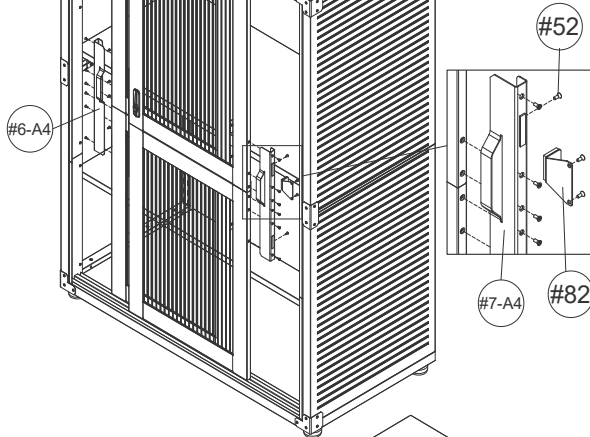


Note: When slowly pushing the door panel to close, if the door panel does not close and there is a gap between the door panel and the side panel, it means the “soft-close dampener” is released. To reset, please slowly push the door panel to the closed position against the side panel; the soft-close dampener will reset itself.

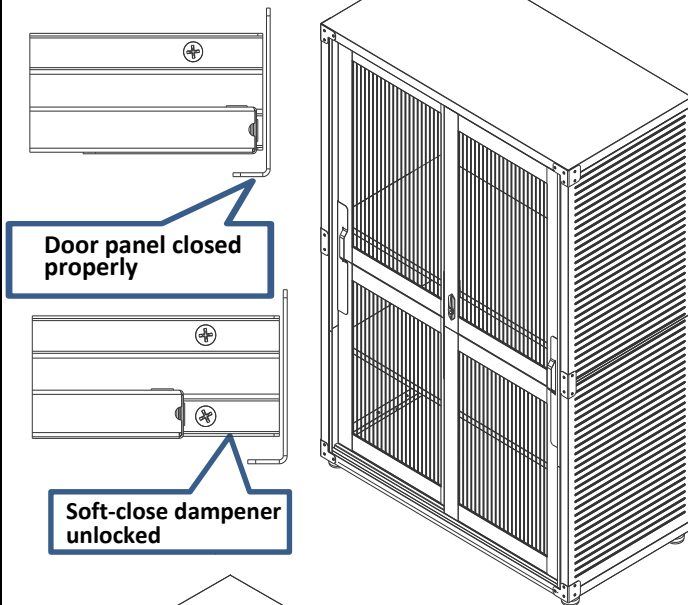

Step 20: Adjust lock piece


When locking, if lock hook interferes with the lock piece or fails to hook, please adjust it according to the following figure.

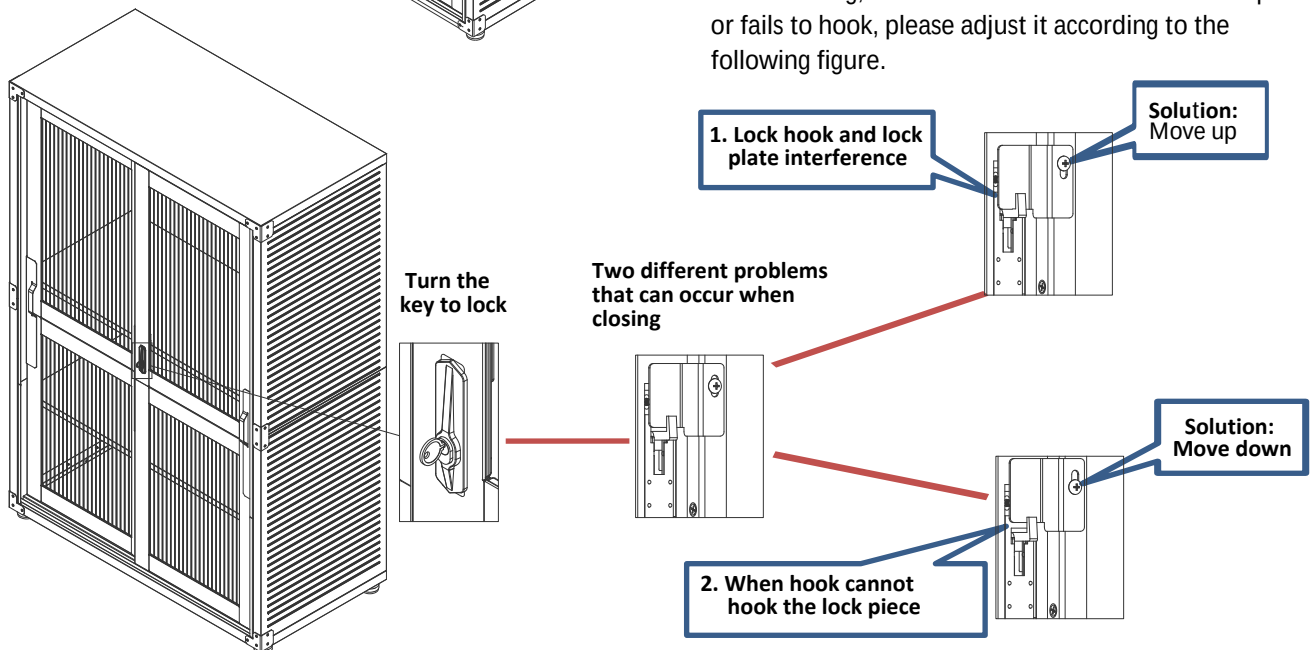

UltraHD® Mega Storage Cabinet (Model No. UHD16270)



*NOTE: We recommend using TWO people to assemble the cabinet.

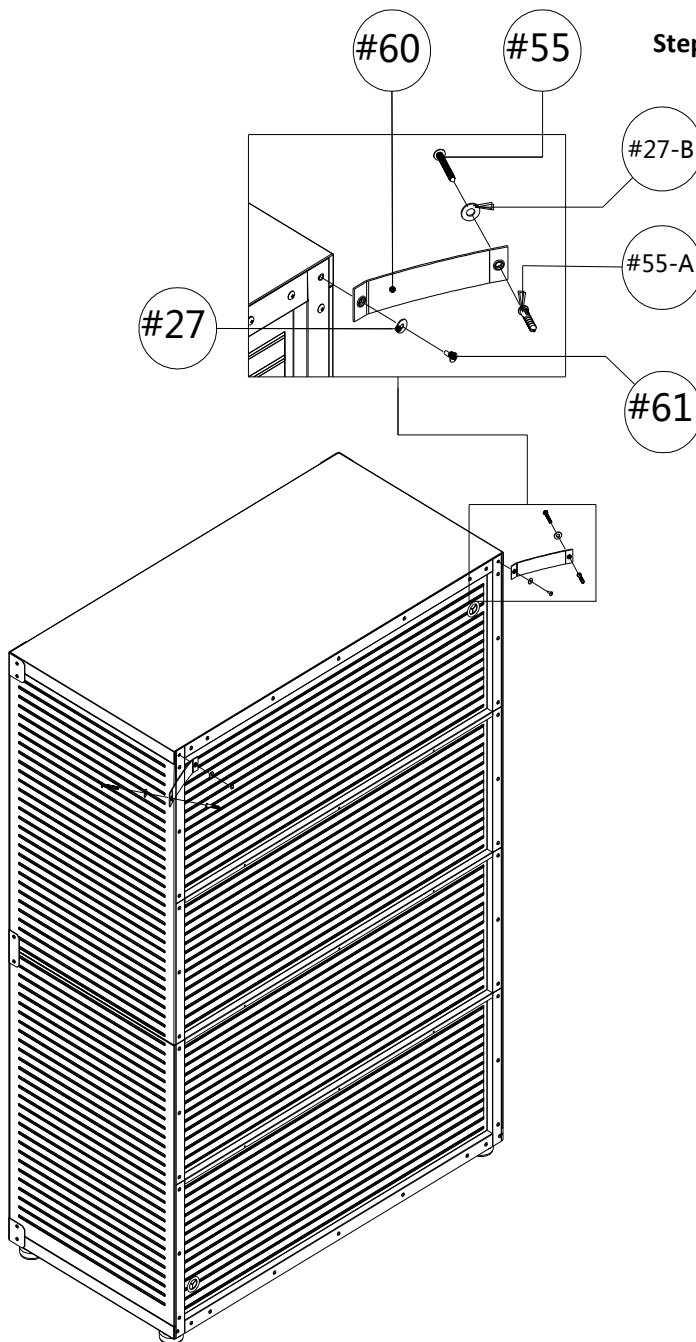

Step 21: Install Mounting Strap (#60)

A. Remove 1 pc Screw F (#41) from the back corner protection.

B. Attach the Mounting Strap (#60) to the back Corner Protection brackets as the left photo shows using Screw O (#61) and Washer (#27).

C. Drill a hole in the wall with a 5/16" drill bit, insert the Wall Anchor (#55-A) into the hole.

D. Attach the other end of the Mounting Strap (#60) to the wall using Screw M (#55) and Washer (#27-B).

Repeat steps A through D to install the other mounting strap.

UltraHD® Stainless Steel Care Instructions

The stainless steel is protected with UltraGuard® fingerprint resistant finish.

DO NOT use traditional stainless-steel cleaners. To safely manage unwanted fingerprints and prevent new stains, perform the following steps once monthly:

- Lightly wipe with warm water and clean microfiber cloth
- Always wipe in the direction of the surface grain (NEVER ACROSS)
- Wipe away excess water with dry clean cloth