

seville classics®  
**HOME**


## ASSEMBLY INSTRUCTIONS

### ACACIA WOOD MOBILE POTTING BENCH

Model No. FRNK04749B (black) and FRNK04750B (white)

48 in. W x 25 in. D x 60 in. H



(121.9 cm W x 63.5 cm D x 152.4 cm H)

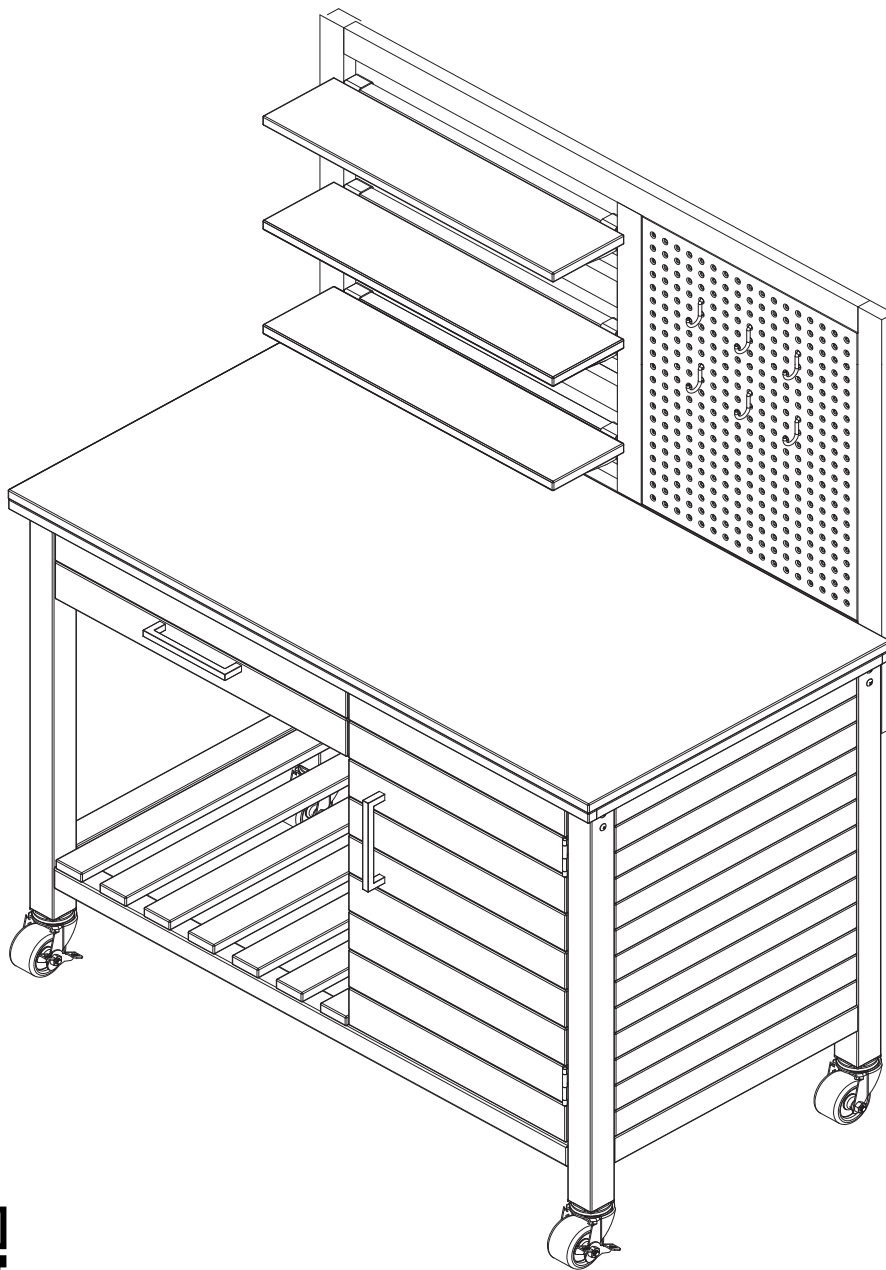

Scan for Assembly Video


<https://youtu.be/och0RBuyjzQ?si=1rMcojks185ONyTc>

TR081225

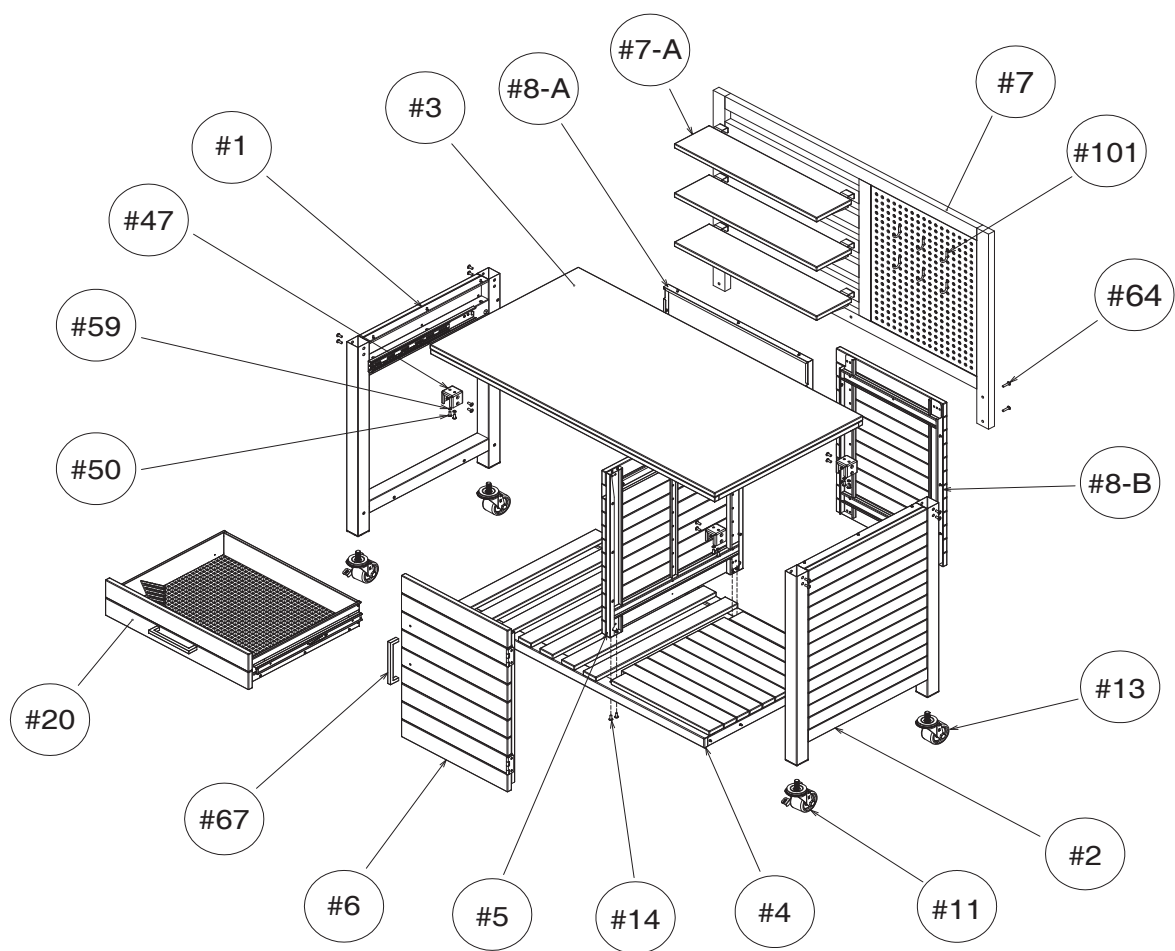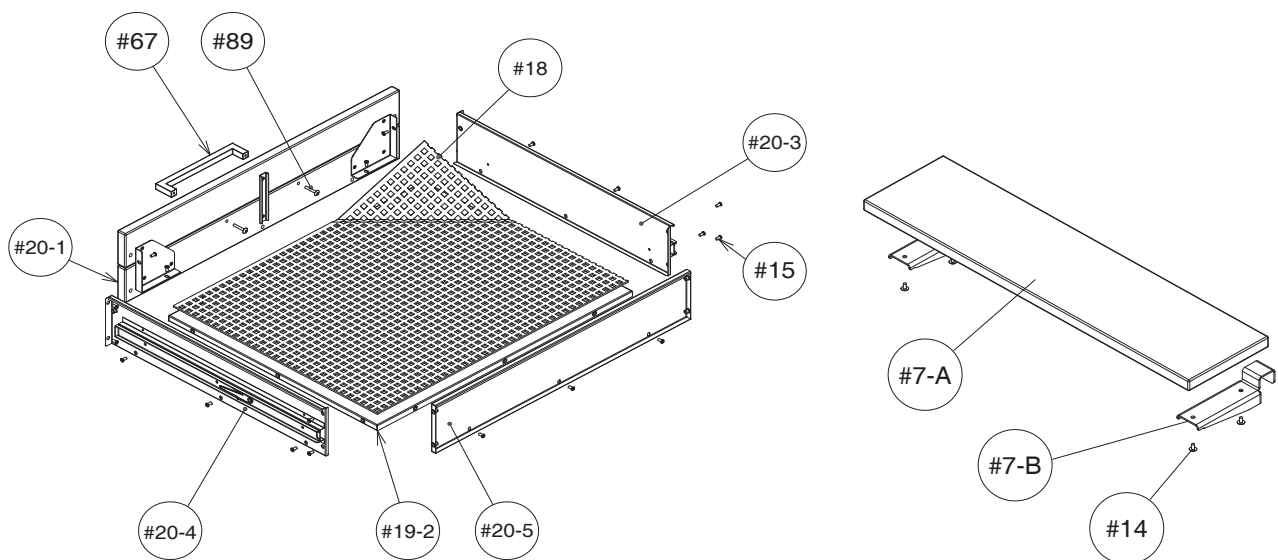


## PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

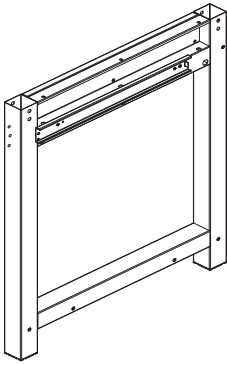


(#1) Left Frame x 1 PC

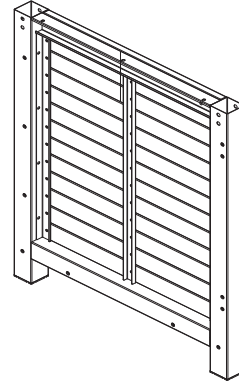


(#2) Right Panel x 1 PC

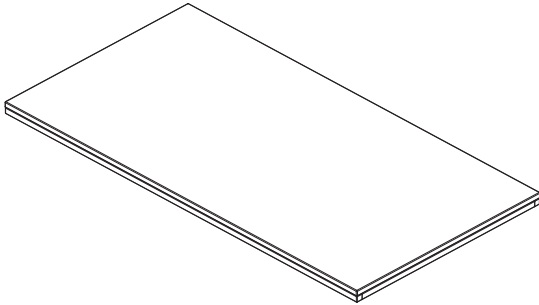


(#3) Wood Top x 1 PC

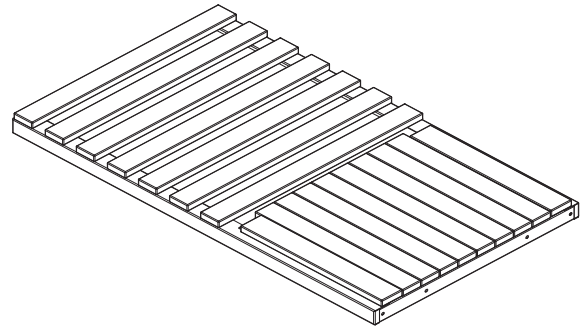


(#4) Bottom Panel x 1 PC

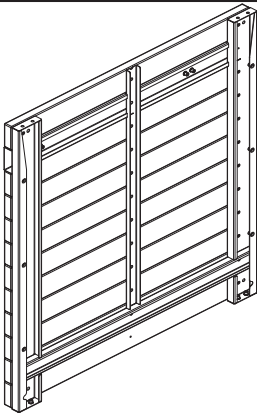


(#5) Middle Panel x 1 PC

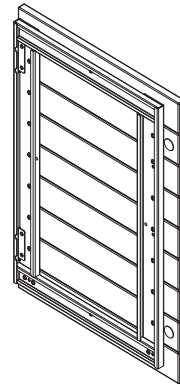

(#6) Cabinet Door x 1 PC

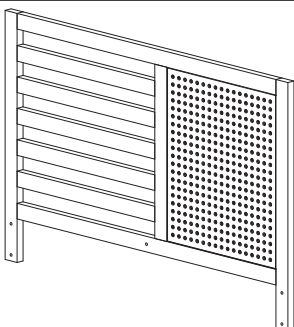









(#7) Pegboard x 1 PC

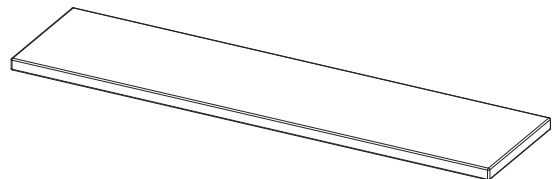

(#7-A) Shelf x 3 PCS


## PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

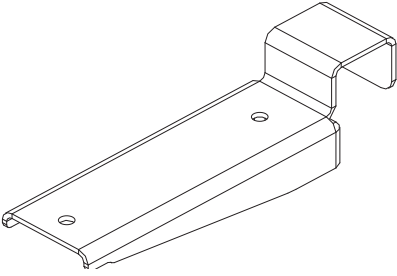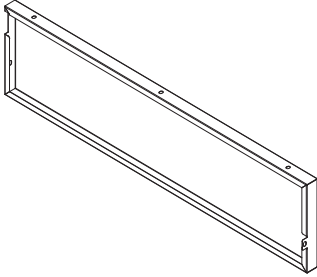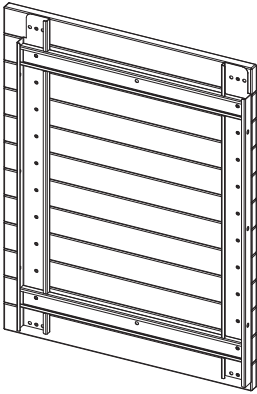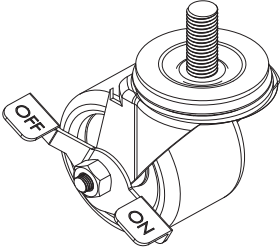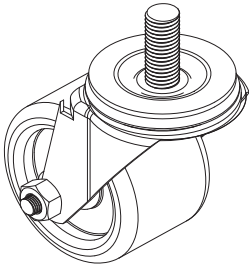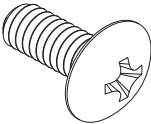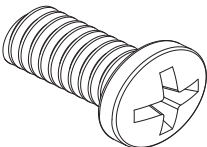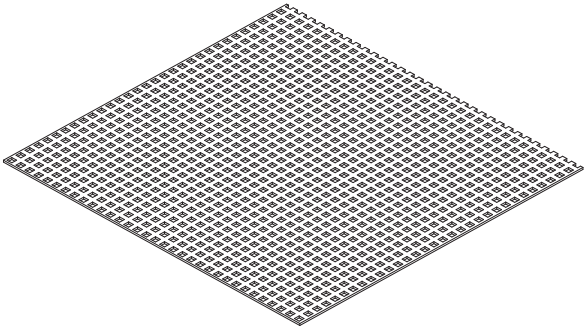
	
#(7-B) Shelf Hook x 6 PCS	#(8-A) Back Left Panel x 1 PC
	
#(8-B) Back Panel x 1 PC	#(11) 3" Wheel with Brake x 2 PCS
	
#(13) 3" Wheel w/o Brake x 2 PCS	#(14) Screw (M4 x 10L) x 49 PCS
	
#(15) Screw (M4 x 8L) x 24 PCS	#(18) Drawer Liner x 1PC

## PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

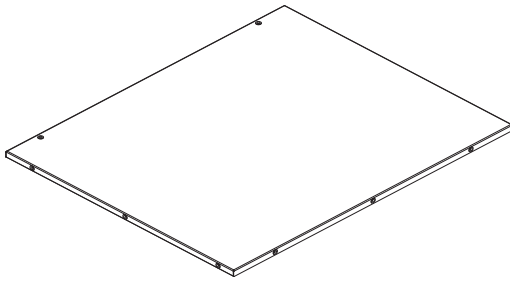


(#19-2) Bottom Drawer Panel x 1 PC

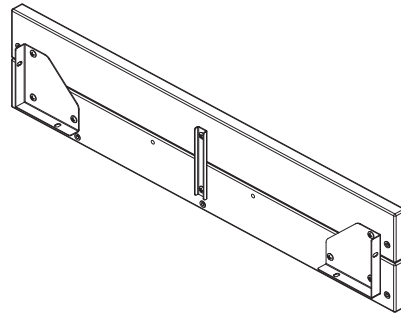


(#20-1) Front Drawer Panel x 1 PC

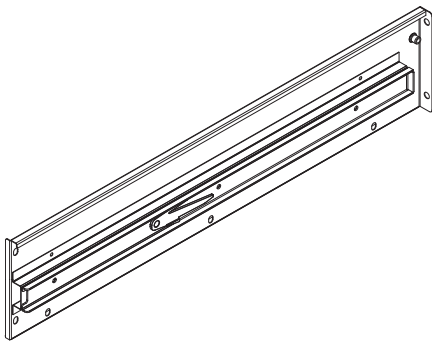


(#20-3) Left Drawer Panel x 1 PC

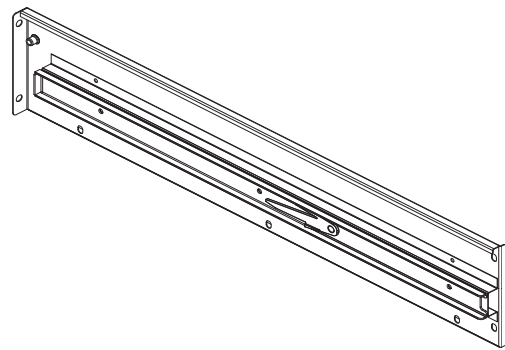


(#20-4) Right Drawer Panel x 1 PC

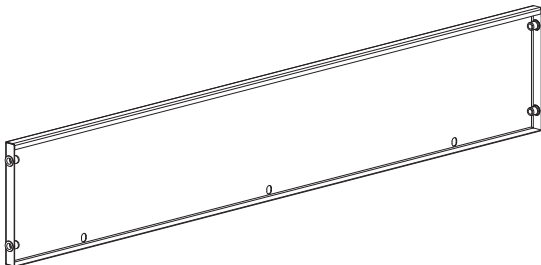


(#20-5) Back Drawer Panel x 1 PC

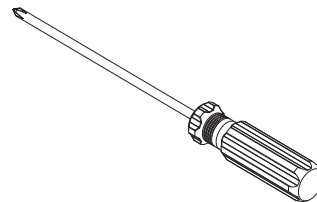

(#21) Screw Driver x 1 PC

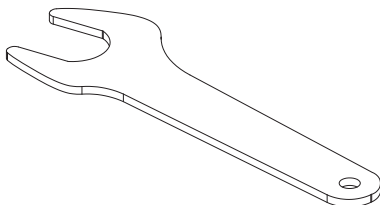


(# 25) Wrench x 1 PC

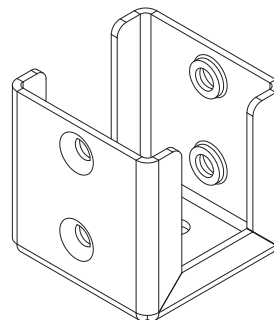


(#47) Woodboard Connector x 4 PCS

## PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 13).

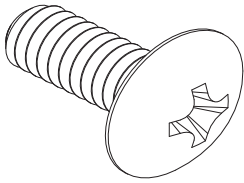


(#50) Screw (M6 x 15L) x 24 PCS

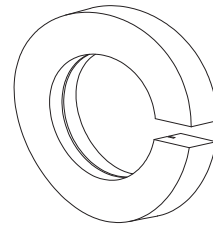


(#59) Washer (M6) x 8 PCS

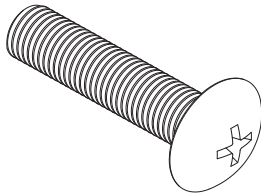


(#64) Screw (M6 x 25L) x 5 PCS

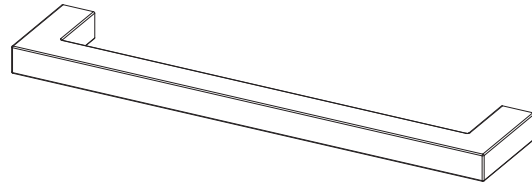

(#67) Handle x 2 PCS

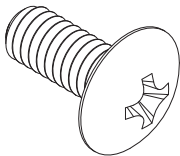

(#89) Screw (M4 x 25L) x 4 PCS

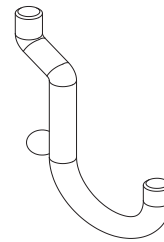

(#101) Hook x 6 PCS



(#102) Spacers x 12 PCS

# Seville Classics HOME Acacia Wood Mobile Potting Bench




**\*NOTE:** We recommend using TWO people to assemble the potting bench.

**TIP:** A magnetic screwdriver is included for your convenience. If a power screwdriver is used, keep on a low torque setting.


**Step 1.** Open all boxes, locate and remove the cardboard box containing Wood Top (#3). Set the other parts aside.

**TIP:** When assembling, place the Wood Top upside down on the cardboard to avoid scratching the top surface.

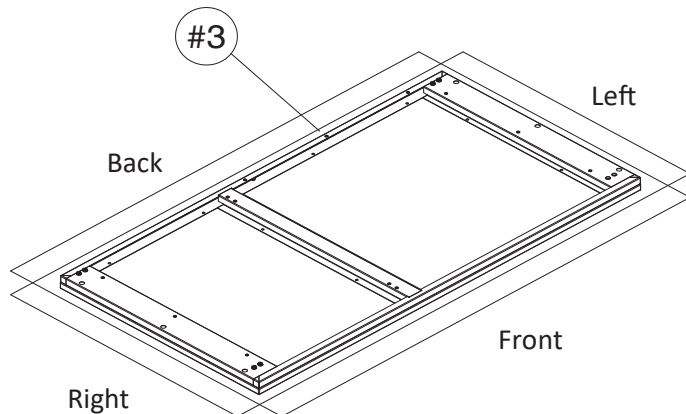

## **Step 2. Install Woodboard Connectors (#47)**

Place Woodboard Connectors (#47) at each corner of the Wood Top (#3). Attach using 8 M6X15L Screws (#50) and 8 Washers (#59). Tighten with a screwdriver.

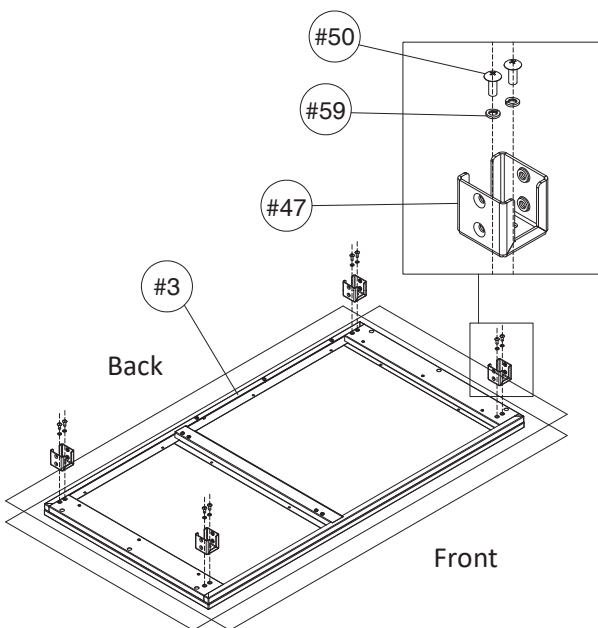


## **Step 3. Install Left Frame (#1)**

Slide Left Frame (#1) over the Woodboard Connectors (#47) on Wood Top (#3) as shown in the image.

**TIP:** Adjust the Woodboard Connectors (#47) by loosening and tightening them as needed to ensure the frame is positioned correctly.

Attach using 3 M4X10L Screws (#14) and 8 M6X15L Screws (#50). Tighten with a screwdriver.

**TIP:** Insert the screwdriver into holes on the Left Frame, as shown by the arrows in the image, to help with assembly and keep screws aligned.

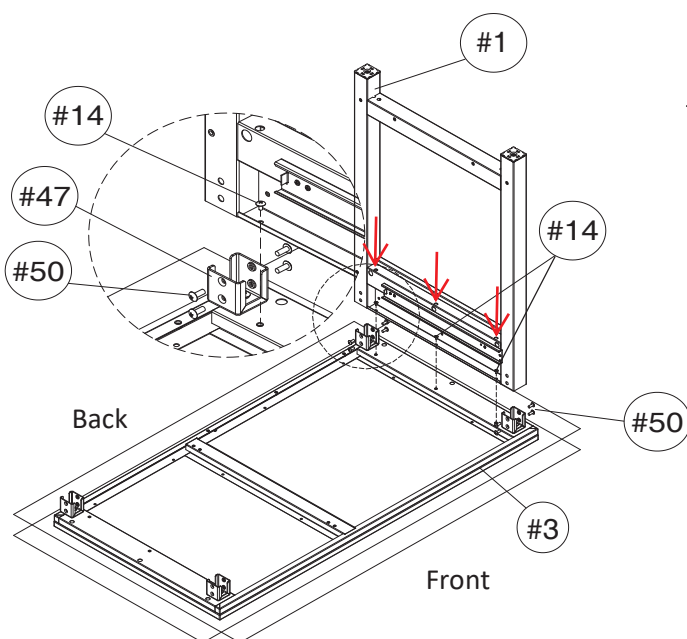




# Seville Classics HOME Acacia Wood Mobile Potting Bench



**\*NOTE:** We recommend using TWO people to assemble the potting bench.

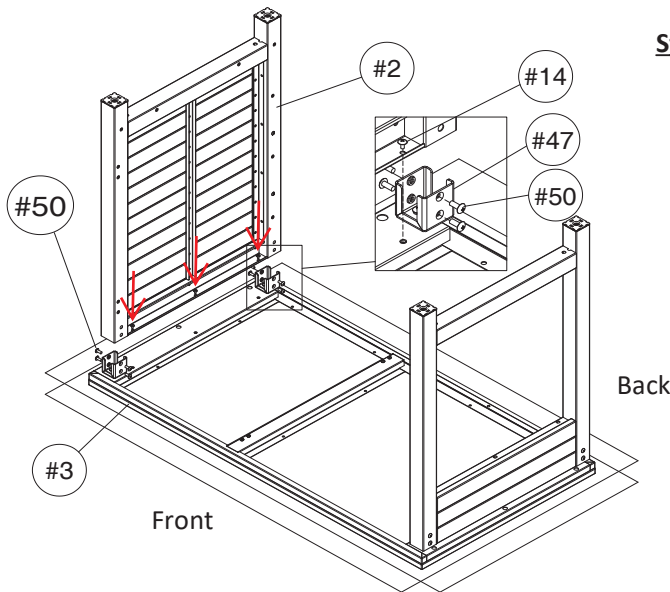


## **Step 4. Install Right Panel (#2)**

Slide the Right Panel (#2) over the Woodboard Connectors (#47) on Wood Top (#3) as shown in the image.

**TIP:** Adjust the Woodboard Connectors (#47) by loosening and tightening them as needed to ensure the panel is positioned correctly.


Use 3 M4X10L Screws (#14) and 8 M6X15L Screws (#50). Tighten with a screwdriver.

**TIP:** Insert the screwdriver into holes on the Right Panel, as shown by the arrows in the image, to help with assembly and keep screws aligned.

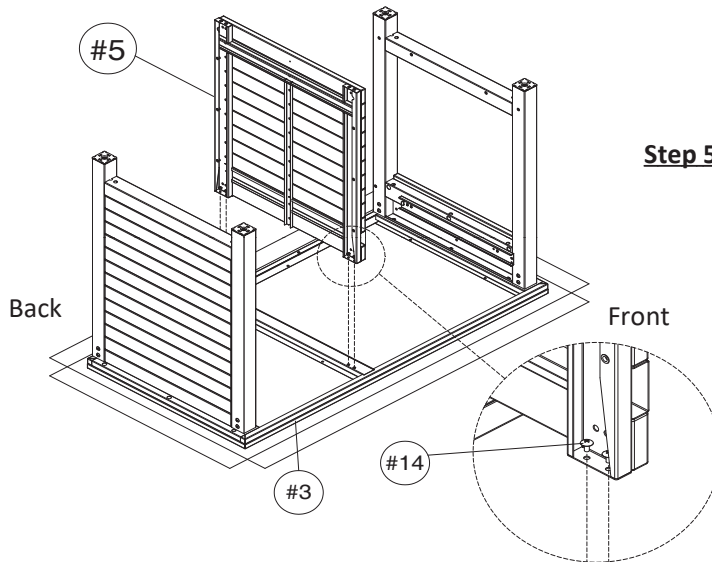

## **Step 5. Install Middle Panel (#5)**

Attach Middle Panel (#5) to Wood Top (#3) as shown in the image. Use 4 M4X10L Screws (#14). Tighten with a screwdriver.

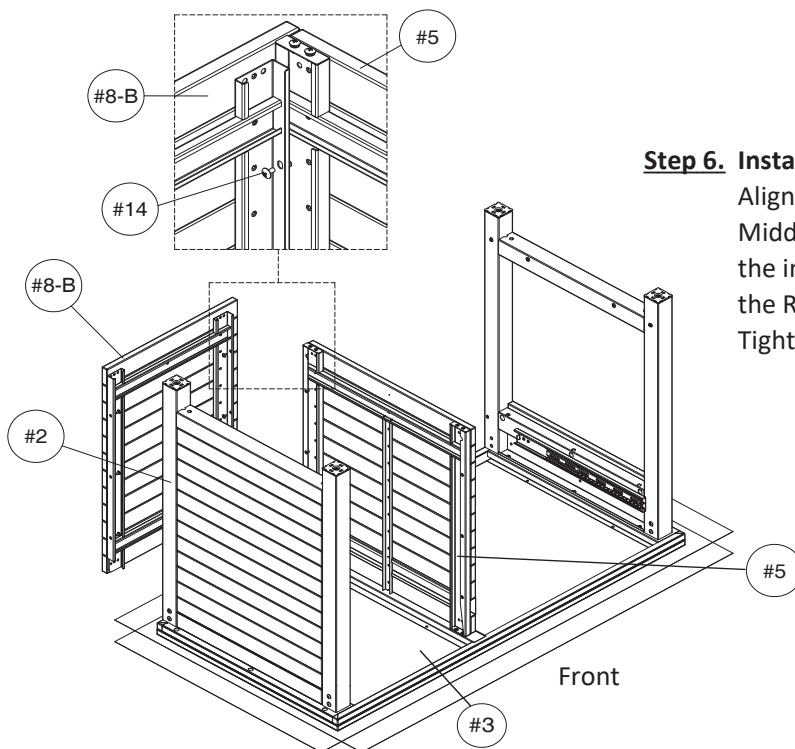

## **Step 6. Install Back Panel (#8-B)**


Align Back Panel (#8-B) with Right Panel (#2), Middle Panel (#5) and Wood Top (#3) as shown in the image. Use 6 M4X10L Screws (#14), 3 along the Right Panel and 3 along the Middle Panel. Tighten with a screwdriver.



# Seville Classics HOME Acacia Wood Mobile Potting Bench




**\*NOTE:** We recommend using TWO people to assemble the potting bench.

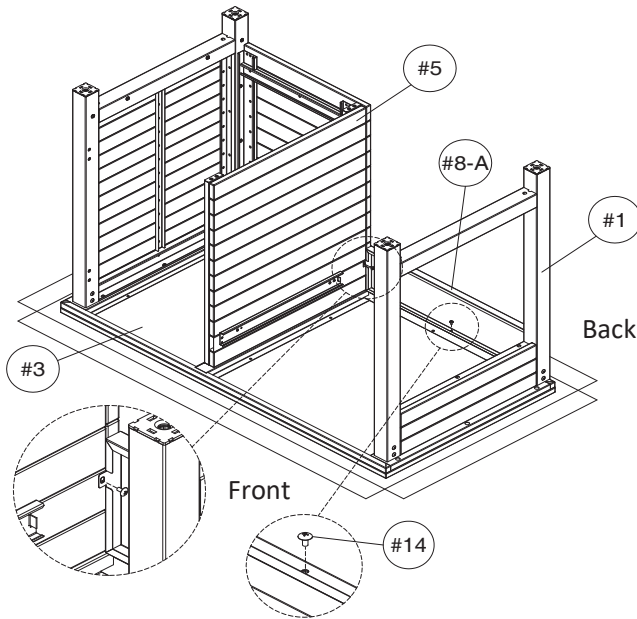


## **Step 7. Install Back Left Panel (#8-A)**

Attach Back Left Panel (#8-A) to Middle Panel (#5), Left Frame (#1) and Wood Top (#3) as shown in the left image. Use 5 M4X10L Screws (#14). Tighten with a screwdriver.

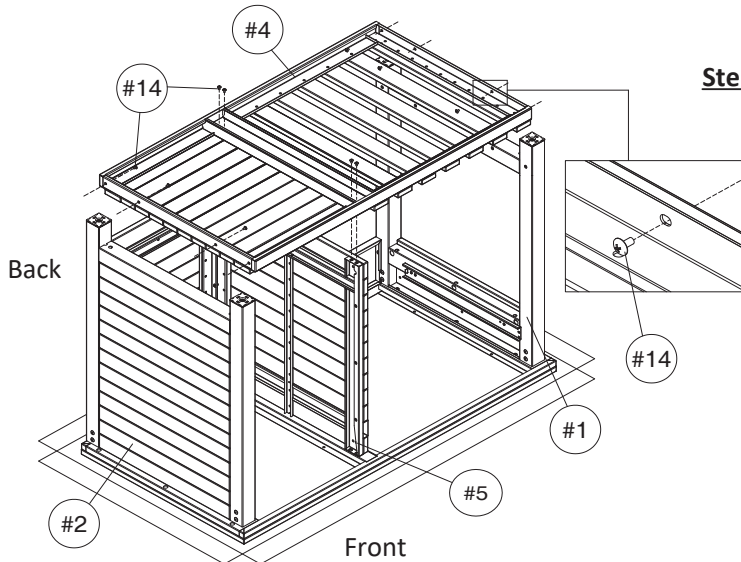

## **Step 8. Install Bottom Panel (#4)**

Attach Bottom Panel (#4) as shown in the image. Use 12 M4X10L Screws (#14), 4 along the Left Frame (#1), 4 along the Middle Panel (#5), and 4 along the Right Panel (#2). Tighten with a screwdriver.

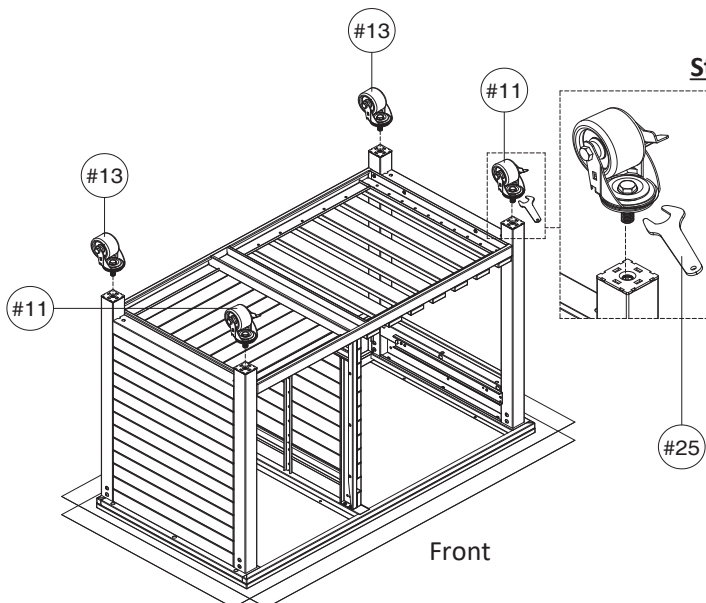

## **Step 9. Install Wheels (#11 & #13)**

Insert Wheels with Brake (#11) and Wheels w/o Brake (#13) into the front and back table legs. Tighten by hand first, then secure with the Wrench (#25).


**TIP:** Place Wheels with Brake (#11) on the same side.

After completing Step 9, flip the bench to its upright position.

## Seville Classics HOME Acacia Wood Mobile Potting Bench




\*NOTE: We recommend using TWO people to assemble the potting bench.

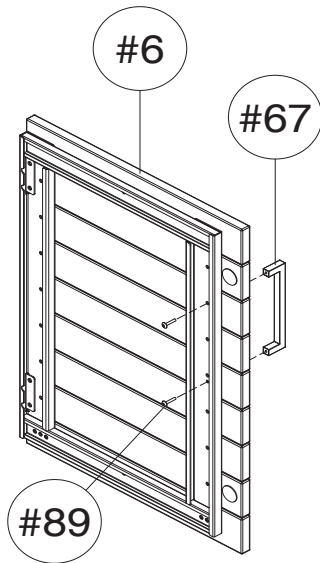

### **Step 10.** Install Cabinet Handle (#67)

Attach Handle (#67) to Cabinet Door (#6). Line up the screw holes then use 2 M4X25L Screws (#89). Tighten with a screwdriver.


**TIP:** Place on cardboard packaging when assembling to prevent scratches.

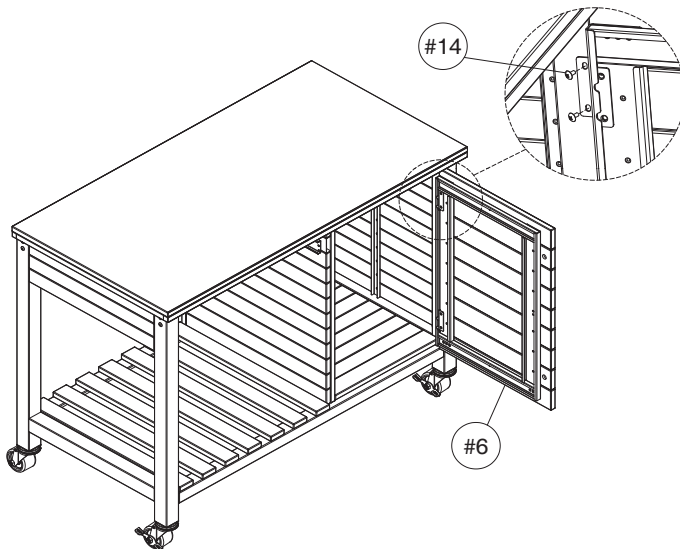

### **Step 11.** Install Cabinet Door (#6)

Attach Cabinet Door (#6) to the front right leg of the bench as shown in the image. Align the hinge screw holes to the screw holes on Right Panel (#2), and secure it with 4 M4X10L Screws (#14).

**Note:** The screw holes on the hinge are oval, allowing the door to be adjusted as necessary to align with Front Drawer Panel (#20-1).

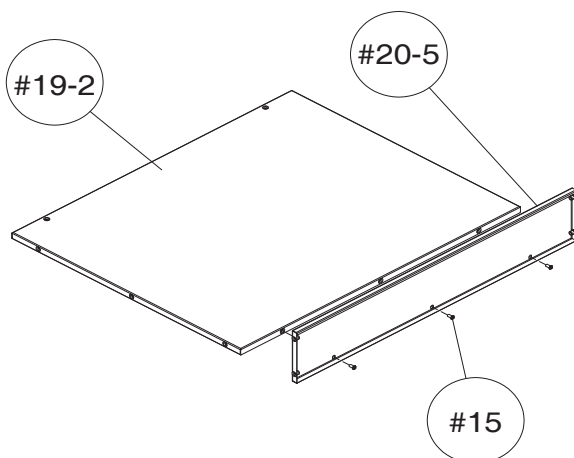

### **Step 12.** Install Back Drawer Panel (#20-5)

Attach Back Drawer Panel (#20-5) to Bottom Drawer Panel (#19-2) as shown in the image. Use 3 M4X8L Screws (#15). Tighten with a screwdriver.


## Seville Classics HOME Acacia Wood Mobile Potting Bench



\*NOTE: We recommend using TWO people to assemble the potting bench.


### **Step 13. Install Left and Right Drawer Panels (#20-3 & #20-4)**

Attach Left Drawer Panel (#20-3) and Right Drawer Panel (#20-4) on each side of the drawer. Use 10 M4X8L Screws (#15). Tighten with a screwdriver.

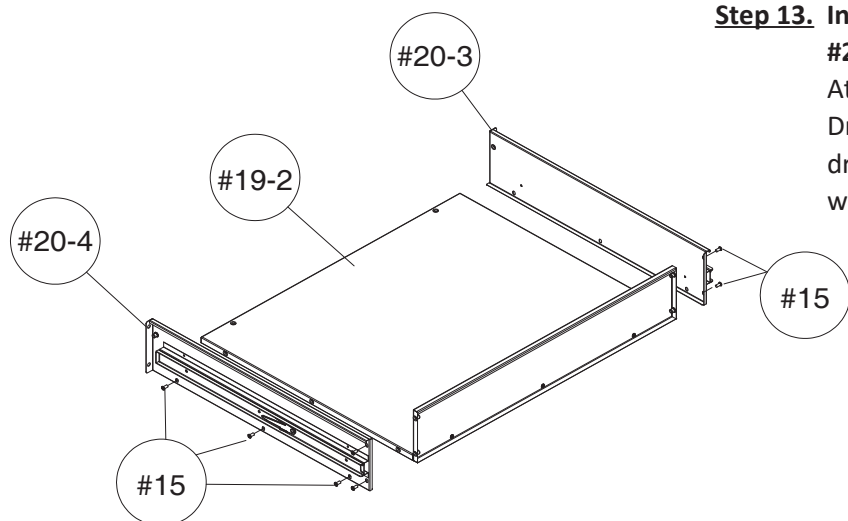


### **Step 14. Install Front Drawer Panel (#20-1)**

Align the drawer body with Front Drawer Panel (#20-1) as detail picture shows, use 11 M4X8L Screws (#15). Tighten with a screwdriver.

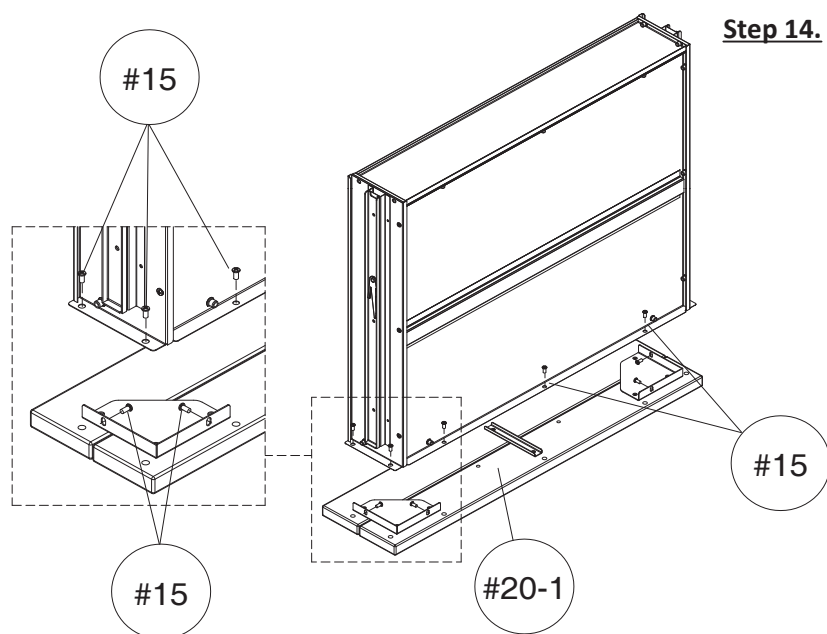

### **Step 15. Install Drawer Handle (#67)**


Attach Handle (#67) to Front Drawer Panel (#20-1). Line up the screw holes then use 2 M4X25L Screws (#89). Tighten with a screwdriver.

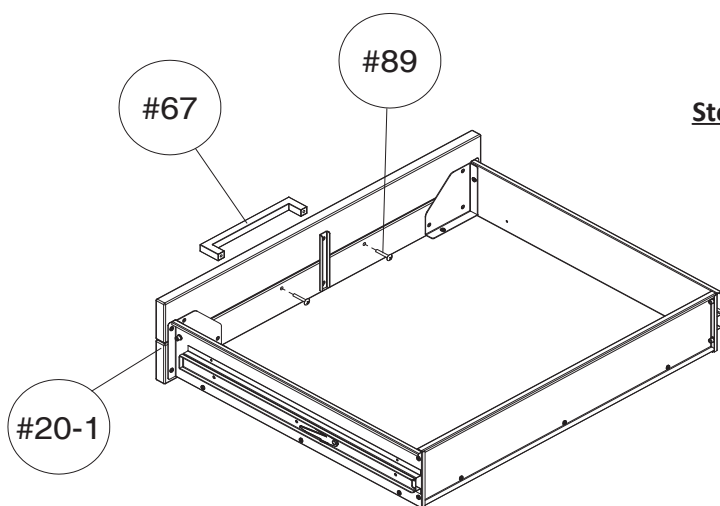

## Seville Classics HOME Acacia Wood Mobile Potting Bench




**\*NOTE:** We recommend using TWO people to assemble the potting bench.

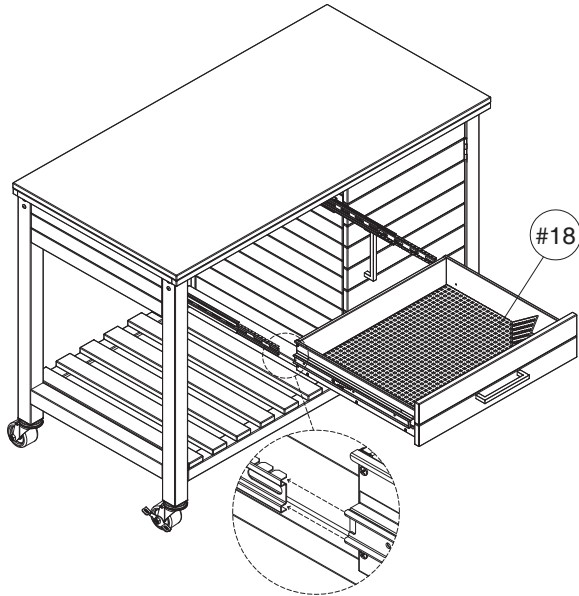

### **Step 16.** Install Drawer

**TIP:** Install the Drawer with the Cabinet Door open to prevent any scratches.

1. Pull out the drawer slides to full length and move the ball holder of the slide to the front.
2. Attach and fit the Drawer to the inner track of the slides then glide drawers in slowly.
3. Place Drawer Liner (#18) and lay flat.

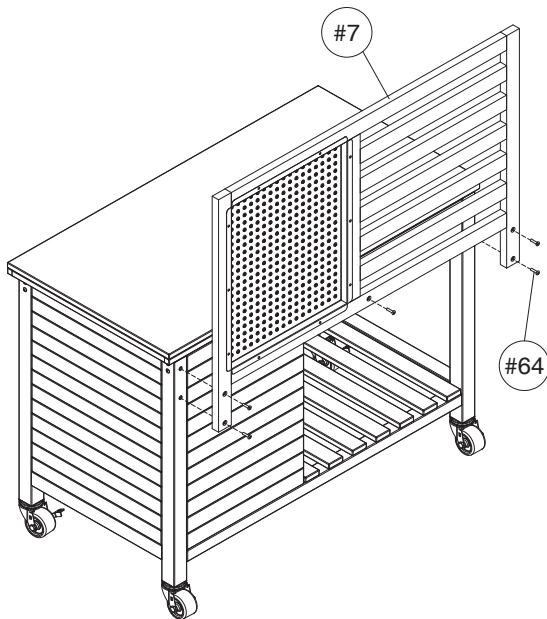



### **Step 17.** Install Pegboard (#7)

Attach Pegboard (#7) to the back of the bench, as shown in the image. Line up the screw holes and use 5 M6X25L Screws (#64). Tighten with a screwdriver.

## Seville Classics HOME Acacia Wood Mobile Potting Bench




\*NOTE: We recommend using TWO people to assemble the potting bench.

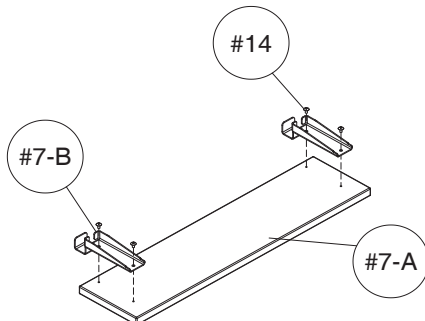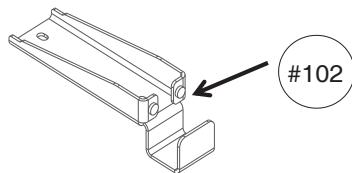


### **Step 18.** Install Shelves (#7-A)

Adhere two Spacers (#102) on each Shelf Hook (#7-B).

Attach two Shelf Hooks (#7-B) to each Shelf (#7-A), flat side on the shelf. Use 4 M4X10L Screws (#14). Tighten with a screwdriver.

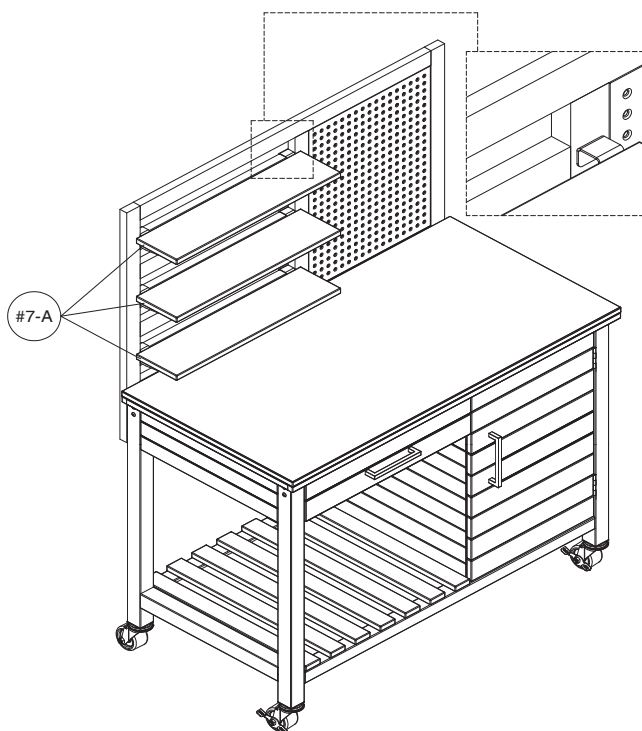

Place each Shelf (#7-A) on the horizontal slats. Distance between shelves can be adjusted as needed by reconfiguring them on the horizontal slats.

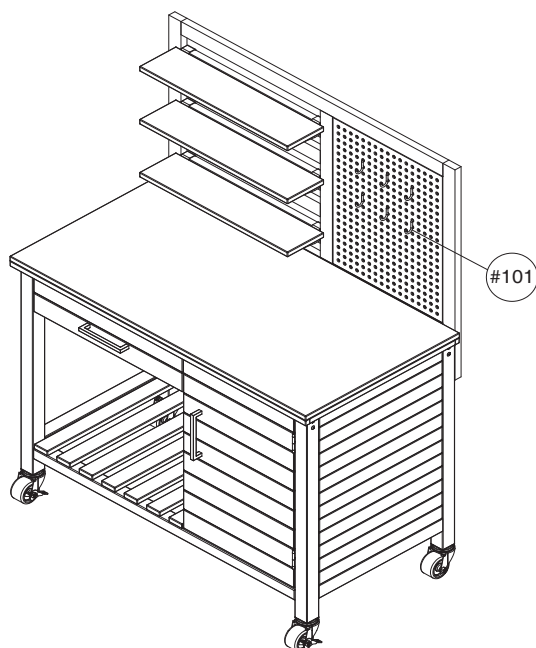

### **Step 19.** Hooks (#101)

Hang Hooks (#101) on the Pegboard (#7).

## CONTACT INFORMATION

If you are missing any parts, have any questions, or need additional assistance in assembly, please contact our bilingual (English and Spanish) customer service department at:



Seville Classics, Inc.  
19401 Harborage Way Torrance, CA 90501 USA  
Telephone: (800) 323-5565 within USA  
Fax: (310) 533-3899  
Hours: 8:30am - 4:30pm (Pacific Standard Time)  
E-mail: [support@sevilleclassics.com](mailto:support@sevilleclassics.com)  
Website & Online Store: [www.sevilleclassics.com](http://www.sevilleclassics.com)

**\*\*\*Please visit our website or call and inquire about our additional Items\*\*\***