

SECURE YOUR ROLLER SHADES FOR WINDOWS IN MILD TO MODERATE WIND CONDITIONS


IF YOU ARE MISSING A PACKAGE, PLEASE CONTACT US.
1-201-313-0100

INSTALLATION DIAGRAM

! ONLY GREY COLOR AVAILABLE
2-SCREWS INCLUDED/UNIT






BOTTOM BAR
SCREWS
HOLDER

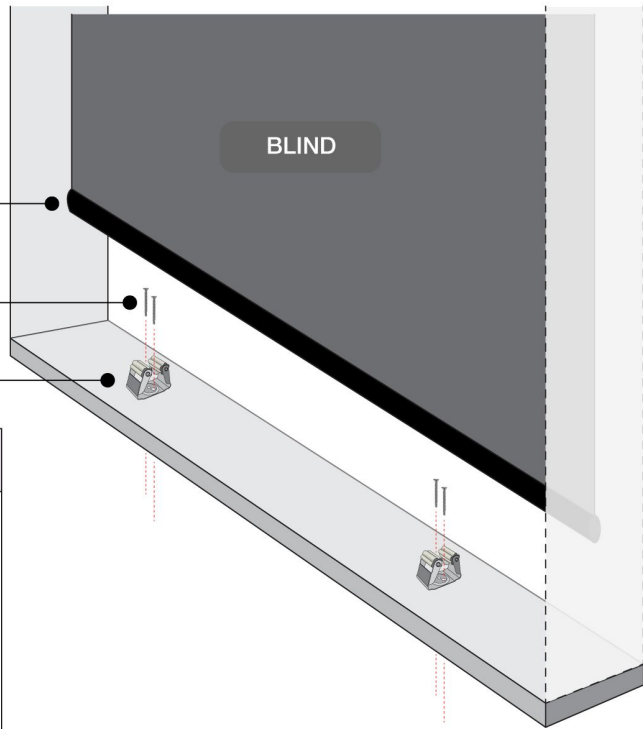

TOOLS

- PENCIL
- TAPE MEASURE
- SCREW DRIVER
- DRILL / BIT

IMAGE	SIZE

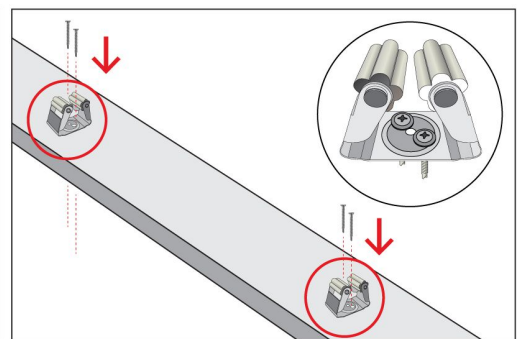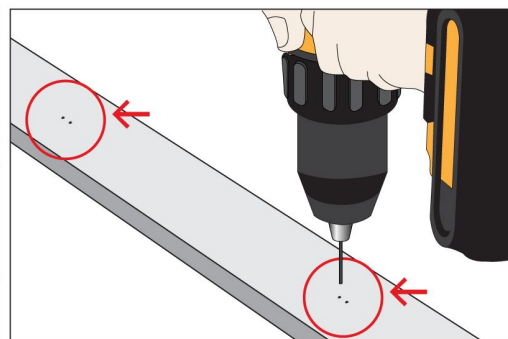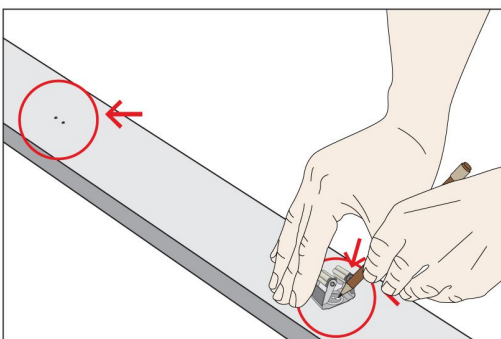

1 PLACE THE HOLDERS AT THE BOTTOM OF THE WINDOW FRAME. USE A PENCIL TO MARK THE LOCATIONS FOR EACH SCREW. DRILL THE HOLES.

2 SCREW DOWN ON TO THE WINDOW FRAME



3 CLIP THE WINDOW BLINDS GENTLY INTO THE HOLDER