



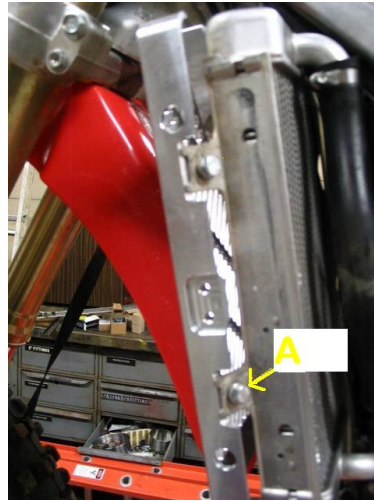

Honda CRF250,450R/X Radiator Guards installation instructions

1. Remove side shrouds.
2. Remove stock louvers. Remove stock bolts from radiators. Remove lower “clip” nut from lower outside radiator tab.
3. Install radiator guards on radiators, using provided hardware. (as shown in picture). Start both inside and outside bolts, than tighten all four bolts (this will align the outside radiator tabs).

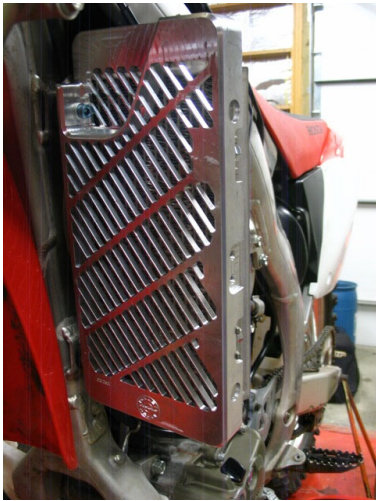

4. Remove lower outside bolt “A” (shown in pic). The tapped hole in the guard will be used to mount the side shrouds.
5. Re-install your radiator shrouds and your install is complete.

If you have any questions or comments on installation, call Chad at 816-695-3784