


Drill a hole here with supplied 1/4" bit using the templet guide.

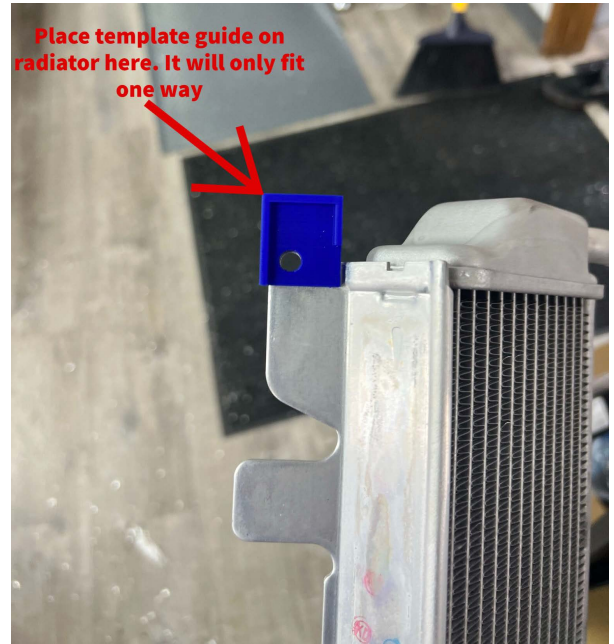

Place template guide on radiator here. It will only fit one way

1. Remove shroud bolts to access radiator
2. Remove OEM radiator guards and OEM bolts
3. Use the template guide and bit provided to drill a hole for the necessary mounting.
4. Install Bullet Proof Designs radiator guards
5. Reinstall shroud bolts