

# INSTALLATION INSTRUCTIONS

MADE IN  
USA



# MOUNTAINS<sup>2</sup>METAL



@MOUNTAINS2METAL

***Rear Cargo Tailgate***  
***2021+ Ford Bronco (4-door)***


# TOOLS AND STUFF

## Required tools:

- a. 5mm allen key
- b. 10mm socket

## Included parts:

- A. Cargo Tailgate Assembly
- B. Back Panel with 2 thumb screws
- C. (8) M8 x 50mm socket head bolts

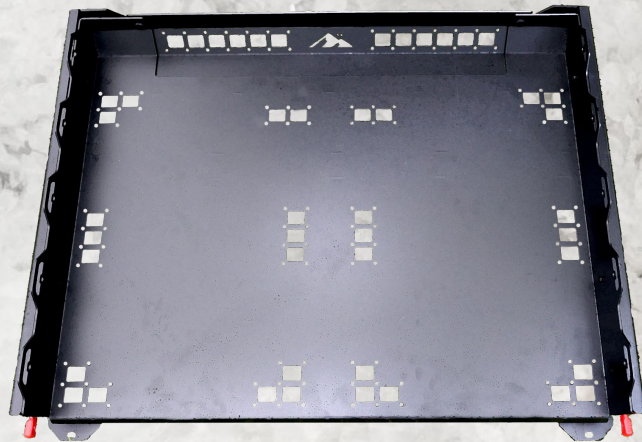

# INSTALL

1. Remove all 4 cargo mounting hooks located on the floorboard of the cargo area. The small plastic cover of the hook can be slightly pinched and pulled up and out of the way. Then revealing two bolts that can be removed with a 10mm socket.
2. Have your tailgate open as far as possible for the installation of the cargo tailgate.
3. With a friend, slide the cargo tailgate into place over top of the 4 mounting points where the cargo hooks were originally.
4. Thread the supplied hardware into place on all 8 locations. (2 bolts where each hook was installed). We would recommend to thread all 8 bolts a little more than hand tight but do not tighten until after then next step. If you are having trouble lining up the mounting holes, use a long screw driver to stick through an open hole and maneuver the cargo tailgate making other holes visible to thread a bolt in place.
5. With all 8 bolts installed but not tightened, slide the cargo tailgate in and out several times. This will align the slides accordingly. If there is any resistance, loosen the bolts up and repeat this step until the cargo tailgate slides freely.
6. Tighten up all bolts to finish the installation.

Thank you for supporting Mountains2Metal!

# FIGURES

