



INSTRUCTIONS

In-the-Box:

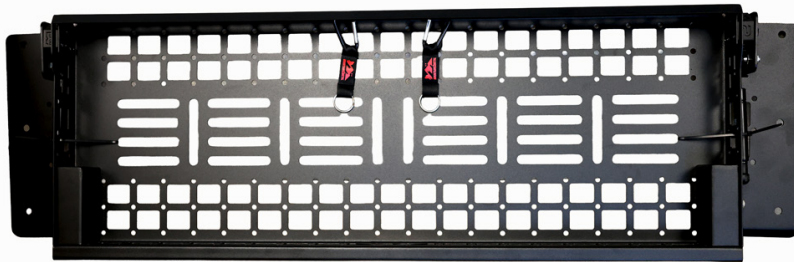

(1) Flip-up Cargo Tray

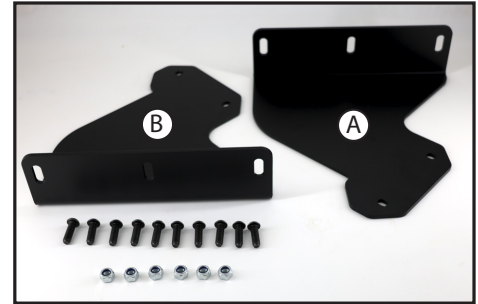

(2) Left and Right mounting Brackets

(3) 10 - M8 Bolts and 6 - M8 Nuts

Tools Needed:



1



Step 1: Access and Locate Bolt Holes on the Roll Bar

Remove the plastic panel on the underside of the roll bar to expose the threaded bolt holes.

Note: Some factory bolts may already be installed in these holes. If so, remove them before continuing.

2



Step 2: Install Driver Side Cargo Tray Bracket (A)

Position Cargo Tray Bracket (A) over the bolt holes located in Step 1. Secure using the supplied M8 bolts. Use an M4 hex key for installation.

Important: Do not fully tighten the bolts at this stage—leave them slightly loose to allow for adjustment.



JL-RCST REAR CARGO TRAY (JL) 2018+

I N S T R U C T I O N S

3

Step 3: Installing Brackets

(If You Purchased Both the Attic Shelf and Cargo Tray)

Install the Attic Shelf bracket first by aligning and securely mounting it according to its installation instructions. Once it is in place, install the Cargo Tray bracket.

Note: The Attic Shelf bracket must be installed before the Cargo Tray bracket to ensure proper alignment and fit.



Cargo Tray Bracket

Step 4: Install Cargo Tray and Brackets

Install Passenger Side Cargo Bracket (B), repeating Steps 2-3. Once complete, position the Cargo Tray onto the brackets and bolt it in place using the 6-M8 bolts and nylocks. Three of these per side. Make sure all bolts are tightened securely so the tray is stable.

4



5



Step 5: Sit Back and look at your New Cargo Tray.

