



Installation Guide

(1) Pocket

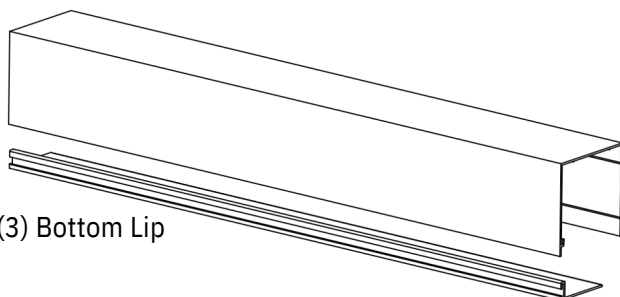

(3) Bottom Lip

(2) Pocket Endcaps (if applicable)

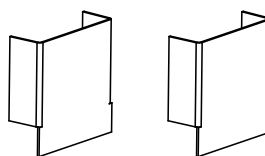

1 Mount Pocket




DANGER - Locate and lock breaker to the shade power supply in the OFF position or unplug the power plug-in transformer before doing any wiring.

Precise fitting is required for this product to ensure a perfect end result. Blinds Box must be installed level to ensure the bottom lip attaches properly and the blinds operate as they should. Pre-drill pocket to allow clearance for the wires without interfering with the bracket. Follow figure below for suggested hole locations.


Note: Hole should be large enough to allow adjustment during install without pinching the wire

Note: Cable can exit either side of the blind i.e. blinds can be made with the motor to left or right side

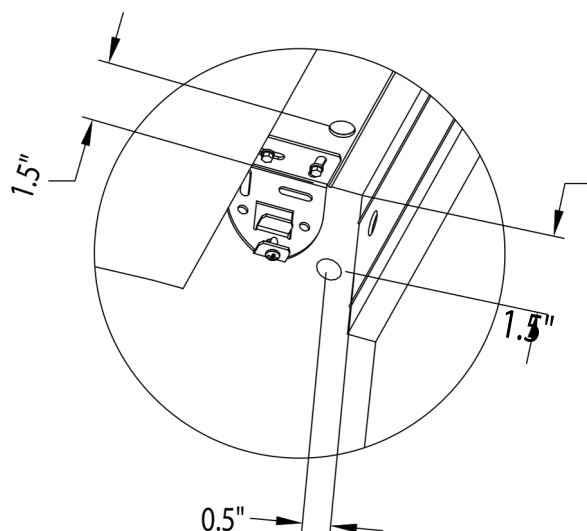


Cut box to size. Verify mounting surface is level/plumb before fitting the box.

Note: Bottom lip may rub fabric if installed with an improper tilt or may cause bottom lip to fall.

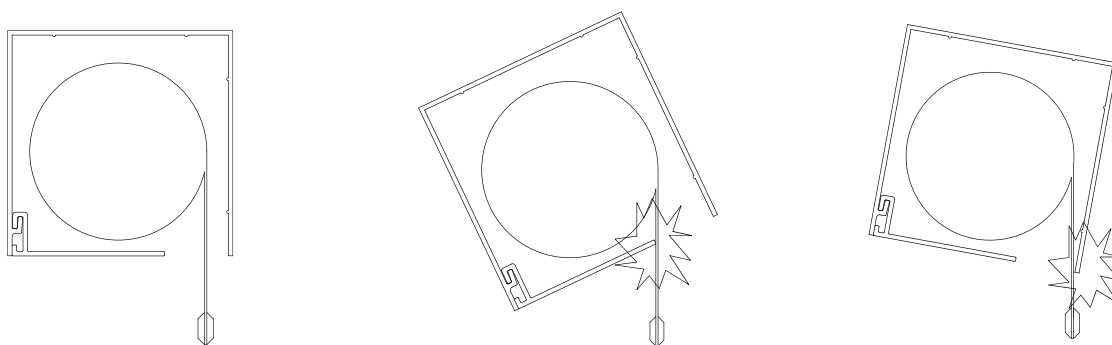

The bottom lip can be located to front or back of the unit. Ensure the gap for the blinds to drop through is proud of any window or door handles so that the blinds do not hit on the way down.

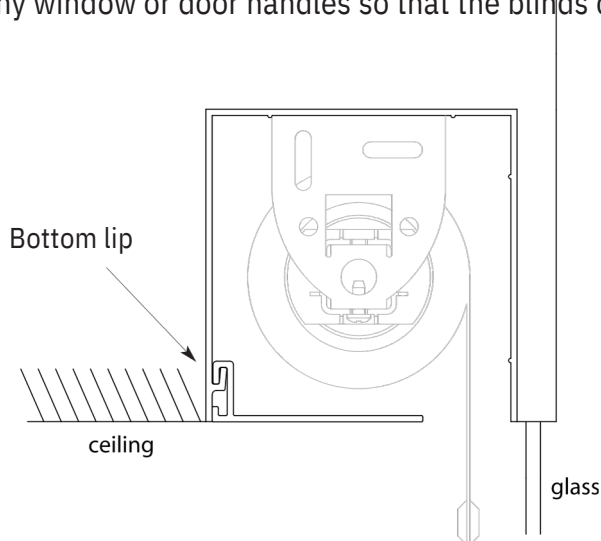


Mount the pocket using appropriate fasteners ensuring it remains level.

Note: Screws must be at least 38mm from system end to avoid interfering with mounting of the blinds brackets

Note: Be sure to pull cable from wall through the hole in pocket while mounting.

Note: The pocket should be mounted to support at least 300 lbs (136 kg).

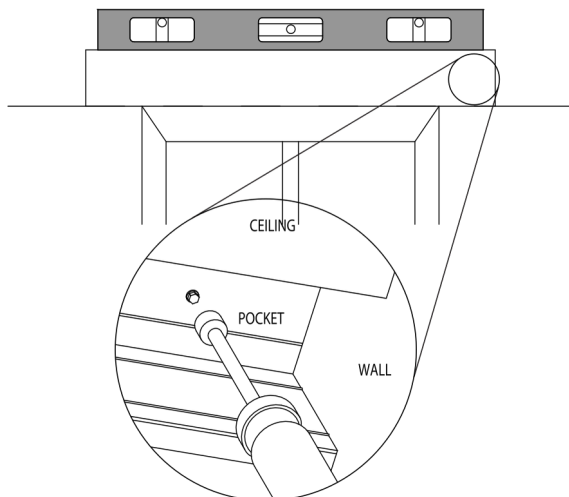

2

Test the Bottom Lip

Lift the bottom lip inside the pocket and hook it on the hanger. Pivot the flap down until it is fully seated.

