

INSTALLATION INSTRUCTIONS

MADE IN
USA



MOUNTAINS²METAL



@MOUNTAINS2METAL

Dash Accessory Mount
2021+ Ford Bronco


TOOLS AND STUFF

Required tools:

- a. 4mm Allen socket or Allen key

Included parts:

- A. (1) Dash Accessory Mount (Small or Large)
- B. (1) 1/4-20 Cap Screw
- C. (1) Foam Gasket Set

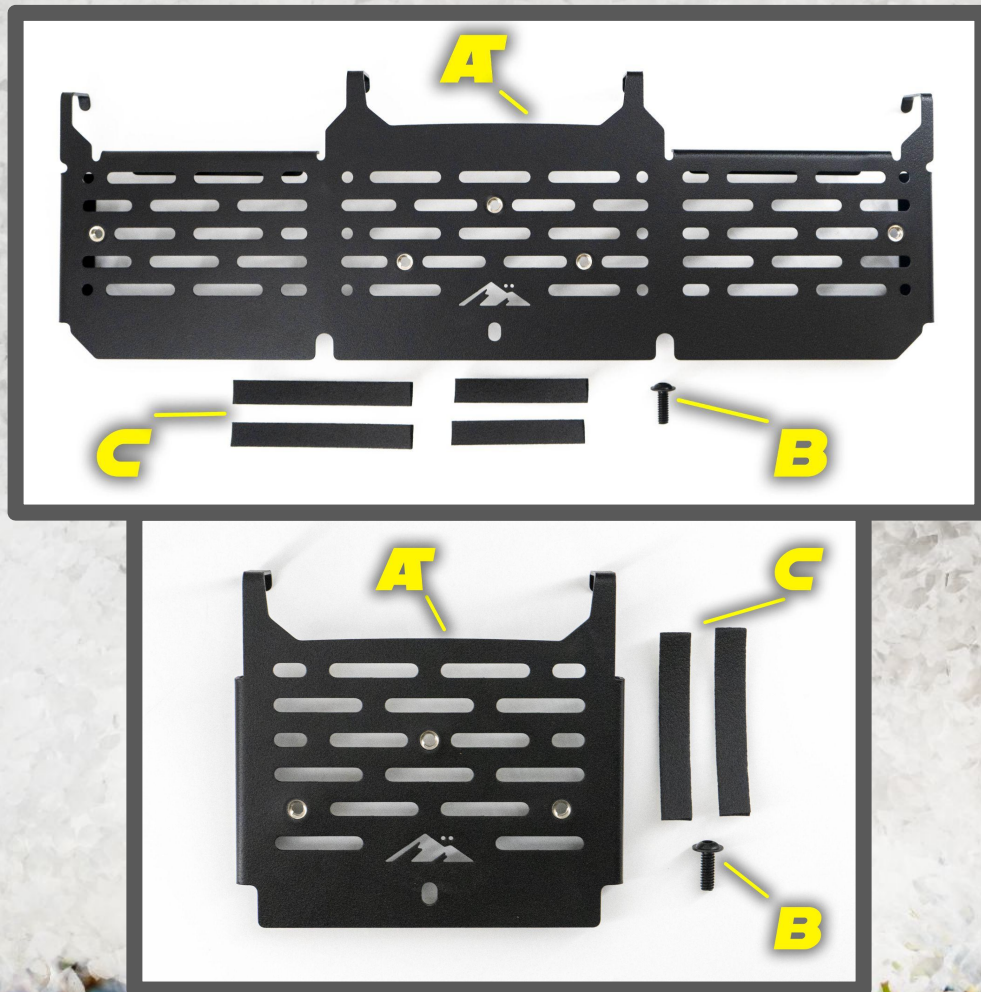

INSTALL


Small Version

1. Apply the foam gaskets to the bottom flanges by peeling the paper off and aligning.
2. Position Dash Accessory Mount at an angle as shown in (F1).
3. The tabs at the end of the two prongs hook into the defrost vents as shown in (F2).
4. Once the tabs are in place, slowly push down on the Dash Accessory Mount and line up the 1/4-20 accessory ready dash bolt location.
5. Secure the Dash Accessory Mount using the supplied (b) 1/4-20 cap screws.



Large Version

1. Apply the foam gaskets to the bottom flanges by peeling the paper off and aligning.
2. Position Dash Accessory Mount at an angle as shown in (F1).
3. The tabs at the end of the four prongs hook into the defrost vents as shown in (F2).
4. Once the tabs are in place, slowly push down on the Dash Accessory Mount and line up the 1/4-20 accessory ready dash bolt location.
5. Secure the Dash Accessory Mount using the supplied (b) 1/4-20 cap screws.

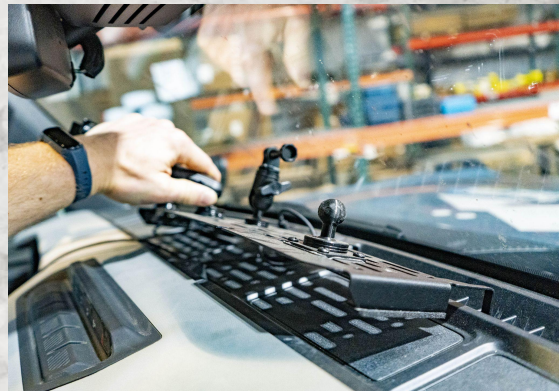

Thank you for supporting
Mountains2Metal!