

## Mountains2Metal Center Console Passenger MOLLE—Front Doors BR6CCPM



**Step 1**




**Step 2**

Step 1: Located on the lower left-hand side of the passenger footwell, remove plastic bolt cover using a plastic trim tool, screwdriver, dental pick, etc. Remove factory bolt with 7mm socket wrench from passenger side of center console.

Step 2: Remove grab handle bolts with T27 bit or use the one supplied in the Bronco Tool Kit —save bolts.



**Step 3**

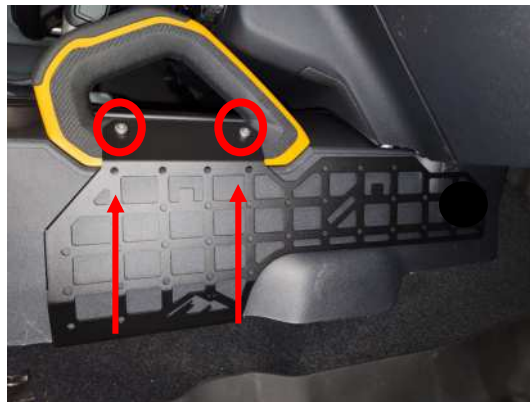

**Step 4**

Step 3: To install, lift console cover slightly away from console and hook the bottom edge of the M2M Center Console Passenger MOLLE under console cover and align with grab handle factory bolt attachment points and secure with bolts from Step 2.

Step 4: Slightly lift MOLLE panel away from console and place black spacer behind and inside the recessed opening in the console panel (Step1), in line



**Step 5**



**Step 6**

Step 5: With a 3mm hex tool, use bolt provided to attach through spacer into factory attachment point.

Step 6: Make sure all bolts are snug and the install is DONE!

