

INSTALLATION INSTRUCTIONS

MADE IN
USA



MOUNTAINS²METAL



@MOUNTAINS2METAL

Rear Cargo Molle
2021+ Ford Bronco (2-door)


TOOLS AND STUFF

Required tools:

1. 10mm socket
2. 13mm socket/wrench
3. 4mm Allen socket or Allen key
4. TP 50 Torx Plus - In Bronco Tool kit

Included parts:

- A. (1) Rear Cargo Molle Panel (Passenger or Driver)
- B. (1) Lower Panel Mount B- Goes rearmost on passenger side and behind seat on driver side
- C. (1) Lower Panel Mount C- Goes rearmost on driver side and behind seat on passenger side
- D. (1) Lower Main Support
- E. (1) Upper Main Support
- F. (1) Upper Panel Mount (Driver/Passenger)
- G. (4) ¼-20 x 1" black Oxide Stainless Steel Screws
- H. (4) M8"-18 x 1" Bolts
- I. (4) M8"-18 Locknuts

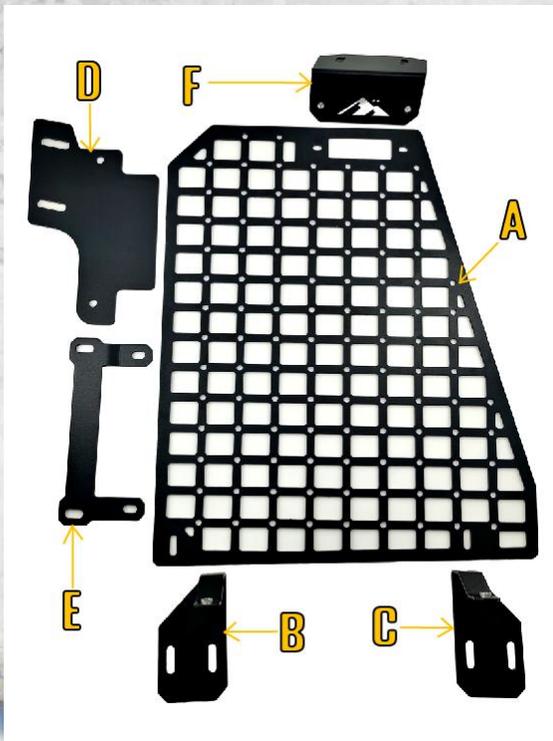


INSTALL

1. Counting from the B-Pillar, remove the 2nd and 3rd Hardtop mounting bolts. (Not the Guide Pins)
2. Slide (D) Lower Main Support between the plastic panel and the body side rail. Be sure to orient this so the curved portion is by the seatbelt. (F1) This will rest in place.
3. Slide (E) Upper Main Support between the body panel and the hardtop trying to lineup the slots with the open hardtop mounting hole locations. (F2) The 2 "tabs" should be pointing downwards towards the (D) Lower Main Support Bracket.
4. Replace the two Hard Top Mounting Bolts that were removed. Do not tighten all the way. (F3)
5. Install 2 of the supplied 5/16ths bolts and nuts into the open slots and holes on Brackets (D) and (E). These can be tightened accordingly. (F4)
6. Take (F) Upper Panel Mount and lineup the slots with the open slots on (D) Lower Main Support. (F) will be placed underneath (D). (F5) Lightly Bolt together using 2 of the supplied 5/16ths bolts and nuts. These will be tightened completely at the end of install.
7. On the cargo floor, remove the plastic tie down trim pieces. This can be done with your fingers by pinching the plastic.
8. Remove both of the hooks on the side you are installing on with the 10 mm socket. (F6)
9. Lightly lift up on the cargo flooring (F8 and F9) and place brackets (B) & (C) underneath the factory cargo carpet as shown in (F7), using the bolt locations that secure both front and rear tie-downs on the side of installation. They should be installed in the orientation as follows. For a passenger side installation put bracket (C) towards the front of the Bronco with bracket (B) towards the rear of Bronco. The opposite applies for the driver side. Replace tie-downs as shown in (F9) keeping factory tie-down bolts loose.
10. Place MOLLE Panel (A) as shown in (F10) using the 4 supplied ¼-20 black oxide stainless steel screws securing all them. (F11)
11. Secure the 2 5/16ths bolts and nuts holding the (F) Upper Molle Bracket to the (D) Lower Main Support) (F12)
12. Secure the factory tie downs and reinstall the plastic tie down trim pieces.
13. Attach all of your gear to the Molle Panel, take pictures, post and tag @Mountains2Metal.

Thank you for supporting Mountains2Metal!

FIGURES

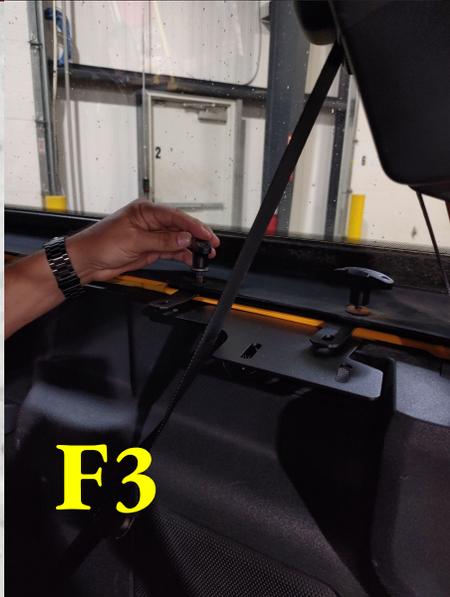

FIGURES

