



MPX & PCC TRIGGER INSTALLATION INSTRUCTIONS

MPX, AR PCC, & AR PCC 2 STAGE

If you have a polymer lower receiver, please contact technicalsupport@timneyusa.com and we will send you a metal plate to install under your trigger to avoid damage.

Thank you for purchasing this Timney Trigger. It has been designed and manufactured to provide you with a lifetime of dependable service. Each trigger is hand tested and calibrated on a rifle action before leaving our factory. Please read these instructions fully before you begin installing the trigger, you will be glad you did.


TOOLS NEEDED



Straight Punch



5/64" Hex key

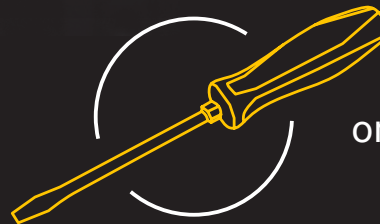

or



Flat head or hex key to remove pistol grip

TIMNEY TRIGGER GUARANTEE

Every possible care has been taken in the design and construction of this trigger. If any issues arise with your Timney trigger under conditions of normal use and service, necessary repairs, including parts and labor, will be made at no added charge to the purchaser, providing our inspection reveals parts were not damaged through accident, misuse, abuse, or other causes beyond our control. We neither assume nor imply any oral or statutory warranties, and we neither assume nor authorize any person to assume us for any obligation or liability in connection with this trigger. Repairs or disassembly of this trigger in any manner without specific authorization voids this guarantee.

LEGAL DISCLAIMER

Failure to comply with our installation instructions and improper installation of this trigger can result in severe bodily harm or death. Only install this trigger on the make and model of the firearm specified. Always ensure your firearm is unloaded and safe before installing this trigger. By purchasing this product, you agree to our disclaimer.

Visit www.timneytriggers.com/disclaimer to read the full disclaimer.

**IF YOU HAVE TROUBLE CHECK OUT TROUBLESHOOTING STEPS ON
WWW.TIMNEYTRIGGERS.COM OR CONTACT US**

Need help with your install? Contact our customer service team via phone or email for assistance.

Phone: 623-223-1111 Fax: 623-223-1112 Support: technicalsupport@timneyusa.com

INSTALLATION INSTRUCTIONS

- 1** Before beginning work on any firearm make sure to remove the ammunition source and double check to ensure the chamber is empty.
- 2** To separate the upper and lower receiver, press out the two takedown pins.
- 3** From the bottom there should be a large screw visible inside the pistol grip, either a hex key or flathead screw. Take out this screw to remove the grip. **Be careful not to lose the safety spring and detent!**
- 4** Use your straight punch to push out the pins holding your stock trigger assembly in place.
- 5** Remove safety selector.
- 6** With the bridge and plate attached, install your new Timney Trigger into the lower receiver. Reinstall the safety selector, then insert triggers pins.

NOTE: the bridge and plate **must** be used for installation.
- 7** **Tighten the pre-installed setscrews in the trigger housing located under each hammer spring leg.**
- 8** Reinstall the safety detent, safety spring and pistol grip.
- 9** Reinstall the upper receiver on the lower receiver.
- 10** Perform a function check and enjoy your new Timney Trigger.



IF YOU HAVE TROUBLE CHECK OUT TROUBLESHOOTING STEPS ON WWW.TIMNEYTRIGGERS.COM OR CONTACT US

Need help with your install? Contact our customer service team via email or phone for assistance.

Phone: 623-223-1111 **Fax:** 623-223-1112 **Support:** technicalsupport@timneyusa.com

